


## PLUGIN 391-583 :NEW TRASDATA

### DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

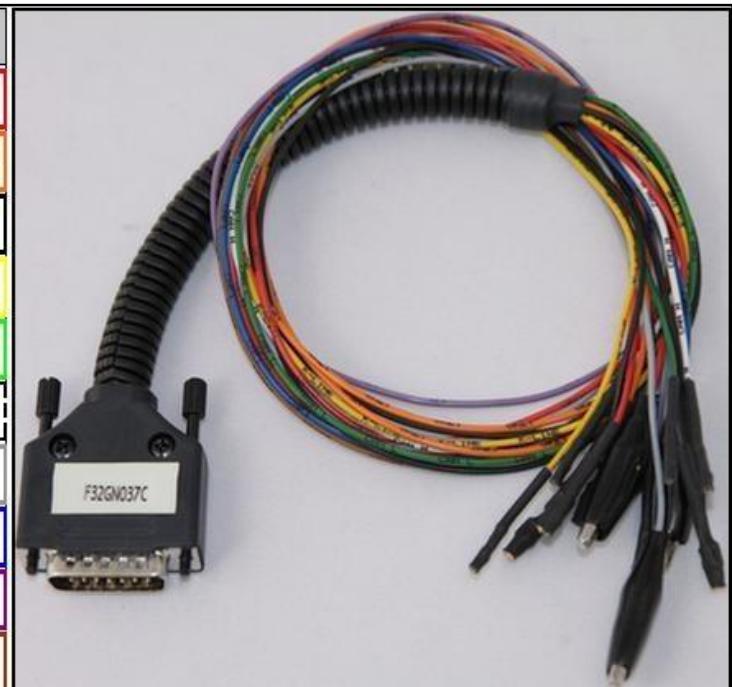

### ECU CONNECTOR

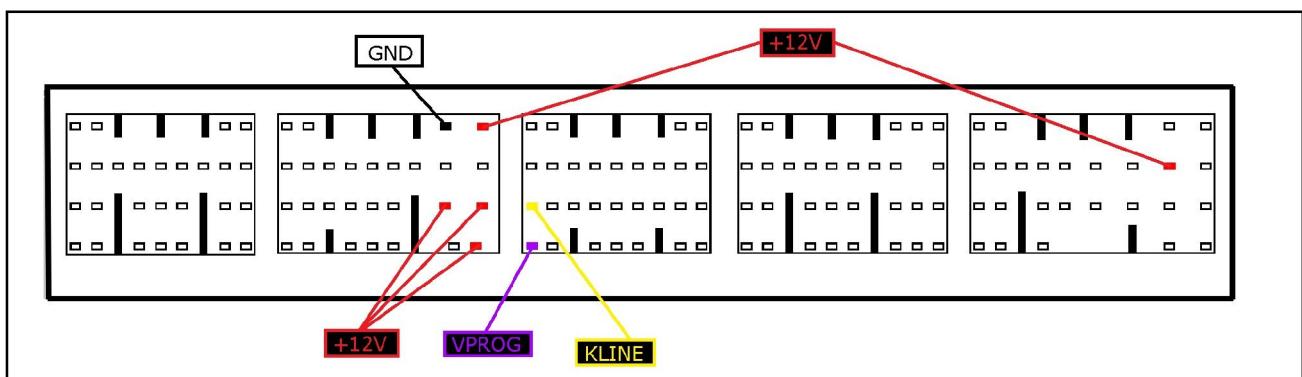

To the 5 power feeding pins you can connect both wires red and orange, they both have 12 Volt signal.

**WARNING:** after placing back the ECU in the vehicle it is possible that the vehicle has lost some self adaptive parameters (e.g. idle RPM). With warm engine temperature is then necessary to rev up to full scale 3 times and check that the car runs fine.