



## ECU DELPHI MT80 - TC1766 Internal Flash

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver:

**BOOT MODE TRICORE SAK TC1766**

Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure. Use the driver:




**BOOT MODE TRICORE SAK TC1766**

**RED: +12V**

**BLACK: Ground**

**BLUE: Can-H**

**ORANGE : Can-L**

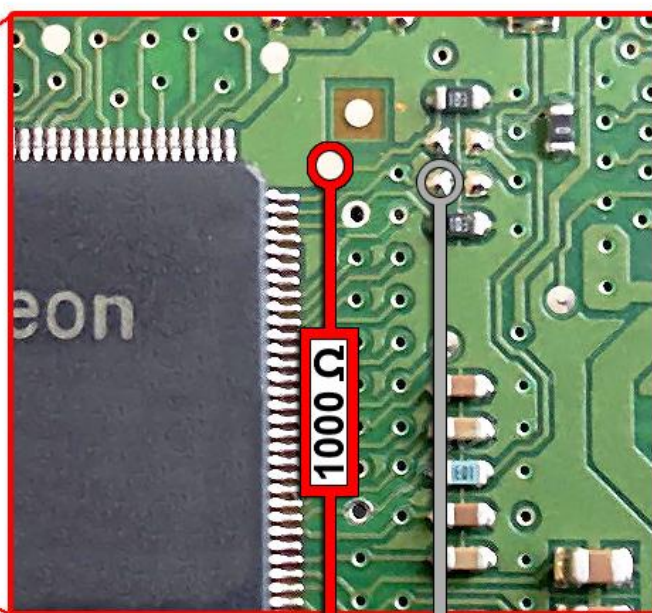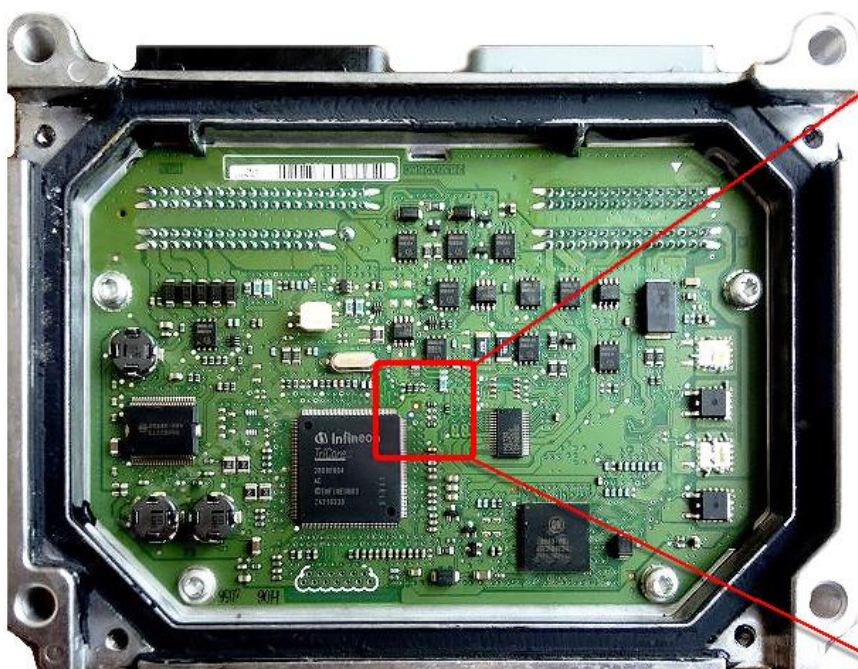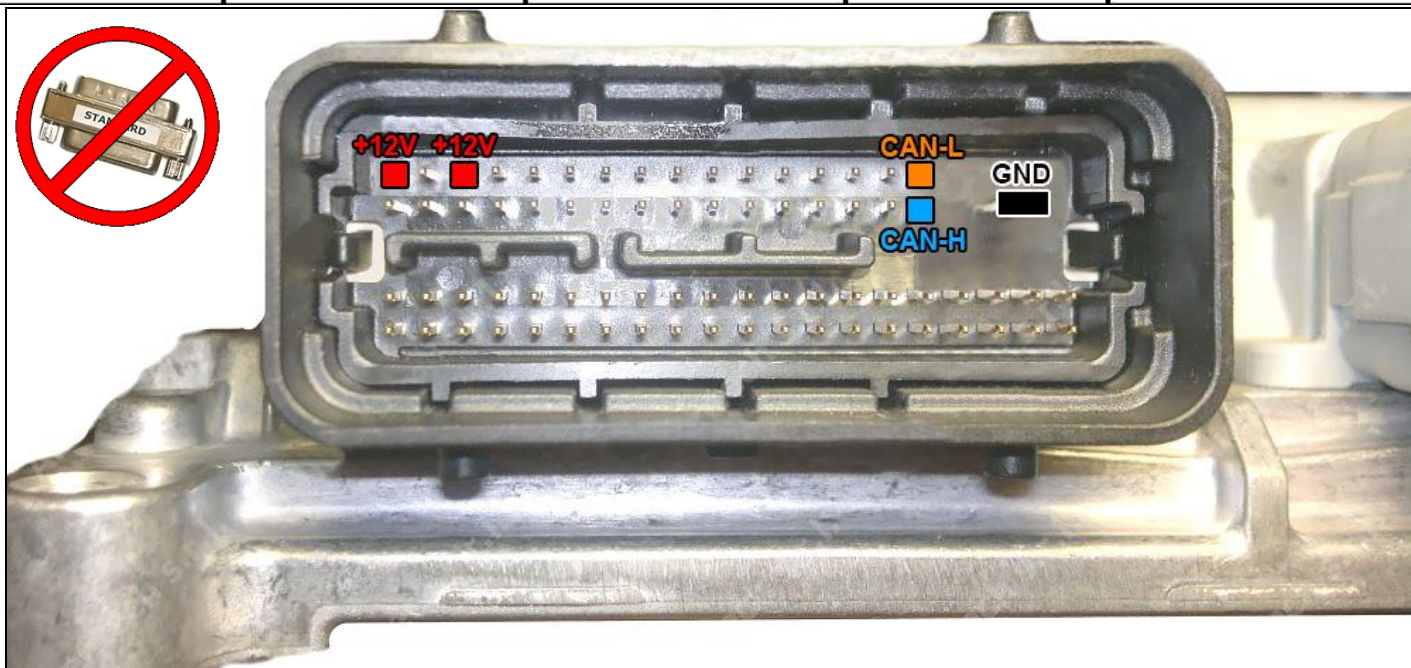

**Give  
+3,3V**

Gray wire of the  
Tricore cable