 


Автоматическая коробка Передач (АКПП) Полная привод (4WD) Блокировка Дифференциала

Электросхема автоматической коробки передач АКПП для Ford Focus ST 2007

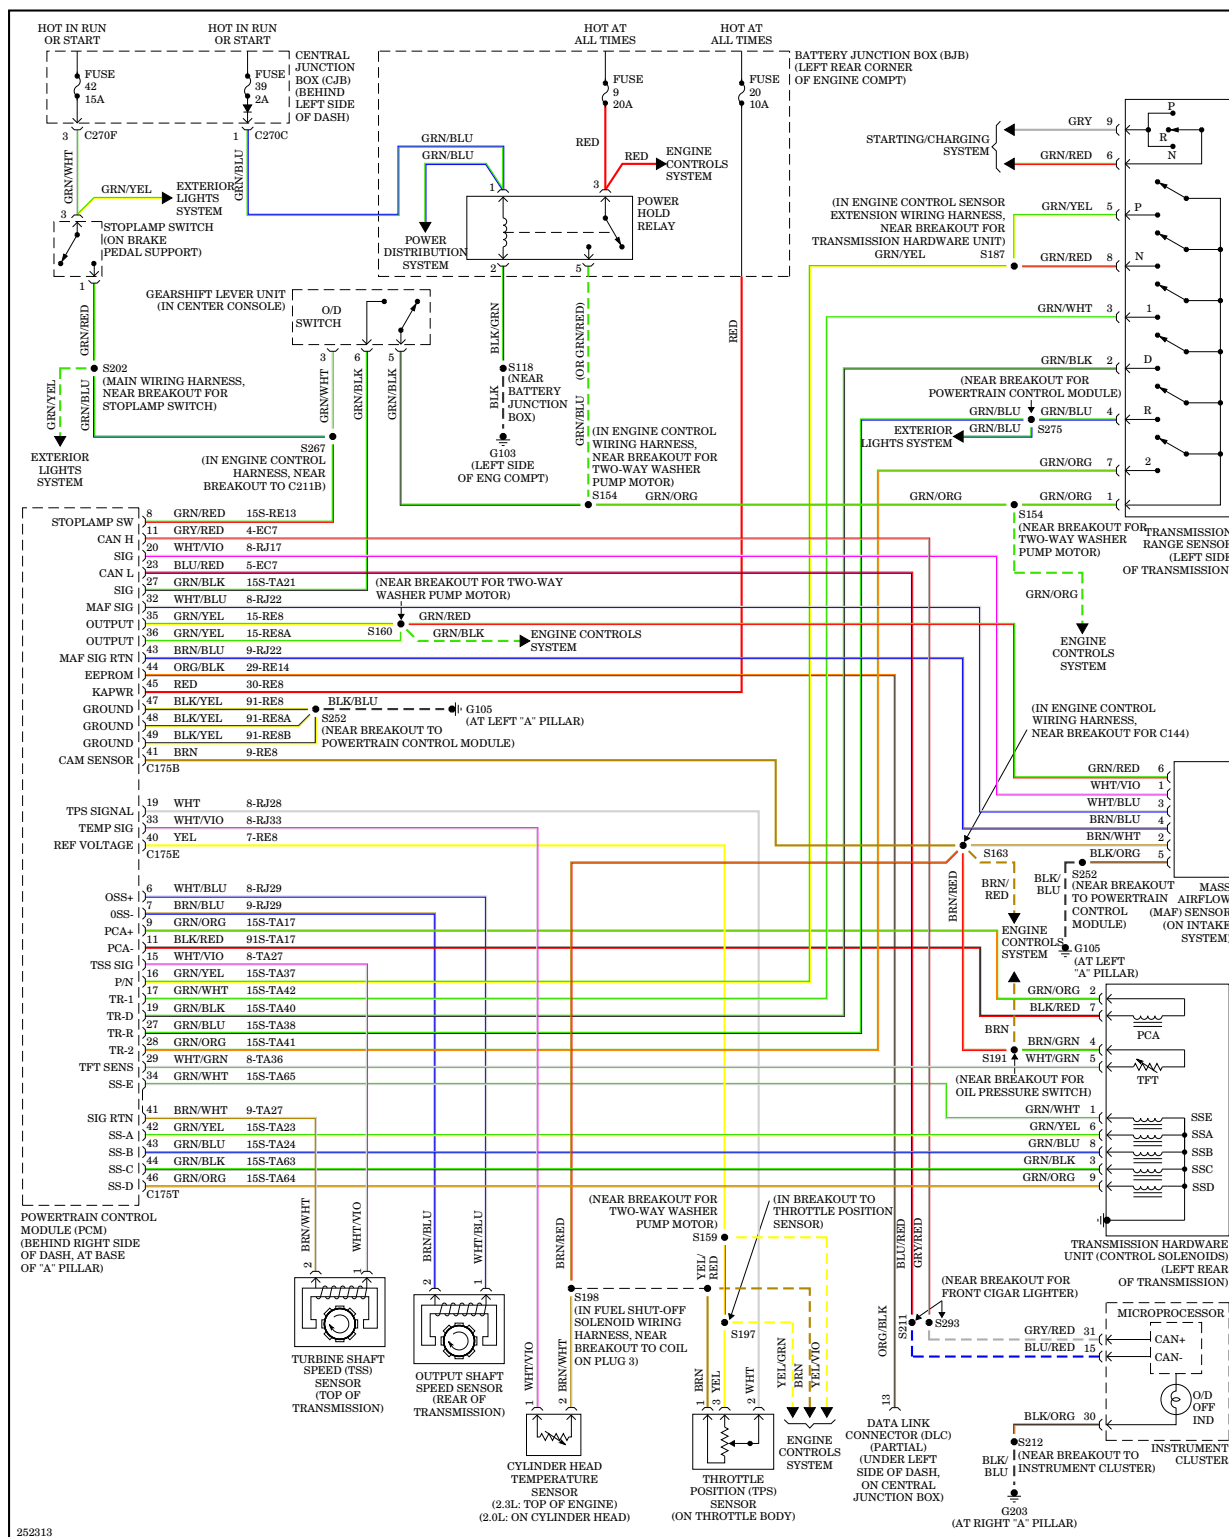

Электросхема автоматической коробки передач АКПП для Ford Focus ST 2007 - Список элементов:

 
- (in breakout to throttle position sensor)
- (in engine control sensor extension wiring harness, near breakout for transmission hardware unit) s187
- (in engine control wiring harness, near breakout for c144)

- (in engine control wiring harness, near breakout for two-way washer pump motor) s154
- (main wiring harness, near breakout for stoplamp switch)
- (near breakout for front cigar lighter)
- (near breakout for oil pressure switch)
- (near breakout for powertrain control module)
- (near breakout for two-way washer pump motor)
- (near breakout for two-way washer pump motor) s159
- (near breakout to powertrain control module)
- 0ss-
- 15-re8
- 15-re8a
- 15s-re13
- 15s-ta17
- 15s-ta21
- 15s-ta23
- 15s-ta24
- 15s-ta37
- 15s-ta38
- 15s-ta40
- 15s-ta41
- 15s-ta42
- 15s-ta63
- 15s-ta64
- 15s-ta65
- 29-re14
- 30-re8
- 4-ec7
- 5-ec7
- 7-re8
- 8-rj17
- 8-rj22
- 8-rj28
- 8-rj29
- 8-rj33
- 8-ta27
- 8-ta36
- 9-re8
- 9-rj22
- 9-rj29
- 9-ta27
- 91-re8
- 91-re8a
- 91-re8b
- 91s-ta17
- Battery junction box (bjb) (left rear corner of engine compt)
- Battery junction box)
- C175b
- C175e
- C175t
- Cam sensor
- Can h
- Can l
- Can+
- Can-
- Central junction box (cjb) (behind left side of dash)
- Cylinder head temperature sensor (2.3l: top of engine) (2.0l: on cylinder head)
- Data link connector (dlc) (partial) (under left side of dash, on central junction box)
- Eeprom
- Engine controls system
- Exterior lights system
- Fuse 10a
- Fuse 15a
- Fuse 20a
- Fuse 2a
- G103 (left side of eng compt)
- G105 (at left "a" pillar)
- G203 (at right "a" pillar)
- Gearshift lever unit (in center console)
- Ground
- Hot at all times
- Hot in run or start
- Instrument cluster
- Kapwr
- Maf sig
- Maf sig rtn

- Mass airflow (maf) sensor (on intake system)
- Microprocessor
- O/d off ind
- O/d switch
- Oss+
- Output
- Output shaft speed sensor (rear of transmission)
- P/n
- Pca
- Pca+
- Pca-
- Power distribution system
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Red
- Ref voltage
- S154 (near breakout for two-way washer pump motor)
- S160
- S163
- S191
- S197
- S211
- S252 (near breakout to powertrain control module)
- S267 (in engine control harness, near breakout to c211b)
- S275
- S293
- Sig
- Sig rtn
- Ss-a
- Ss-b
- Ss-c
- Ss-d
- Ss-e
- Ssa
- Ssb
- Ssc
- Ssd
- Sse
- Starting/charging system
- Stoplamp sw
- Stoplamp switch (on brake pedal support)
- Temp sig
- Tft
- Tft sens
- Throttle position (tps) sensor (on throttle body)
- Tps signal
- Tr-1
- Tr-2
- Tr-d
- Tr-r
- Transmission hardware unit (control solenoids) (left rear of transmission)
- Transmission range sensor (left side of transmission)
- Tss sig
- Turbine shaft speed (tss) sensor (top of transmission)

БАГАЖНИК ЗАДНЯЯ ДВЕРЬ ЛЮЧОК ТОПЛИВНОГО БАКА

Электросхема открывания багажника и лючка топливного бака, 3 и 5 дверей для Ford Focus ST 2007

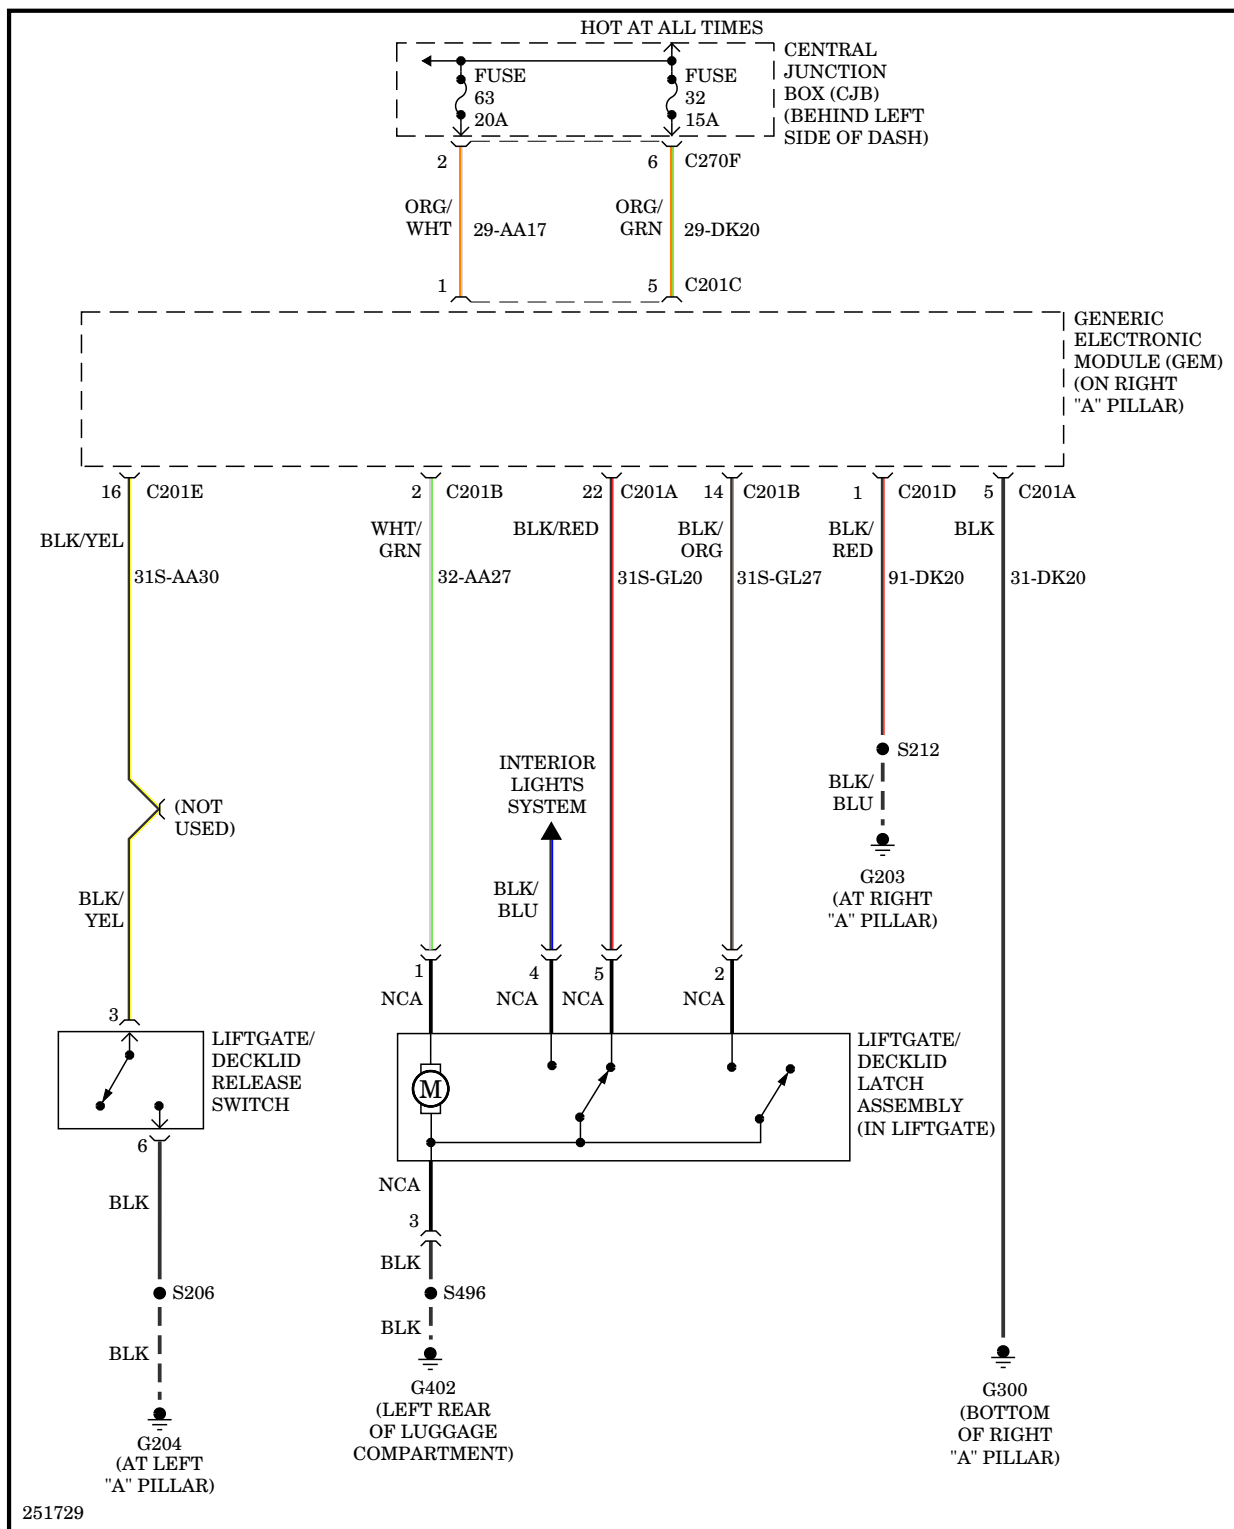


Электросхема открывания багажника и лючка топливного бака, 3 и 5 дверей для Ford Focus ST 2007 - Список элементов:

- (not used)
- 31-dk20
- 31s-aa30
- 31s-gl20
- 31s-gl27
- 32-aa27
- 91-dk20
- C201a
- C201b

- C201c
- C201d
- C201e
- C270f
- Central junction box (cjb) (behind left side of dash)
- Fuse 15a
- Fuse 20a
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (left rear of luggage compartment)
- Generic electronic module (gem) (on right "a" pillar)
- Hot at all times
- Interior lights system
- Liftgate/ decklid latch assembly (in liftgate)
- Liftgate/ decklid release switch
- Nca
- S206
- S212
- S496

 Электросхема открывания багажника и лючка топливного бака, седан для Ford Focus ST 2007

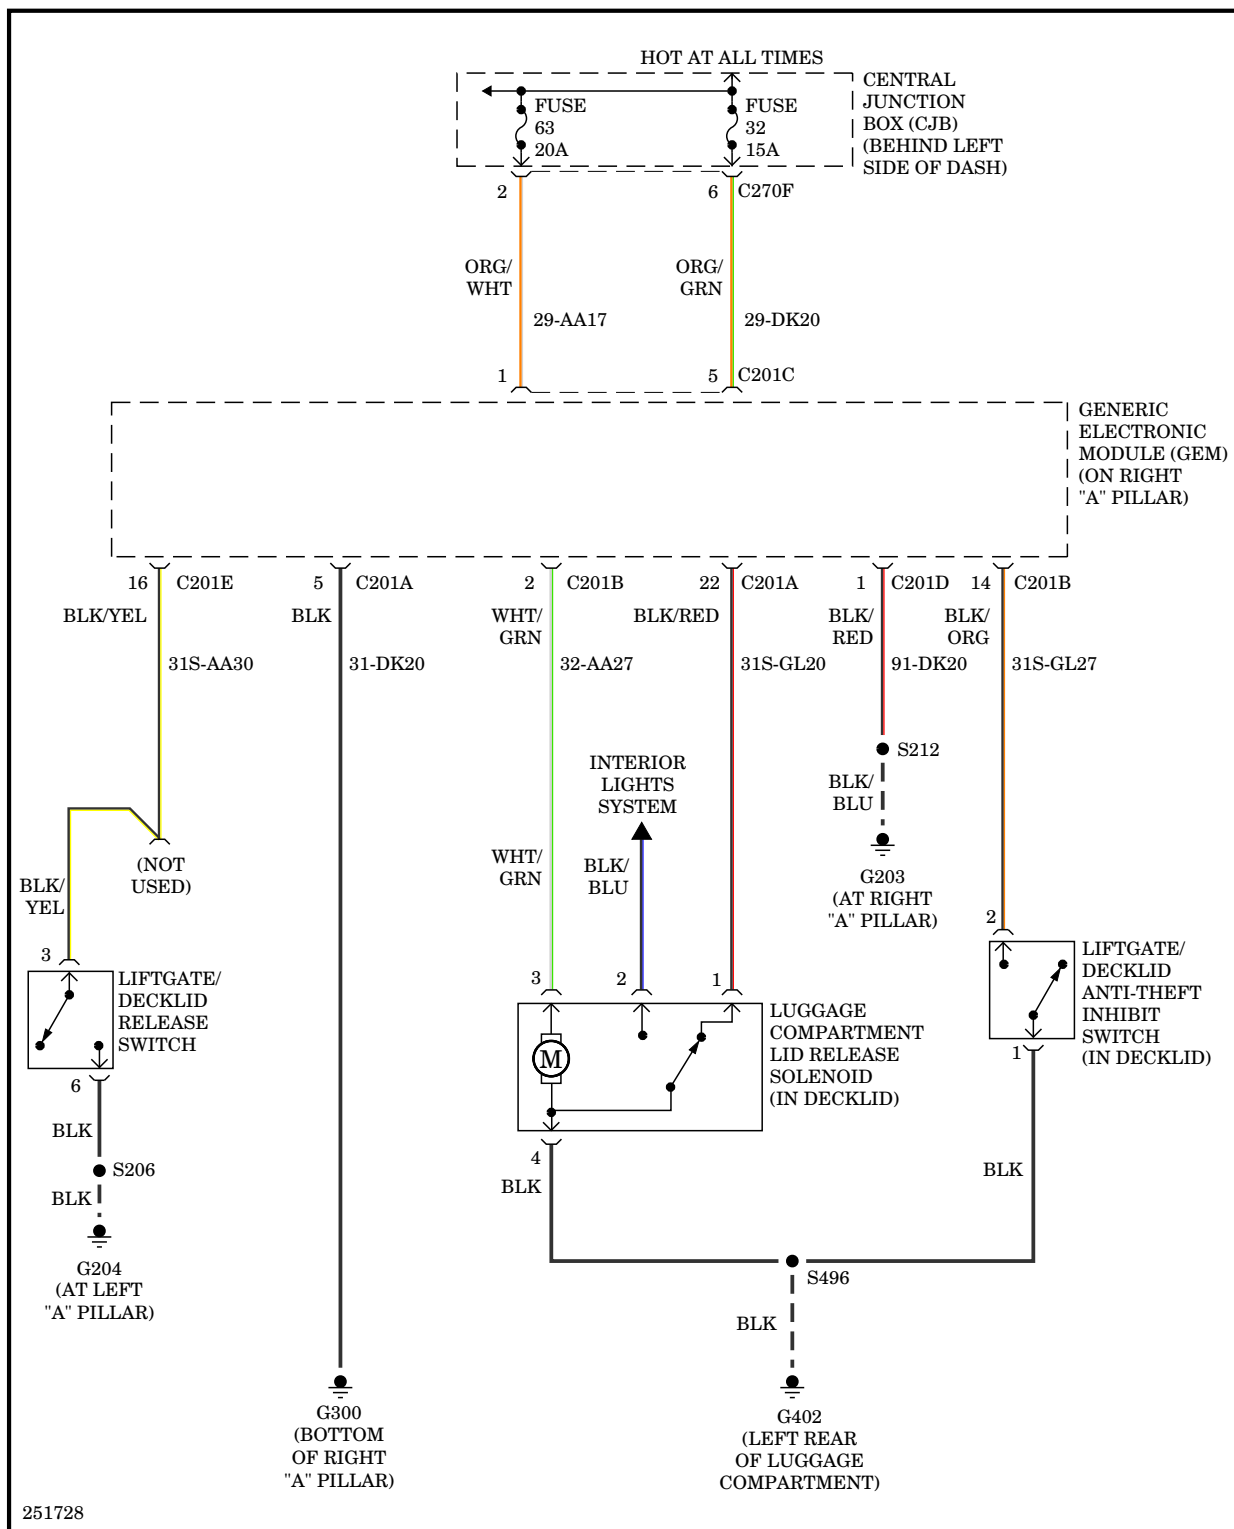


Электросхема открывания багажника и лючка топливного бака, седан для Ford Focus ST 2007 - Список элементов:

- (not used)
- 29-aa17
- 29-dk20
- 31-dk20
- 31s-aa30
- 31s-gl20
- 31s-gl27
- 32-aa27
- 91-dk20

- C201a
- C201b
- C201c
- C201d
- C201e
- C270f
- Central junction box (cjb) (behind left side of dash)
- Fuse 15a
- Fuse 20a
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (left rear of luggage compartment)
- Generic electronic module (gem) (on right "a" pillar)
- Hot at all times
- Interior lights system
- Liftgate/ decklid anti-theft inhibit switch (in decklid)
- Liftgate/ decklid release switch
- Luggage compartment lid release solenoid (in decklid)
- S206
- S212
- S496

 Электросхема открывания багажника и лючка топливного бака, Универсал для Ford Focus ST 2007

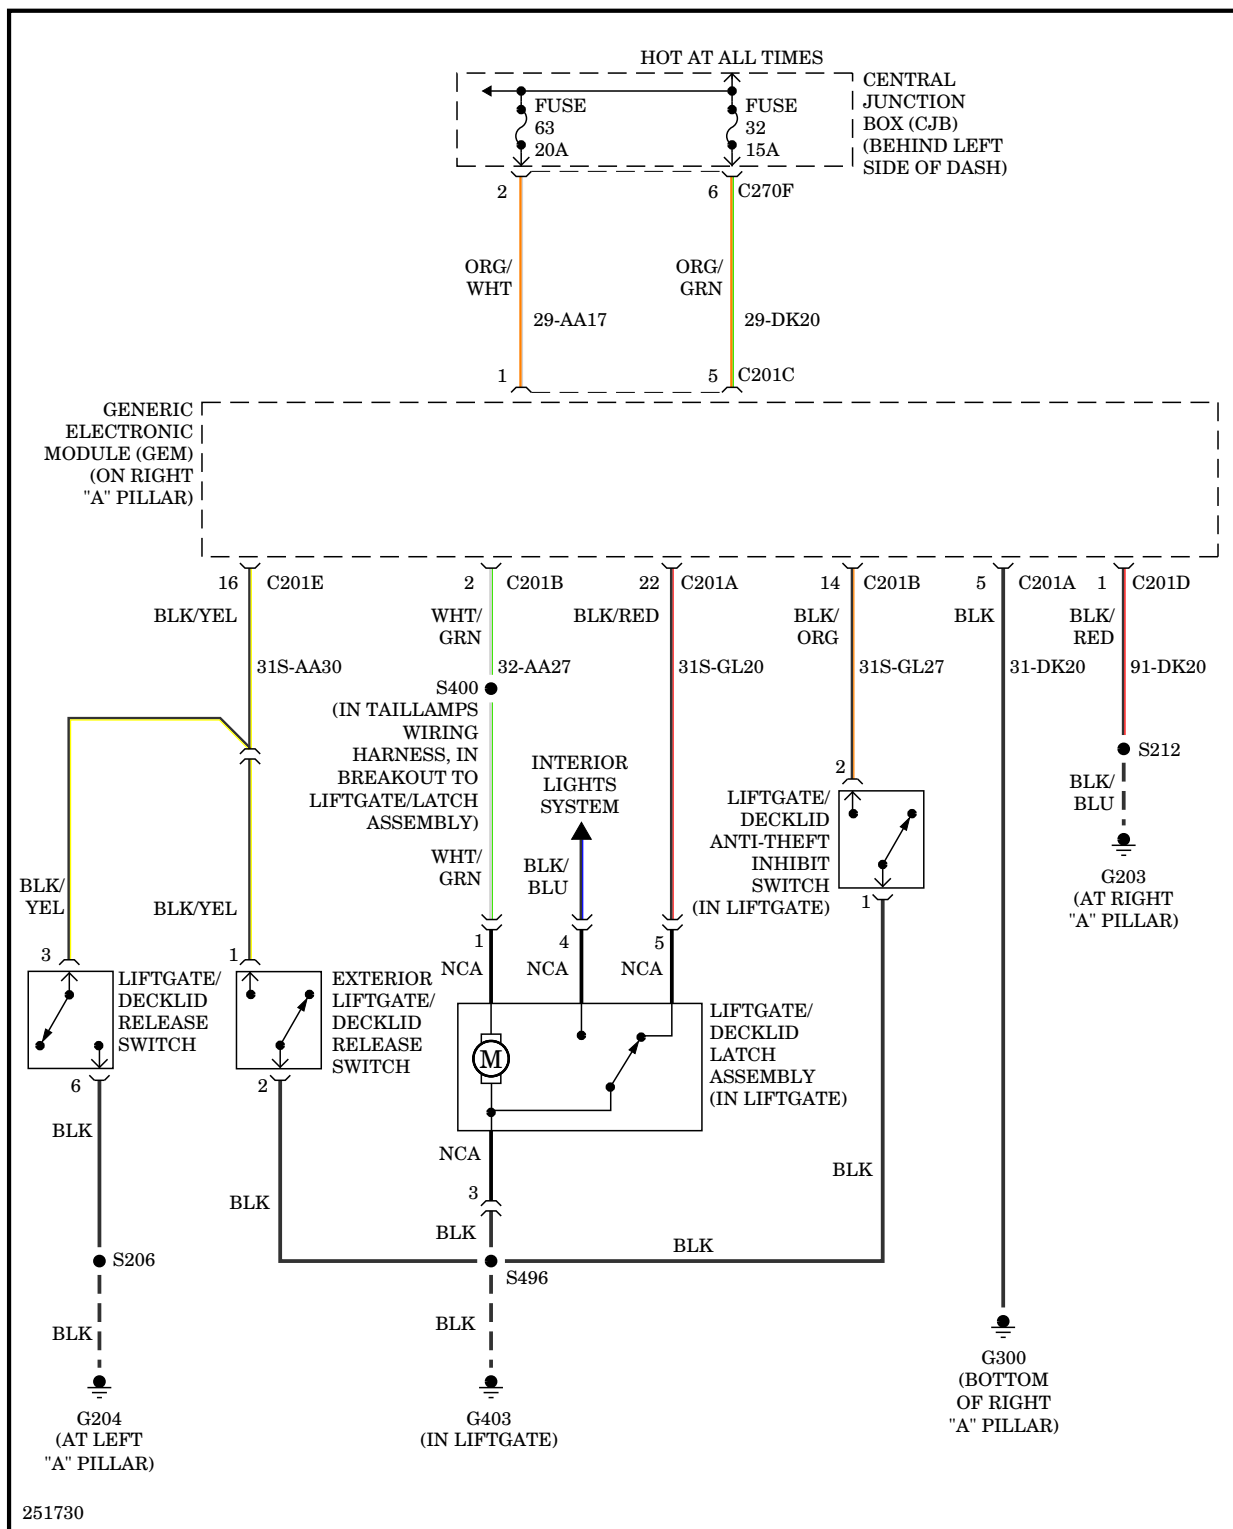


Электросхема открывания багажника и лючка топливного бака, Универсал для Ford Focus ST 2007 - Список элементов:

- 29-aa17
- 29-dk20
- 31-dk20
- 31s-aa30
- 31s-gl20
- 31s-gl27
- 32-aa27
- 91-dk20
- C201a

- C201b
- C201c
- C201d
- C201e
- C270f
- Central junction box (cjb) (behind left side of dash)
- Exterior liftgate/ decklid release switch
- Fuse 15a
- Fuse 20a
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G403 (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- Hot at all times
- Interior lights system
- Liftgate/ decklid anti-theft inhibit switch (in liftgate)
- Liftgate/ decklid latch assembly (in liftgate)
- Liftgate/ decklid release switch
- Nca
- S206
- S212
- S400 (in taillamps wiring harness, in breakout to liftgate/latch assembly)
- S496

БЛОК ПРЕДОХРАНИТЕЛЕЙ И РЕЛЕ

 Электросхема блока предохранителей и реле (1 из 4) для Ford Focus ST 2007

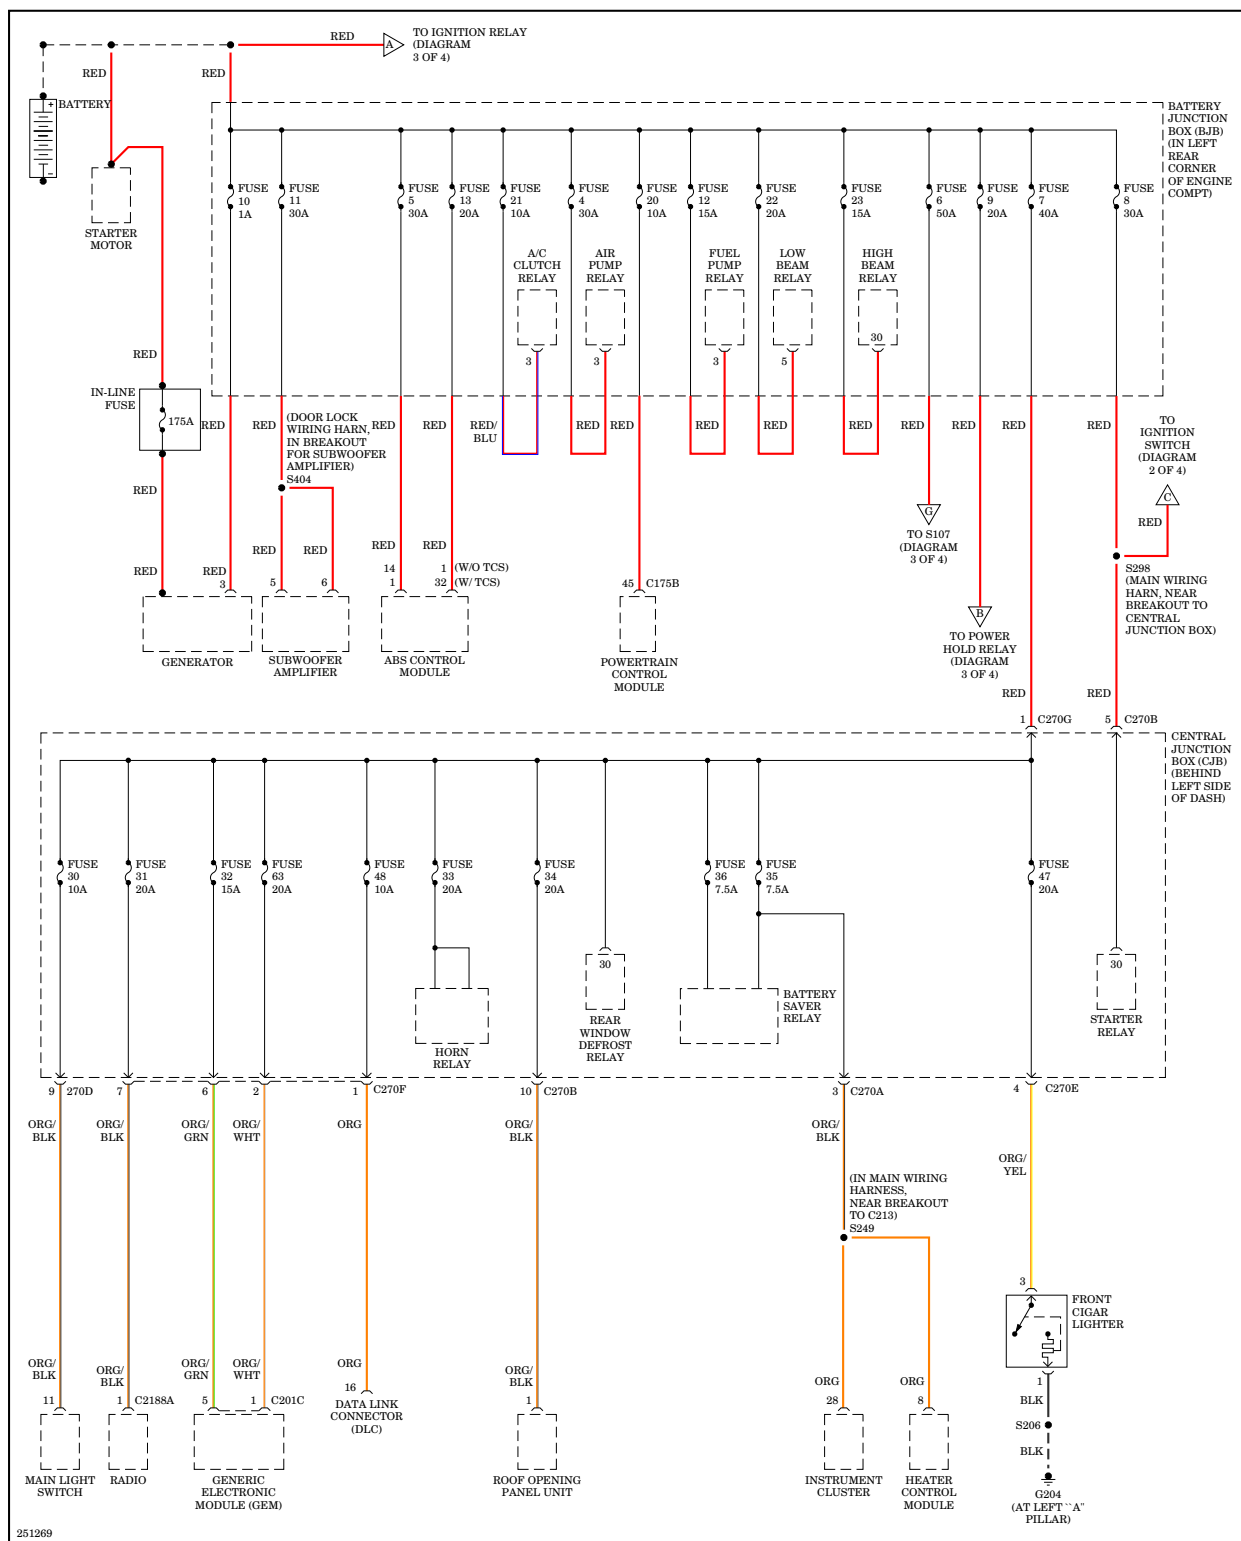


Электросхема блока предохранителей и реле (1 из 4) для Ford Focus ST 2007 - Список элементов:

- (door lock wiring harn, in breakout for subwoofer amplifier) s404
- (in main wiring harness, near breakout to c213) s249
- (w/ tcs)
- (w/o tcs)
- 175a
- 270d
- A/c clutch relay
- Abs control module
- Air pump relay
- Battery

- Battery junction box (bjb) (in left rear corner of engine compt)
- Battery saver relay
- C175b
- C201c
- C2188a
- C270a
- C270b
- C270e
- C270f
- C270g
- Central junction box (cjb) (behind left side of dash)
- Data link connector (dlc)
- Front cigar lighter
- Fuel pump relay
- Fuse 10a
- Fuse 15a
- Fuse 1a
- Fuse 20a
- Fuse 30a
- Fuse 40a
- Fuse 50a
- Fuse 7.5a
- G204 (at left ``a" pillar)
- Generator
- Generic electronic module (gem)
- Heater control module
- High beam relay
- Horn relay
- In-line fuse
- Instrument cluster
- Low beam relay
- Main light switch
- Powertrain control module
- Radio
- Rear window defrost relay
- Red
- Roof opening panel unit
- S206
- S298 (main wiring harn, near breakout to central junction box)
- Starter motor
- Starter relay
- Subwoofer amplifier
- To ignition relay (diagram 3 of 4)
- To ignition switch (diagram 2 of 4)
- To power hold relay (diagram 3 of 4)
- To s107 (diagram 3 of 4)

 Электросхема блока предохранителей и реле (2 из 4) для Ford Focus ST 2007

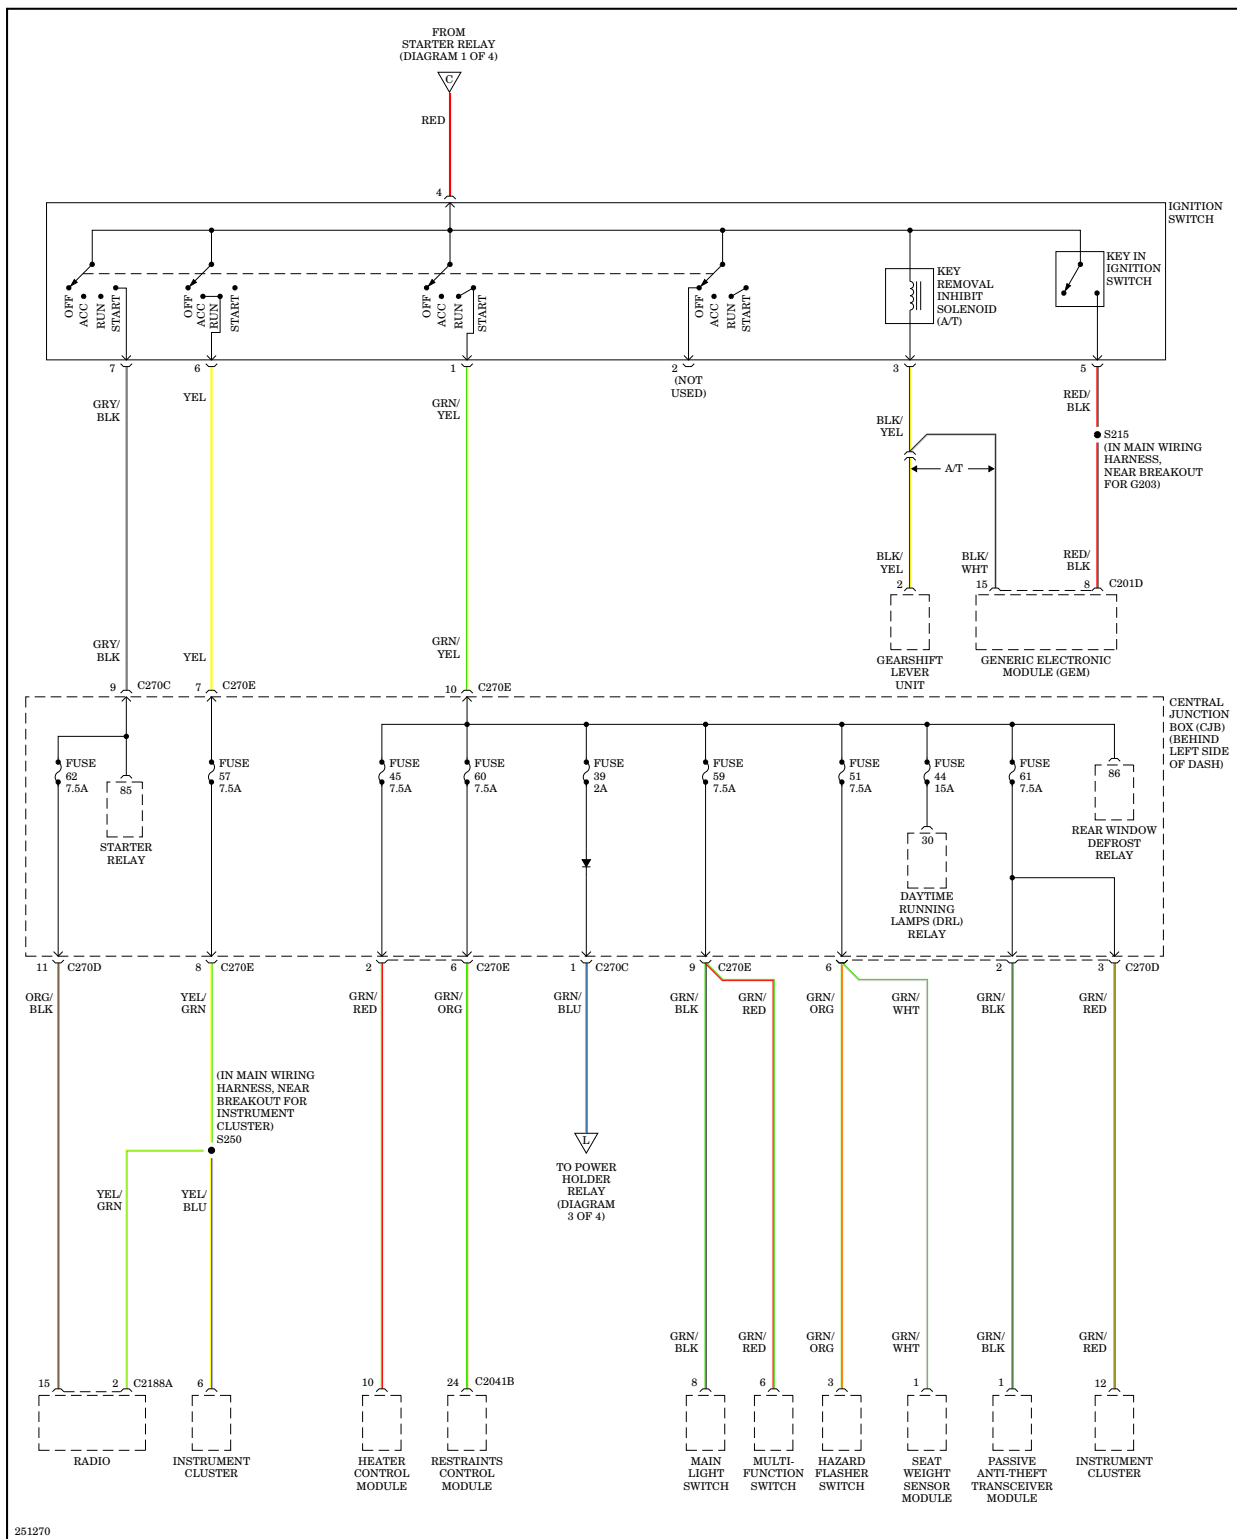


Электросхема блока предохранителей и реле (2 из 4) для Ford Focus ST 2007 - Список элементов:

- (in main wiring harness, near breakout for instrument cluster) s250
- (not used)
- A/t
- Acc
- C201d
- C2041b
- C2188a
- C270c
- C270d
- C270e

- Central junction box (cjb) (behind left side of dash)
- Daytime running lamps (drl) relay
- From starter relay (diagram 1 of 4)
- Fuse 15a
- Fuse 2a
- Fuse 7.5a
- Gearshift lever unit
- Generic electronic module (gem)
- Hazard flasher switch
- Heater control module
- Ignition switch
- Instrument cluster
- Key in ignition switch
- Key removal inhibit solenoid (a/t)
- Main light switch
- Multi- function switch
- Off
- Passive anti-theft transceiver module
- Radio
- Rear window defrost relay
- Red
- Restraints control module
- Run
- Run acc
- S215 (in main wiring harness, near breakout for g203)
- Seat weight sensor module
- Start
- Starter relay
- To power holder relay (diagram 3 of 4)

 Электросхема блока предохранителей и реле (3 из 4) для Ford Focus ST 2007

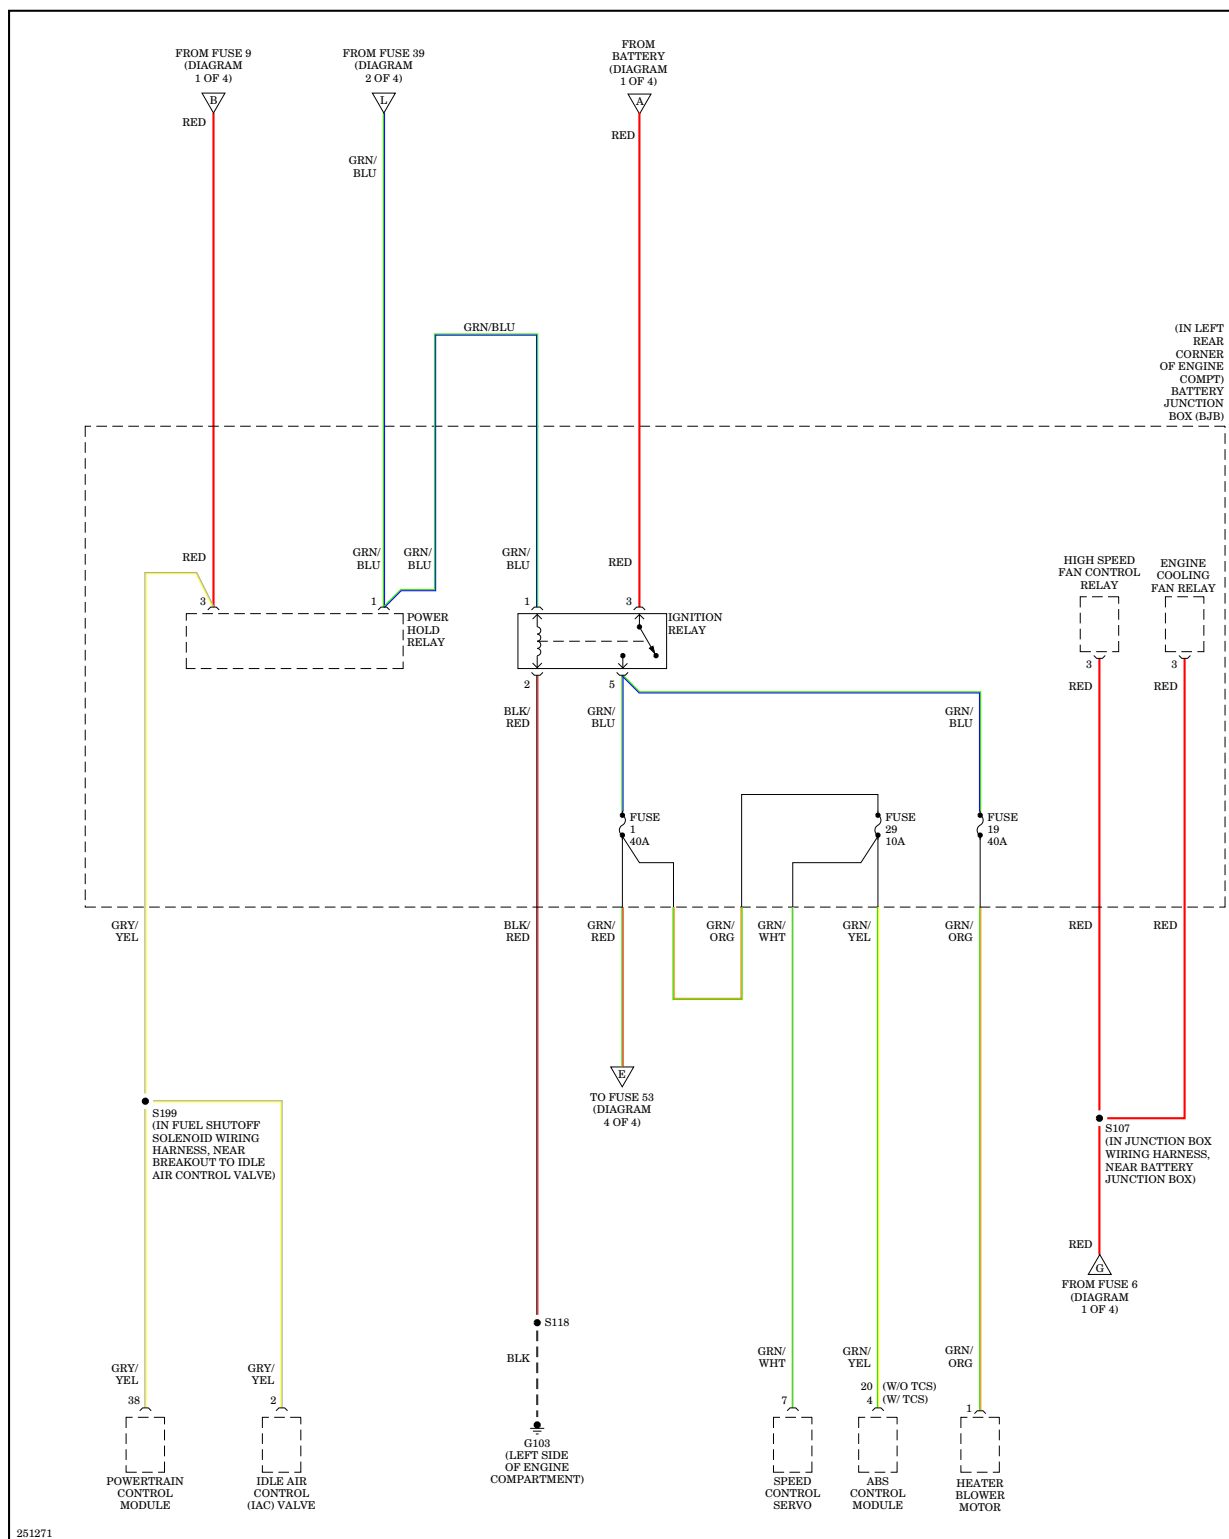


Электросхема блока предохранителей и реле (3 из 4) для Ford Focus ST 2007 - Список элементов:

- (in left rear corner of engine compt) battery junction box (bjb)
- (w/o tcs) (w/ tcs)
- Abs control module
- Engine cooling fan relay
- From battery (diagram 1 of 4)
- From fuse 39 (diagram 2 of 4)
- From fuse 6 (diagram 1 of 4)
- From fuse 9 (diagram 1 of 4)
- Fuse 10a
- Fuse 40a

- G103 (left side of engine compartment)
- Heater blower motor
- High speed fan control relay
- Idle air control (iac) valve
- Ignition relay
- Power hold relay
- Powertrain control module
- Red
- S107 (in junction box wiring harness, near battery junction box)
- S118
- S199 (in fuel shutoff solenoid wiring harness, near breakout to idle air control valve)
- Speed control servo
- To fuse 53 (diagram 4 of 4)

 Электросхема блока предохранителей и реле (4 из 4) для Ford Focus ST 2007

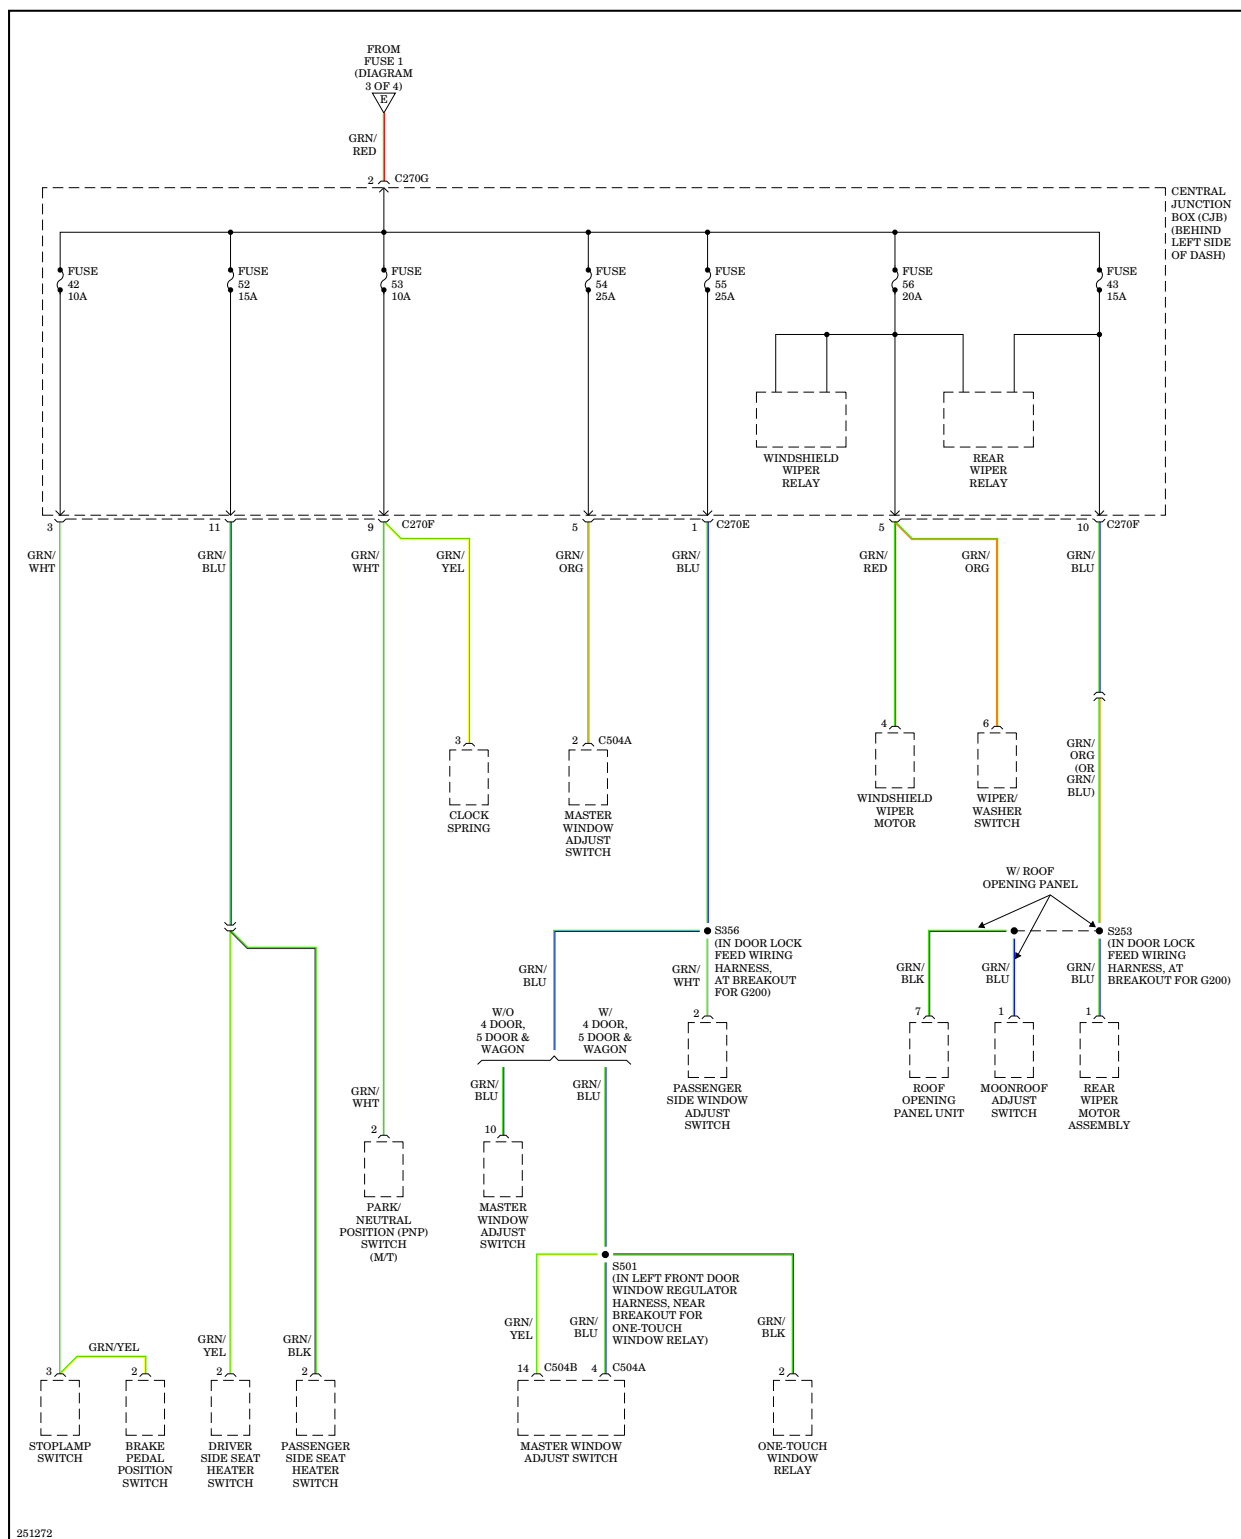


Электросхема блока предохранителей и реле (4 из 4) для Ford Focus ST 2007 - Список элементов:

- Brake pedal position switch
- C270e
- C270f
- C270g
- C504a
- C504b
- Central junction box (cjb) (behind left side of dash)
- Clock spring
- Driver side seat heater switch
- From fuse 1 (diagram 3 of 4)

- Fuse 10a
- Fuse 15a
- Fuse 20a
- Fuse 25a
- Master window adjust switch
- Moonroof adjust switch
- One-touch window relay
- Park/ neutral position (pnp) switch (m/t)
- Passenger side seat heater switch
- Passenger side window adjust switch
- Rear wiper motor assembly
- Rear wiper relay
- Roof opening panel unit
- S253 (in door lock feed wiring harness, at breakout for g200)
- S356 (in door lock feed wiring harness, at breakout for g200)
- S501 (in left front door window regulator harness, near breakout for one-touch window relay)
- Stoplamp switch
- W/ 4 door, 5 door & wagon
- W/ roof opening panel
- W/o 4 door, 5 door & wagon
- Windshield wiper motor
- Windshield wiper relay
- Wiper/ washer switch

БЛОКИ УПРАВЛЕНИЯ КУЗОВОМ

 Электросхема блоков управления кузовом (1 из 2) для Ford Focus ST 2007

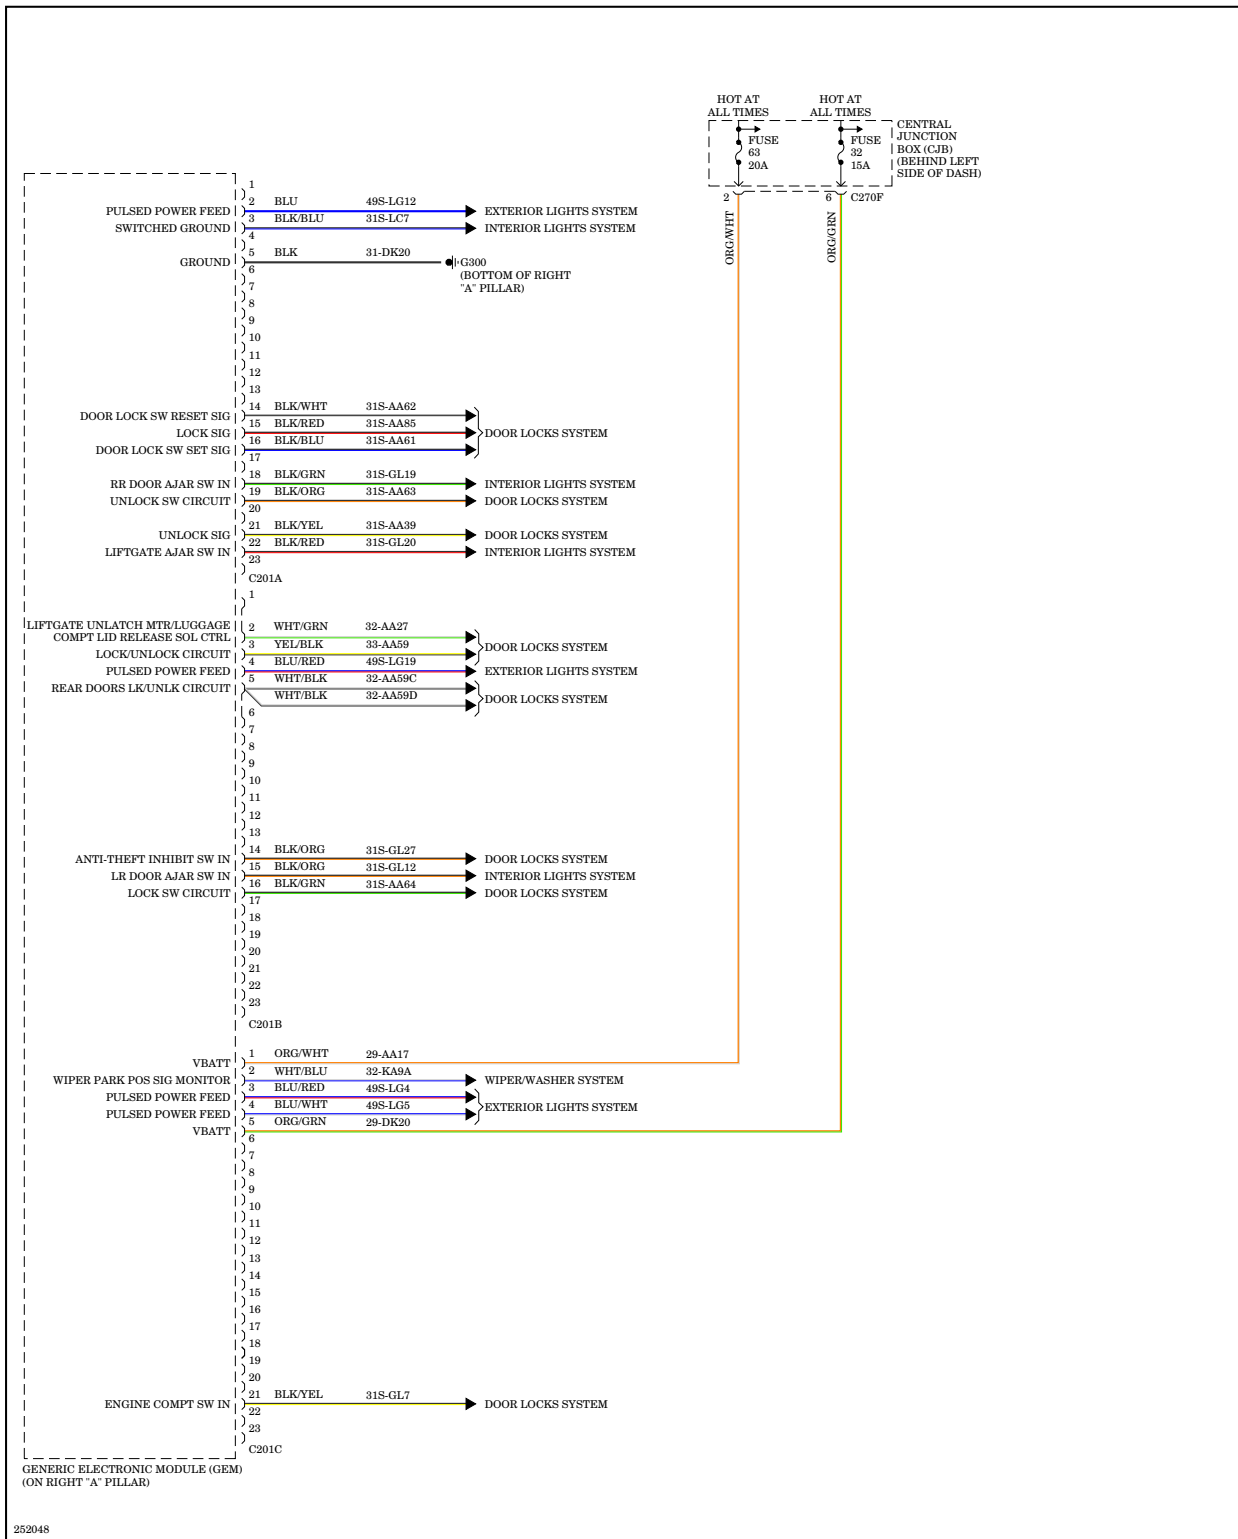


Электросхема блоков управления кузовом (1 из 2) для Ford Focus ST 2007 - Список элементов:

- 29-aa17
- 29-dk20
- 31-dk20
- 31s-aa39
- 31s-aa61
- 31s-aa62
- 31s-aa63
- 31s-aa64
- 31s-aa85
- 31s-gl12

- 31s-gl19
- 31s-gl20
- 31s-gl27
- 31s-gl7
- 31s-lc7
- 32-aa27
- 32-aa59c
- 32-aa59d
- 32-ka9a
- 33-aa59
- 49s-lg12
- 49s-lg19
- 49s-lg4
- 49s-lg5
- Anti-theft inhibit sw in
- C201a
- C201b
- C201c
- C270f
- Central junction box (cjb) (behind left side of dash)
- Door lock sw reset sig
- Door lock sw set sig
- Door locks system
- Engine compt sw in
- Exterior lights system
- Fuse 15a
- Fuse 20a
- G300 (bottom of right "a" pillar)
- Generic electronic module (gem) (on right "a" pillar)
- Ground
- Hot at all times
- Interior lights system
- Liftgate ajar sw in
- Liftgate unlatch mtr/luggage compt lid release sol ctrl
- Lock sig
- Lock sw circuit
- Lock/unlock circuit
- Lr door ajar sw in
- Pulsed power feed
- Rear doors lk/unlk circuit
- Rr door ajar sw in
- Switched ground
- Unlock sig
- Unlock sw circuit
- Vbatt
- Wiper park pos sig monitor
- Wiper/washer system

 Электросхема блоков управления кузовом (2 из 2) для Ford Focus ST 2007

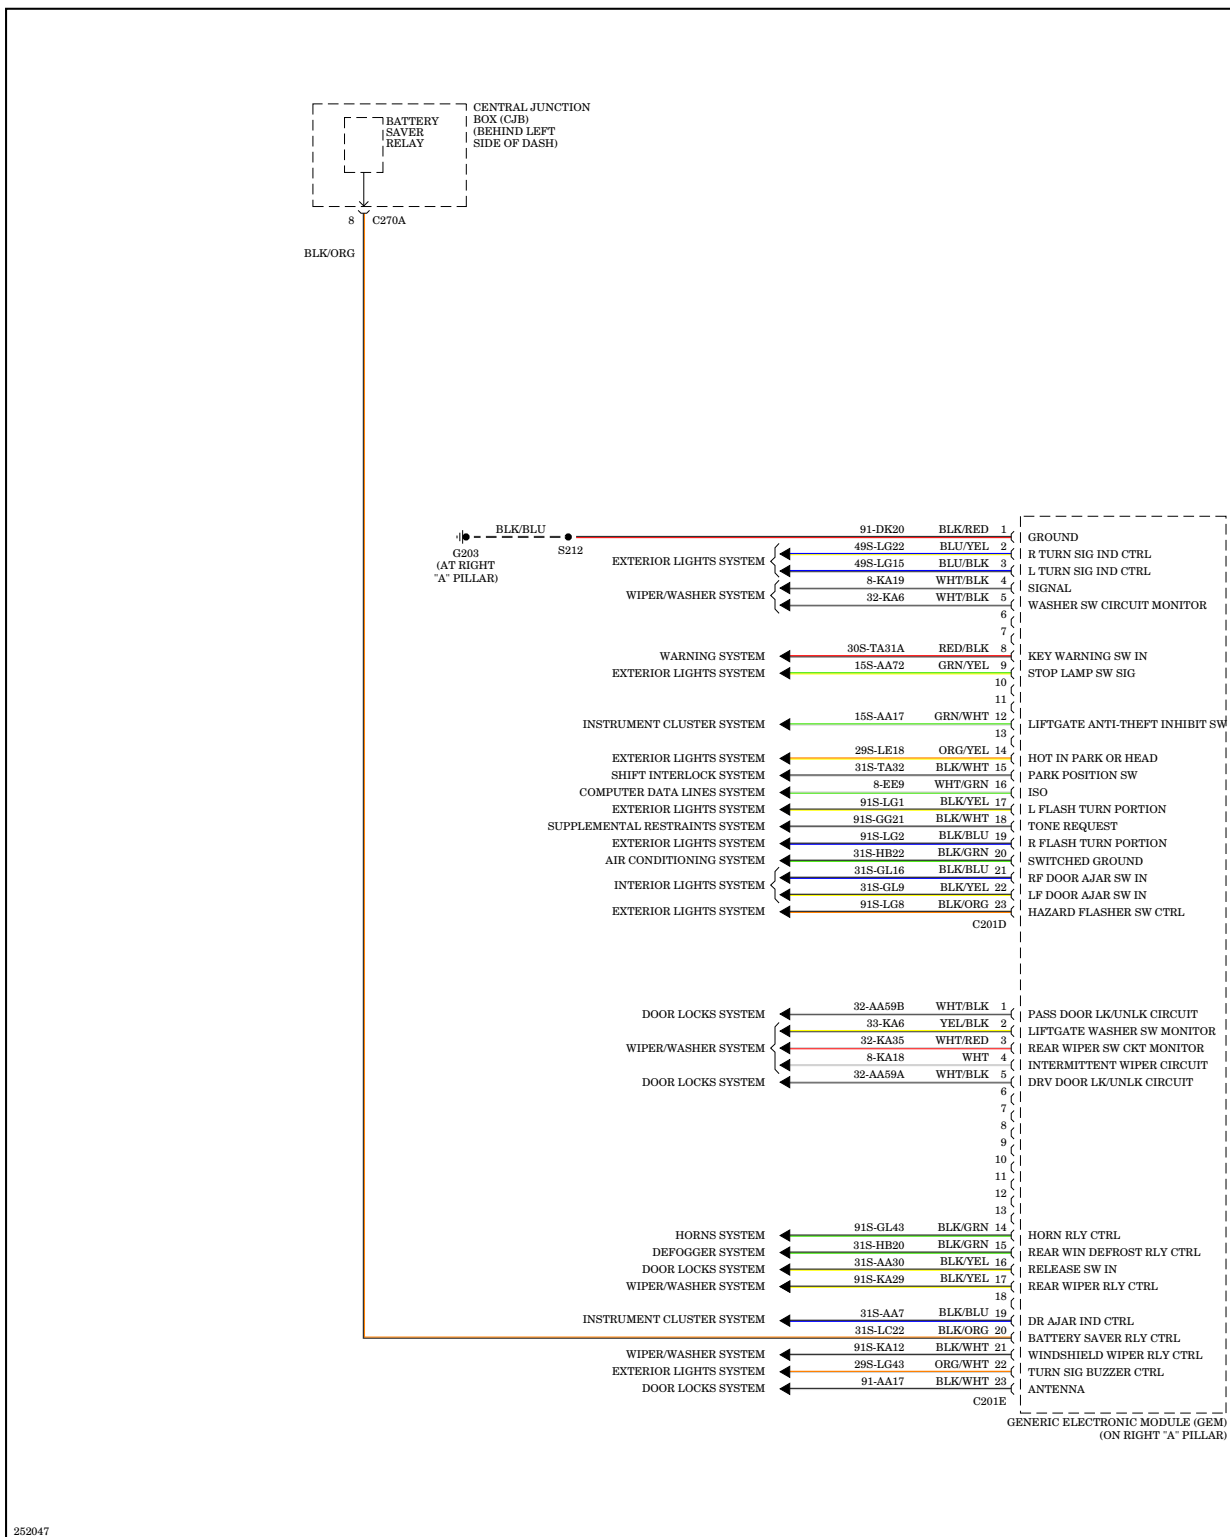

252047

 
Электросхема блоков управления кузовом (2 из 2) для Ford Focus ST 2007 - Список элементов:

- 15s-aa17
- 15s-aa72
- 29s-le18
- 29s-lg43
- 30s-ta31a
- 31s-aa30
- 31s-aa7
- 31s-gl16
- 31s-gl9
- 31s-hb20

- 31s-hb22
- 31s-lc22
- 31s-ta32
- 32-aa59a
- 32-aa59b
- 32-ka35
- 32-ka6
- 33-ka6
- 49s-lg15
- 49s-lg22
- 8-ee9
- 8-ka18
- 8-ka19
- 91-aa17
- 91-dk20
- 91s-gg21
- 91s-gl43
- 91s-ka12
- 91s-ka29
- 91s-lg1
- 91s-lg2
- 91s-lg8
- Air conditioning system
- Antenna
- Battery saver relay
- Battery saver rly ctrl
- C201d
- C201e
- C270a
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Defogger system
- Door locks system
- Dr ajar ind ctrl
- Drv door lk/unlk circuit
- Exterior lights system
- G203 (at right "a" pillar)
- Generic electronic module (gem) (on right "a" pillar)
- Ground
- Hazard flasher sw ctrl
- Horn rly ctrl
- Horns system
- Hot in park or head
- Instrument cluster system
- Interior lights system
- Intermittent wiper circuit
- Iso
- Key warning sw in
- L flash turn portion
- L turn sig ind ctrl
- Lf door ajar sw in
- Liftgate anti-theft inhibit sw
- Liftgate washer sw monitor
- Park position sw
- Pass door lk/unlk circuit
- R flash turn portion
- R turn sig ind ctrl
- Rear win defrost rly ctrl
- Rear wiper rly ctrl
- Rear wiper sw ckt monitor
- Release sw in
- Rf door ajar sw in
- S212
- Shift interlock system
- Signal
- Stop lamp sw sig
- Switched ground
- Tone request
- Turn sig buzzer ctrl
- Warning system
- Washer sw circuit monitor
- Windshield wiper rly ctrl
- Wiper/washer system

БЛОКИРОВКИ СЕЛЕКТОРА СТОЯНОЧНЫЙ ТОРМОЗ

Электросхема блокировки селектора для Ford Focus ST 2007

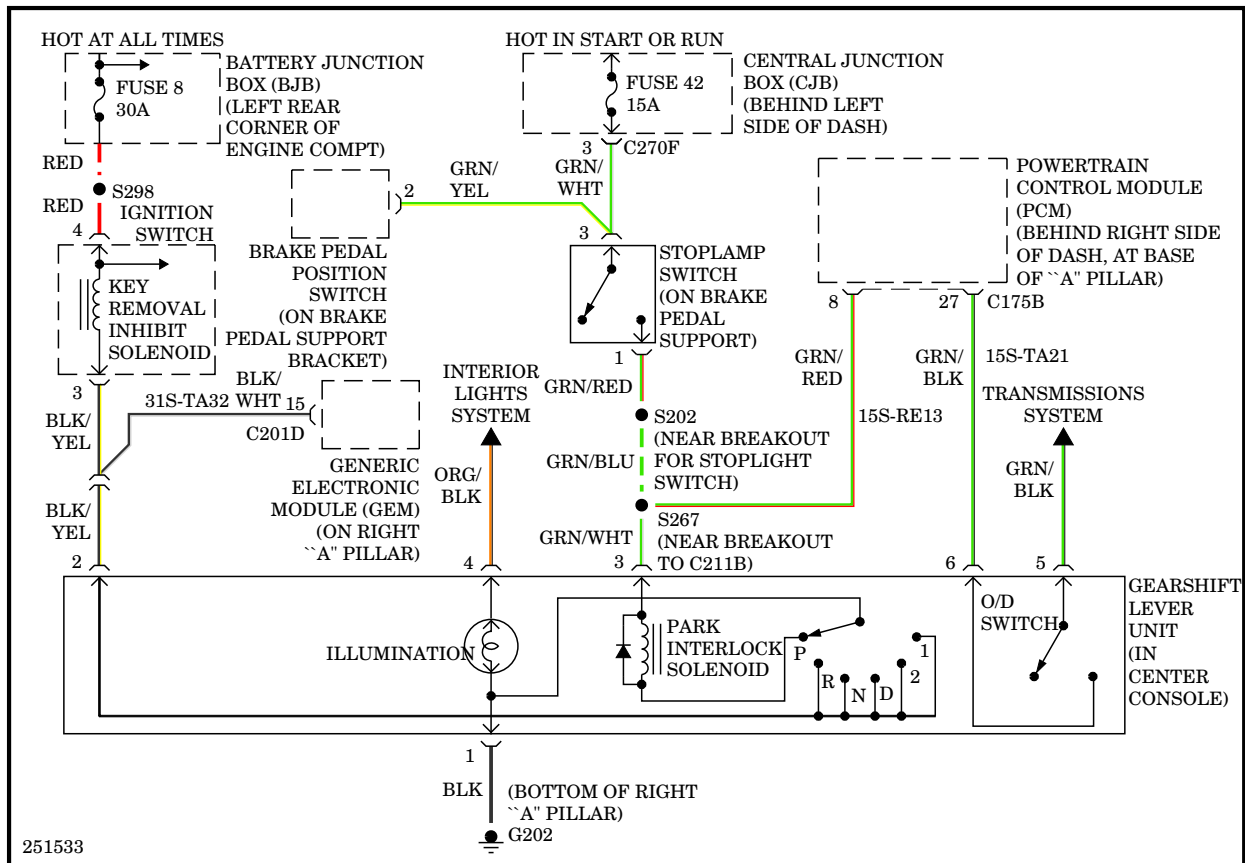


Электросхема блокировки селектора для Ford Focus ST 2007 - Список элементов:

- (bottom of right "a" pillar) g202
- 15s-re13
- 31s-ta32
- Battery junction box (bjb) (left rear corner of engine compt)
- Brake pedal position switch (on brake pedal support bracket)

- C175b
- C201d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Fuse 42 15a
- Fuse 8 30a
- Gearshift lever unit (in center console)
- Generic electronic module (gem) (on right ``a" pillar)
- Hot at all times
- Hot in start or run
- Ignition switch
- Illumination
- Interior lights system
- Key removal inhibit solenoid
- O/d switch
- Park interlock solenoid
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- S267 (near breakout to c211b)
- S298
- Stoplamp switch (on brake pedal support)
- Switch)
- Transmissions system

ВНЕШНЕЕ ОСВЕЩЕНИЕ

 Электросхема заднего хода, А/Т для Ford Focus ST 2007

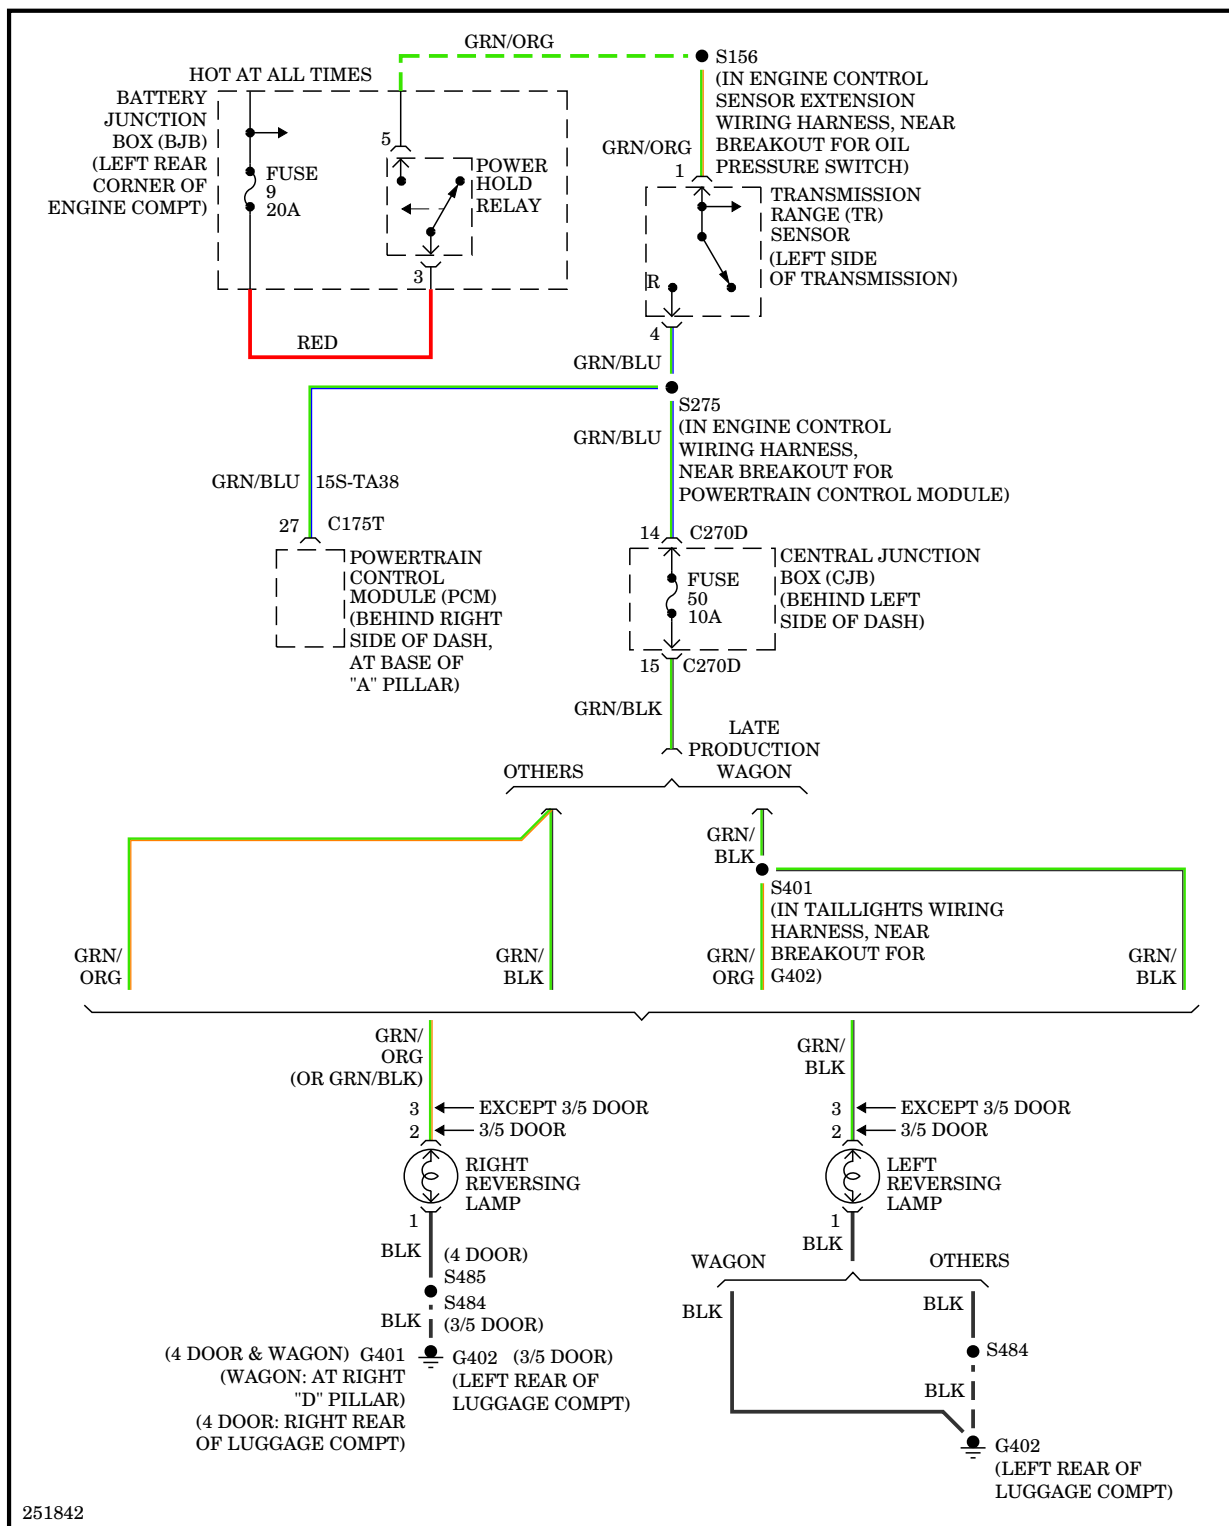


251842

Электросхема заднего хода, А/Т для Ford Focus ST 2007 - Список элементов:

- (3/5 door)
- (4 door & wagon)
- (left side of transmission)
- Battery junction box (bjb) (left rear corner of engine compt)
- C175t
- C270d
- Central junction box (cjb) (behind left side of dash)
- Except 3/5 door 3/5 door
- Fuse 10a
- Fuse 20a

- G401 (wagon: at right "d" pillar) (4 door: right rear of luggage compt)
- G402 (left rear of luggage compt)
- G402)
- Hot at all times
- Late production wagon
- Left reversing lamp
- Others
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Pressure switch)
- Red
- Right reversing lamp
- S484
- S484 (3/5 door)
- Transmission range (tr) sensor
- Wagon

 Электросхема заднего хода, М/Т для Ford Focus ST 2007

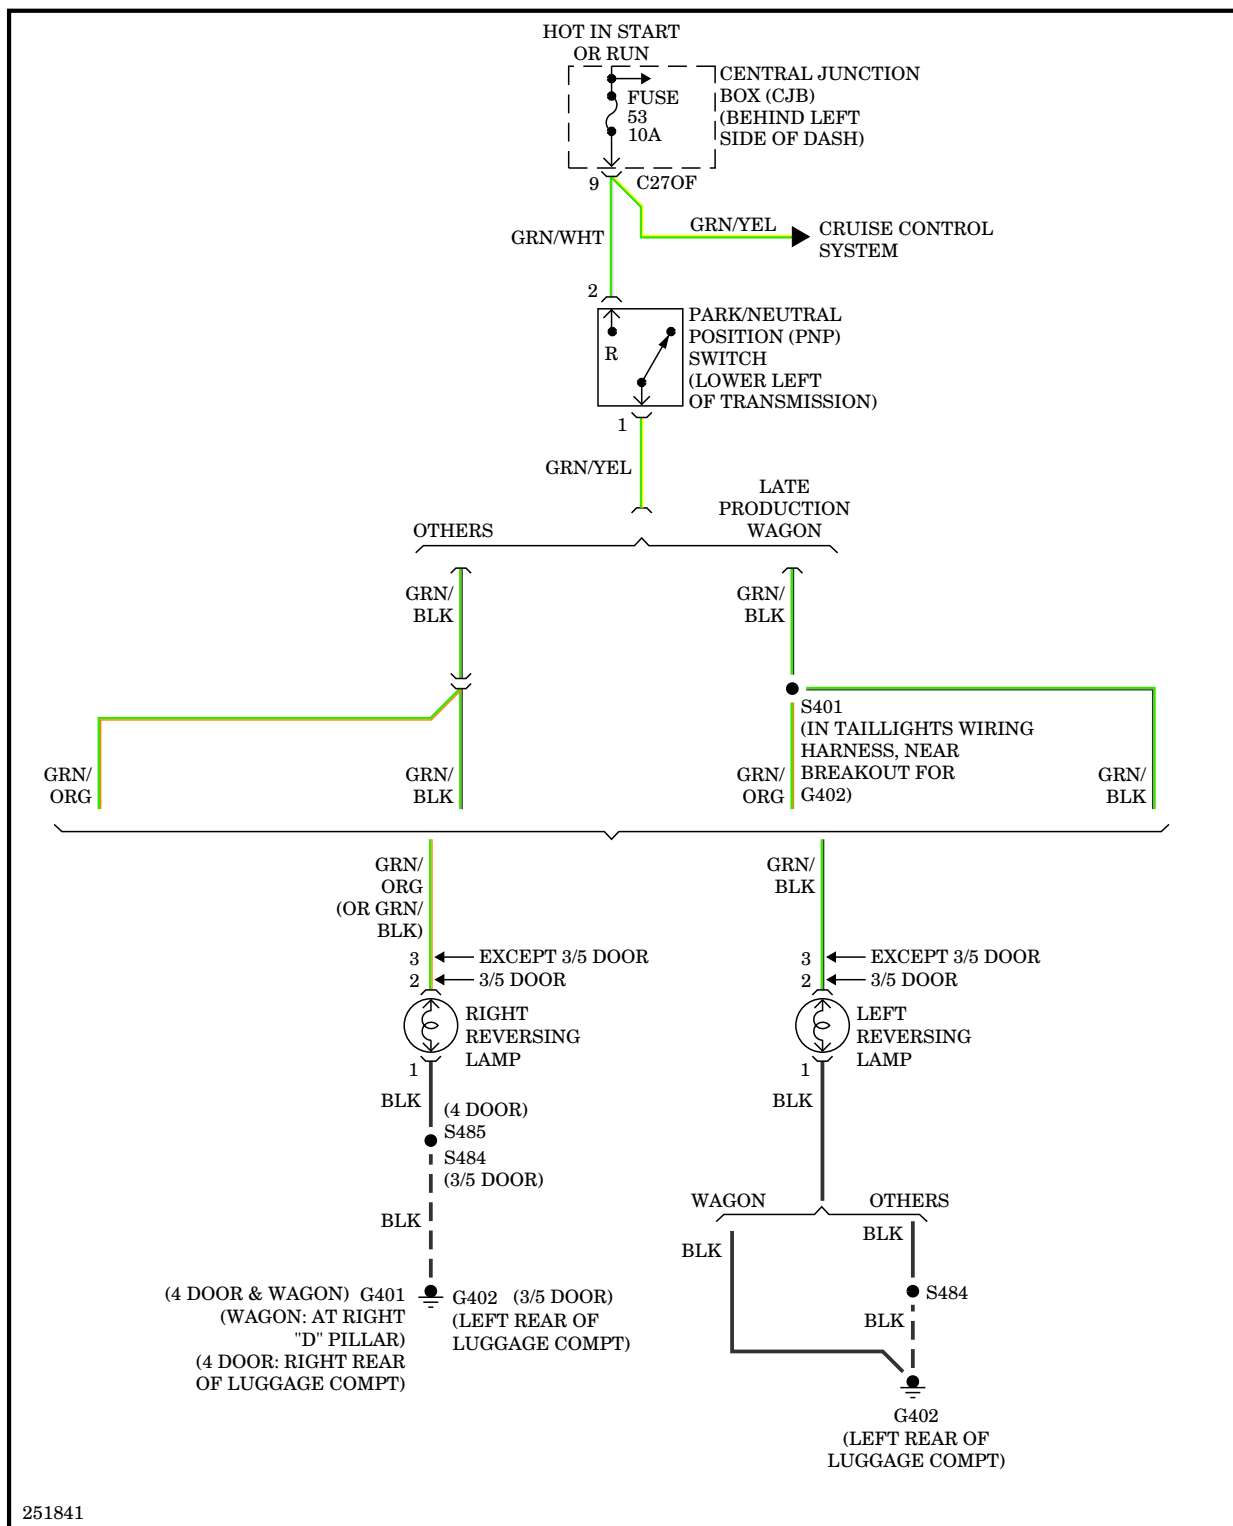


Электросхема заднего хода, М/Т для Ford Focus ST 2007 - Список элементов:

- (3/5 door)
- (4 door & wagon)
- (4 door) s485
- C27of
- Central junction box (cjb) (behind left side of dash)
- Cruise control system
- Except 3/5 door 3/5 door
- Fuse 10a
- G401 (wagon: at right "d" pillar) (4 door: right rear of luggage compt)
- G402 (left rear of luggage compt)

- G402)
- Hot in start or run
- Late production wagon
- Left reversing lamp
- Others
- Park/neutral position (pnp) switch (lower left of transmission)
- Right reversing lamp
- S484
- S484 (3/5 door)
- Wagon

 парк, поворот и схема ламп опасности для Ford Focus ST 2007

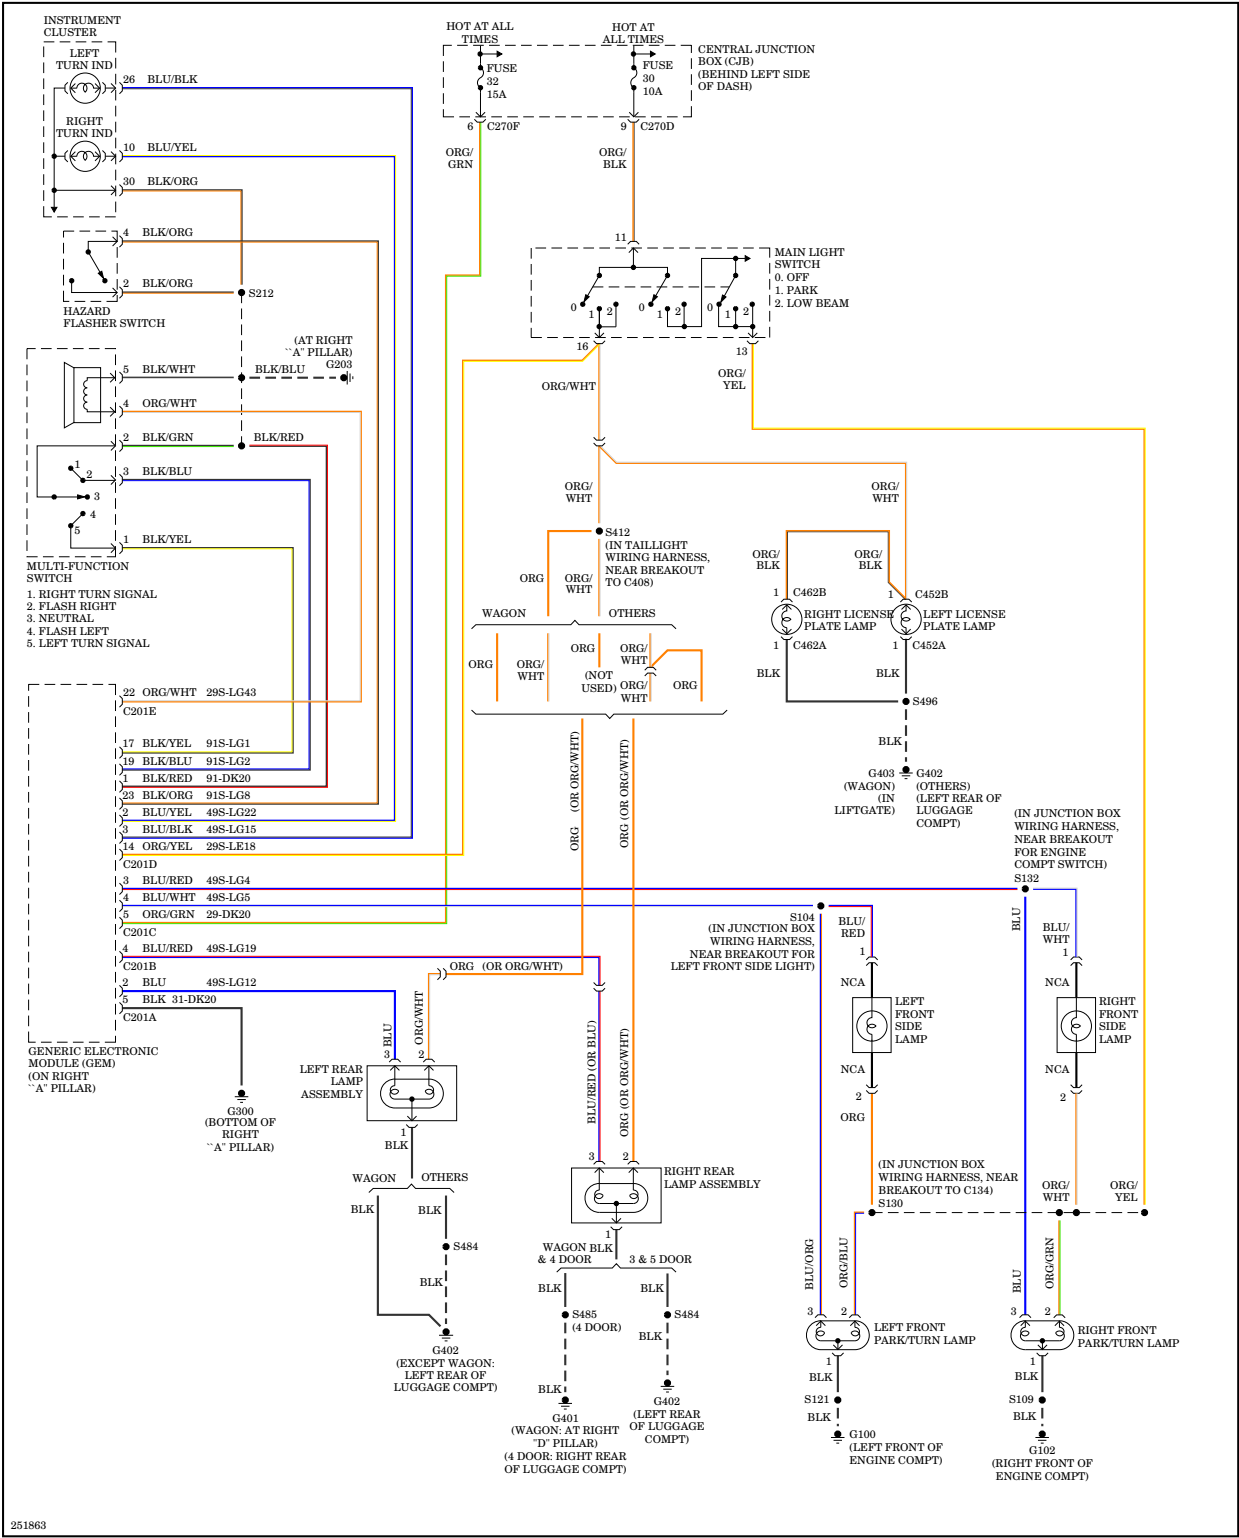




парк, поворот и схема ламп опасности для Ford Focus ST 2007 - Список элементов:

- (at right ``a" pillar) g203
- (in junction box wiring harness, near breakout for engine compt switch) s132
- (in junction box wiring harness, near breakout to c134) s130
- (not used)
- 1. right turn signal 2. flash right 3. neutral 4. flash left 5. left turn signal
- 29-dk20
- 29s-le18
- 29s-lg43
- 3 & 5 door
- 31-dk20
- 49s-lg12
- 49s-lg15
- 49s-lg19
- 49s-lg22
- 49s-lg4
- 49s-lg5
- 91-dk20
- 91s-lg1
- 91s-lg2
- 91s-lg8
- C201a
- C201b
- C201c
- C201d
- C201e
- C270d
- C270f
- C452a
- C452b
- C462a
- C462b
- Central junction box (cjb) (behind left side of dash)
- Fuse 10a
- Fuse 15a
- G100 (left front of engine compt)
- G102 (right front of engine compt)
- G300 (bottom of right ``a" pillar)
- G401 (wagon: at right "d" pillar) (4 door: right rear of luggage compt)
- G402 (except wagon: left rear of luggage compt)
- G402 (left rear of luggage compt)
- G402 (others) (left rear of luggage compt)
- G403 (wagon) (in liftgate)
- Generic electronic module (gem) (on right ``a" pillar)
- Hazard flasher switch
- Hot at all times
- Instrument cluster
- Left front park/turn lamp
- Left front side lamp
- Left license plate lamp
- Left rear lamp assembly
- Left turn ind
- Main light switch 0. off 1. park 2. low beam
- Multi-function switch
- Nca
- Others
- Right front park/turn lamp
- Right front side lamp
- Right license plate lamp
- Right rear lamp assembly
- Right turn ind
- S104 (in junction box wiring harness, near breakout for left front side light)
- S109
- S121
- S212
- S412 (in taillight wiring harness, near breakout to c408)
- S484
- S485 (4 door)
- S496

- Wagon
- Wagon & 4 door

 остановите схему ламп, 3 и 5 дверей для Ford Focus ST 2007

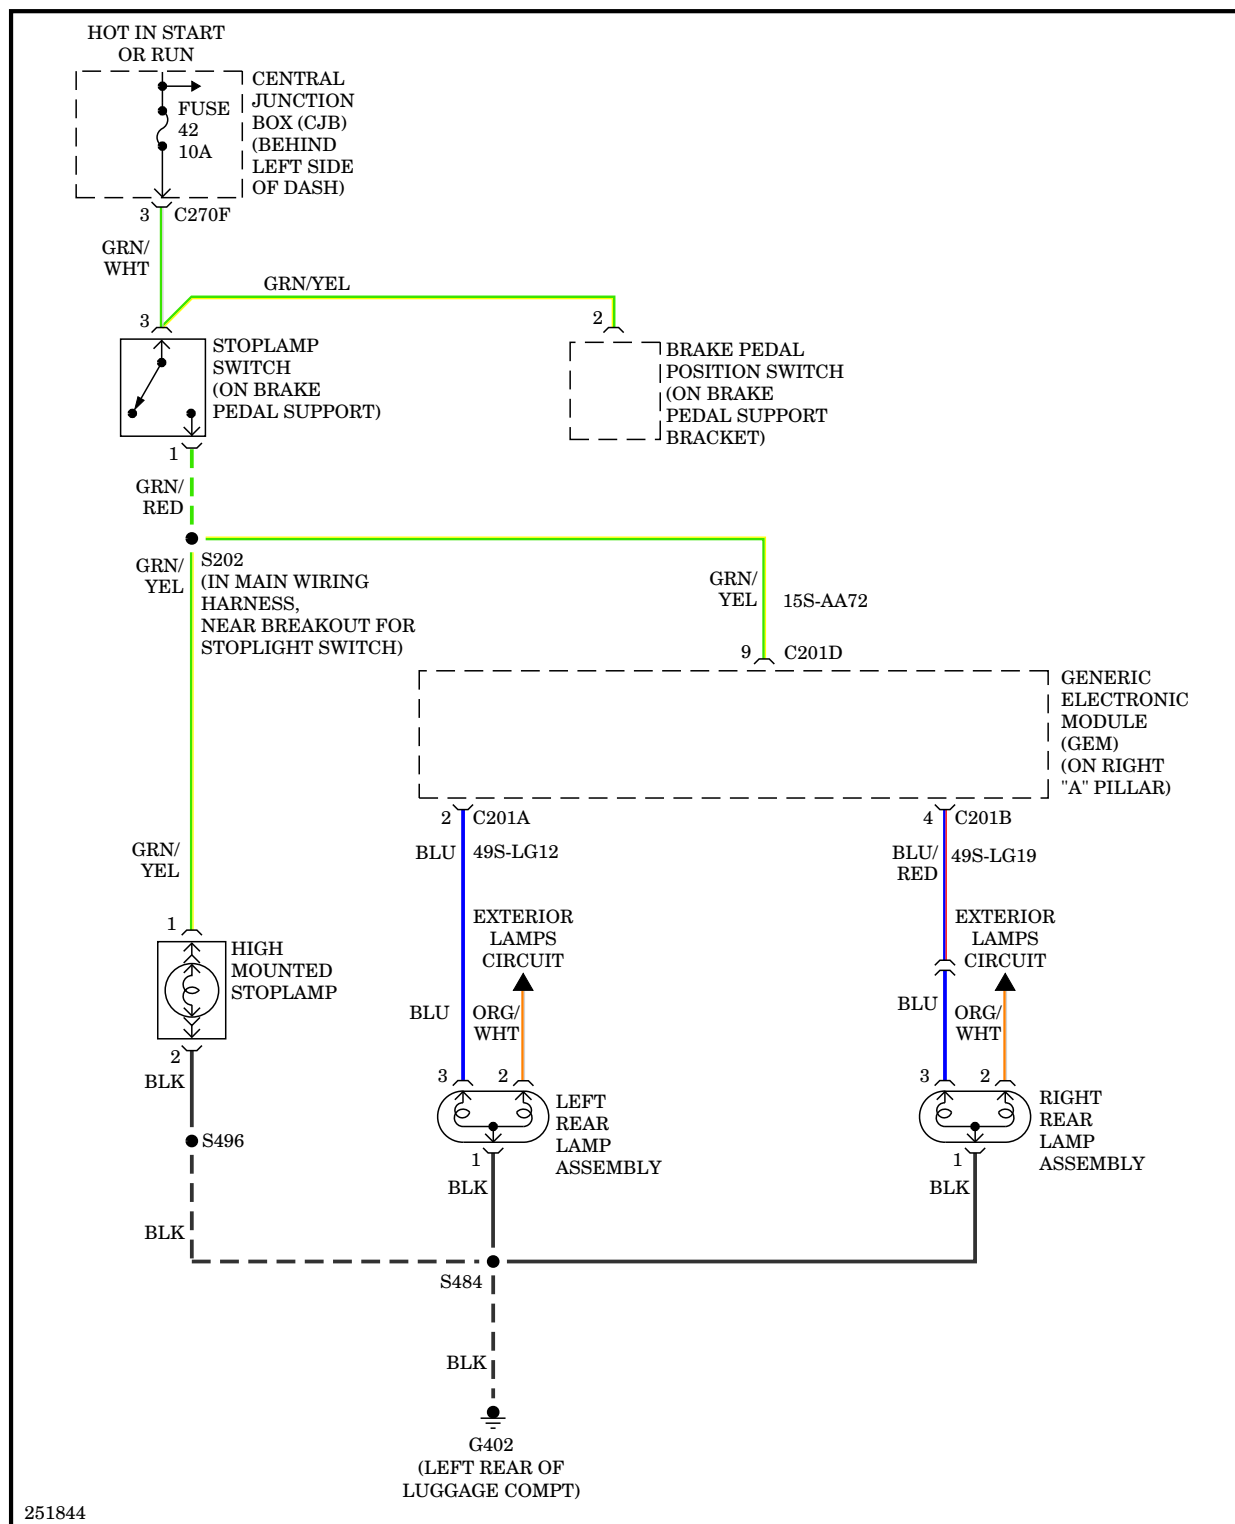


остановите схему ламп, 3 и 5 дверей для Ford Focus ST 2007 - Список элементов:

- 15s-aa72
- Brake pedal position switch (on brake pedal support bracket)
- C201a

- C201b
- C201d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Exterior lamps circuit
- Fuse 10a
- G402 (left rear of luggage compt)
- Generic electronic module (gem) (on right "a" pillar)
- High mounted stoplamp
- Hot in start or run
- Left rear lamp assembly
- Right rear lamp assembly
- S484
- S496
- Stoplamp switch (on brake pedal support)

 остановите схему ламп, 4 двери и Универсал для Ford Focus ST 2007

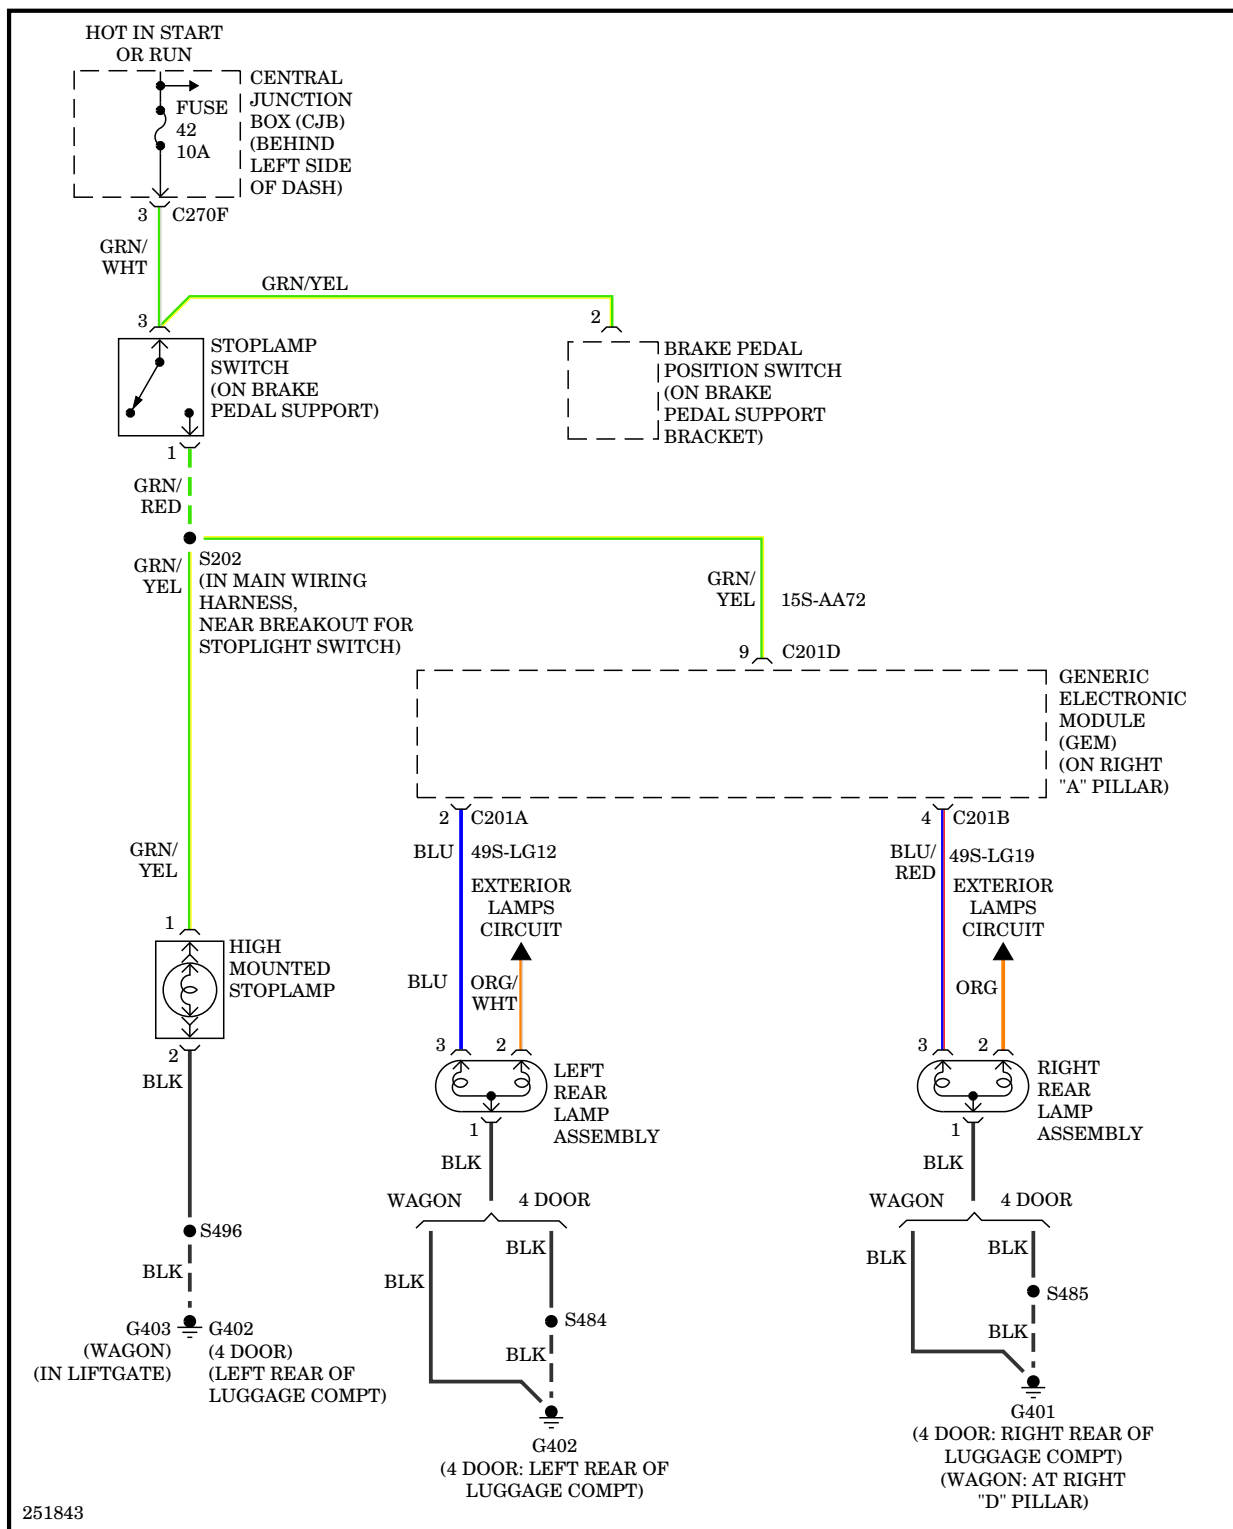


остановите схему ламп, 4 двери и Универсал для Ford Focus ST 2007 - Список элементов:

- 15s-aa72
- 4 door
- Brake pedal position switch (on brake pedal support bracket)
- C201a
- C201b
- C201d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Exterior lamps circuit
- Fuse 10a

- G401 (4 door: right rear of luggage compt) (wagon: at right "d" pillar)
- G402 (4 door) (left rear of luggage compt)
- G402 (4 door: left rear of luggage compt)
- G403 (wagon) (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- High mounted stoplamp
- Hot in start or run
- Left rear lamp assembly
- Right rear lamp assembly
- S484
- S485
- S496
- Stoplamp switch (on brake pedal support)
- Wagon

ВНУТРЕННЕЕ ОСВЕЩЕНИЕ

 Электросхема подсветки для Ford Focus ST 2007

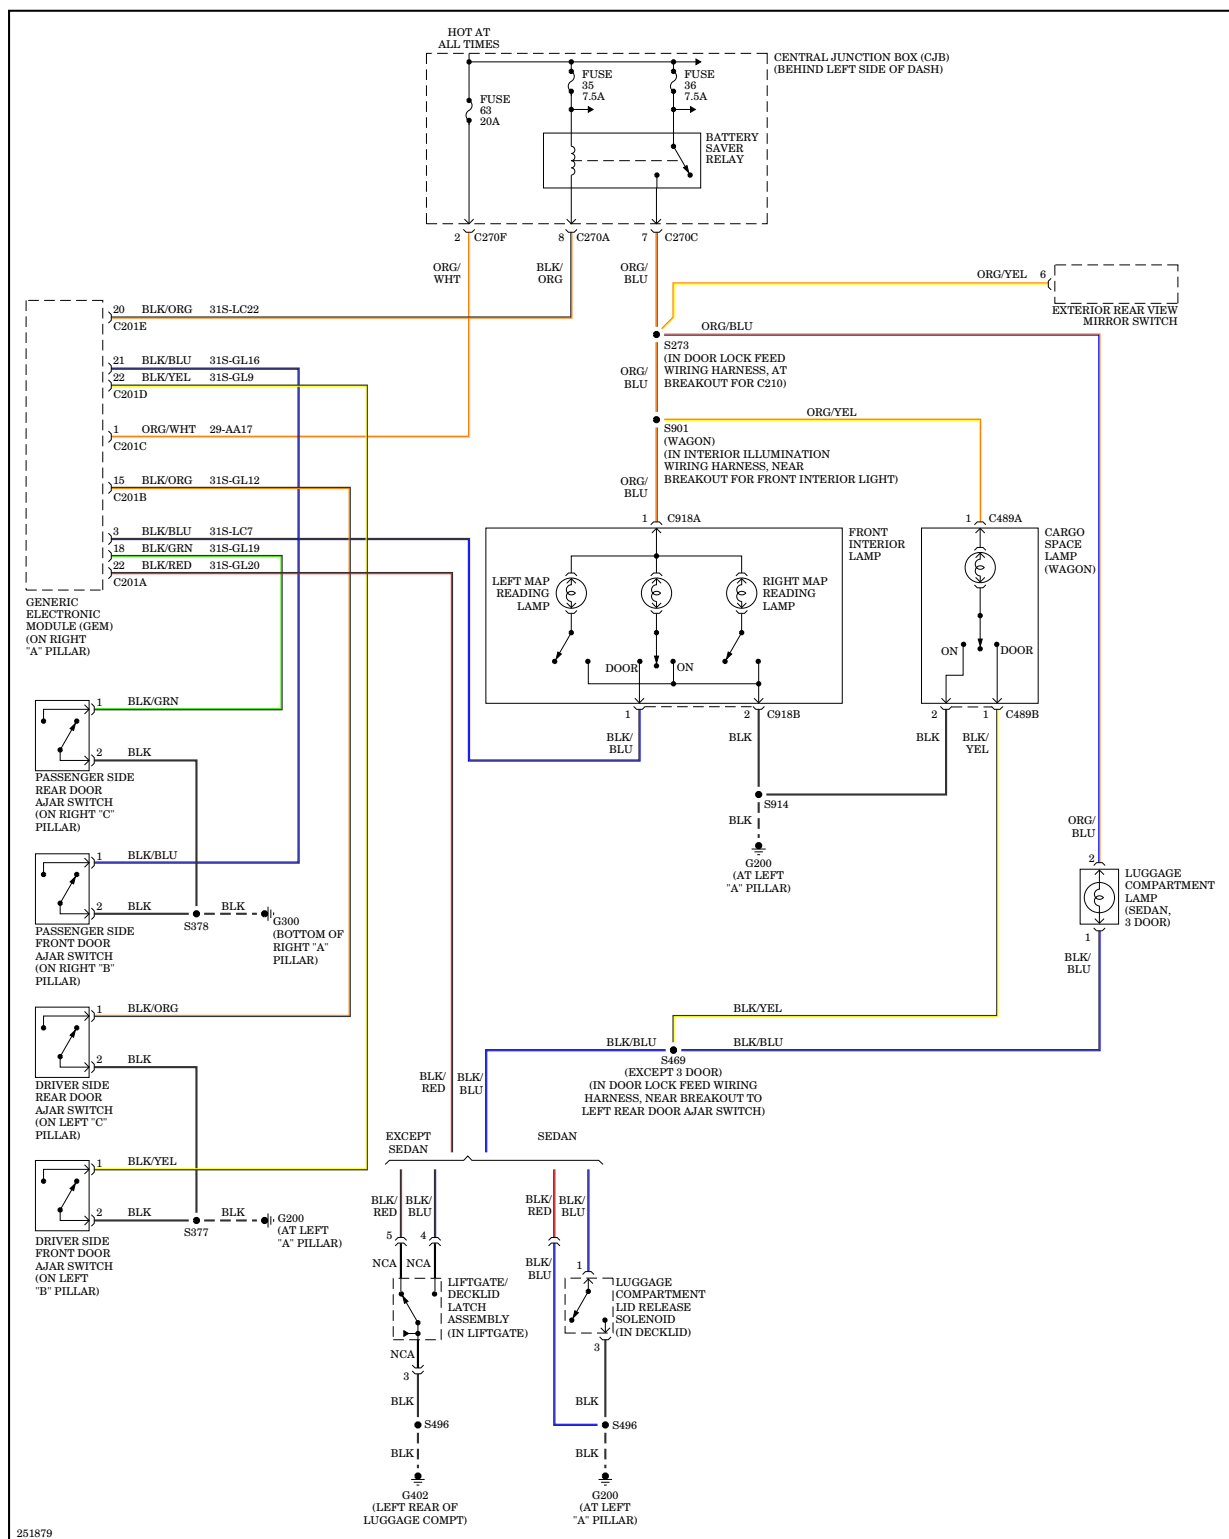


Электросхема подсветки для Ford Focus ST 2007 - Список элементов:

- 29-aa17
- 31s-gl12
- 31s-gl16
- 31s-gl19
- 31s-gl20
- 31s-gl9
- 31s-lc22
- 31s-lc7
- Battery saver relay
- C201a

- C201b
- C201c
- C201d
- C201e
- C270a
- C270c
- C270f
- C489a
- C489b
- C918a
- C918b
- Cargo space lamp (wagon)
- Central junction box (cjb) (behind left side of dash)
- Door
- Driver side front door ajar switch (on left "b" pillar)
- Driver side rear door ajar switch (on left "c" pillar)
- Except sedan
- Exterior rear view mirror switch
- Front interior lamp
- Fuse 20a
- Fuse 7.5a
- G200 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (left rear of luggage compt)
- Generic electronic module (gem) (on right "a" pillar)
- Hot at all times
- Left map reading lamp
- Liftgate/ decklid latch assembly (in liftgate)
- Luggage compartment lamp (sedan, 3 door)
- Luggage compartment lid release solenoid (in decklid)
- Nca
- Passenger side front door ajar switch (on right "b" pillar)
- Passenger side rear door ajar switch (on right "c" pillar)
- Right map reading lamp
- S273 (in door lock feed wiring harness, at breakout for c210)
- S377
- S378
- S469 (except 3 door) (in door lock feed wiring harness, near breakout to left rear door ajar switch)
- S496
- S901 (wagon) (in interior illumination wiring harness, near breakout for front interior light)
- S914
- Sedan

 Электросхема подсветки приборов для Ford Focus ST 2007

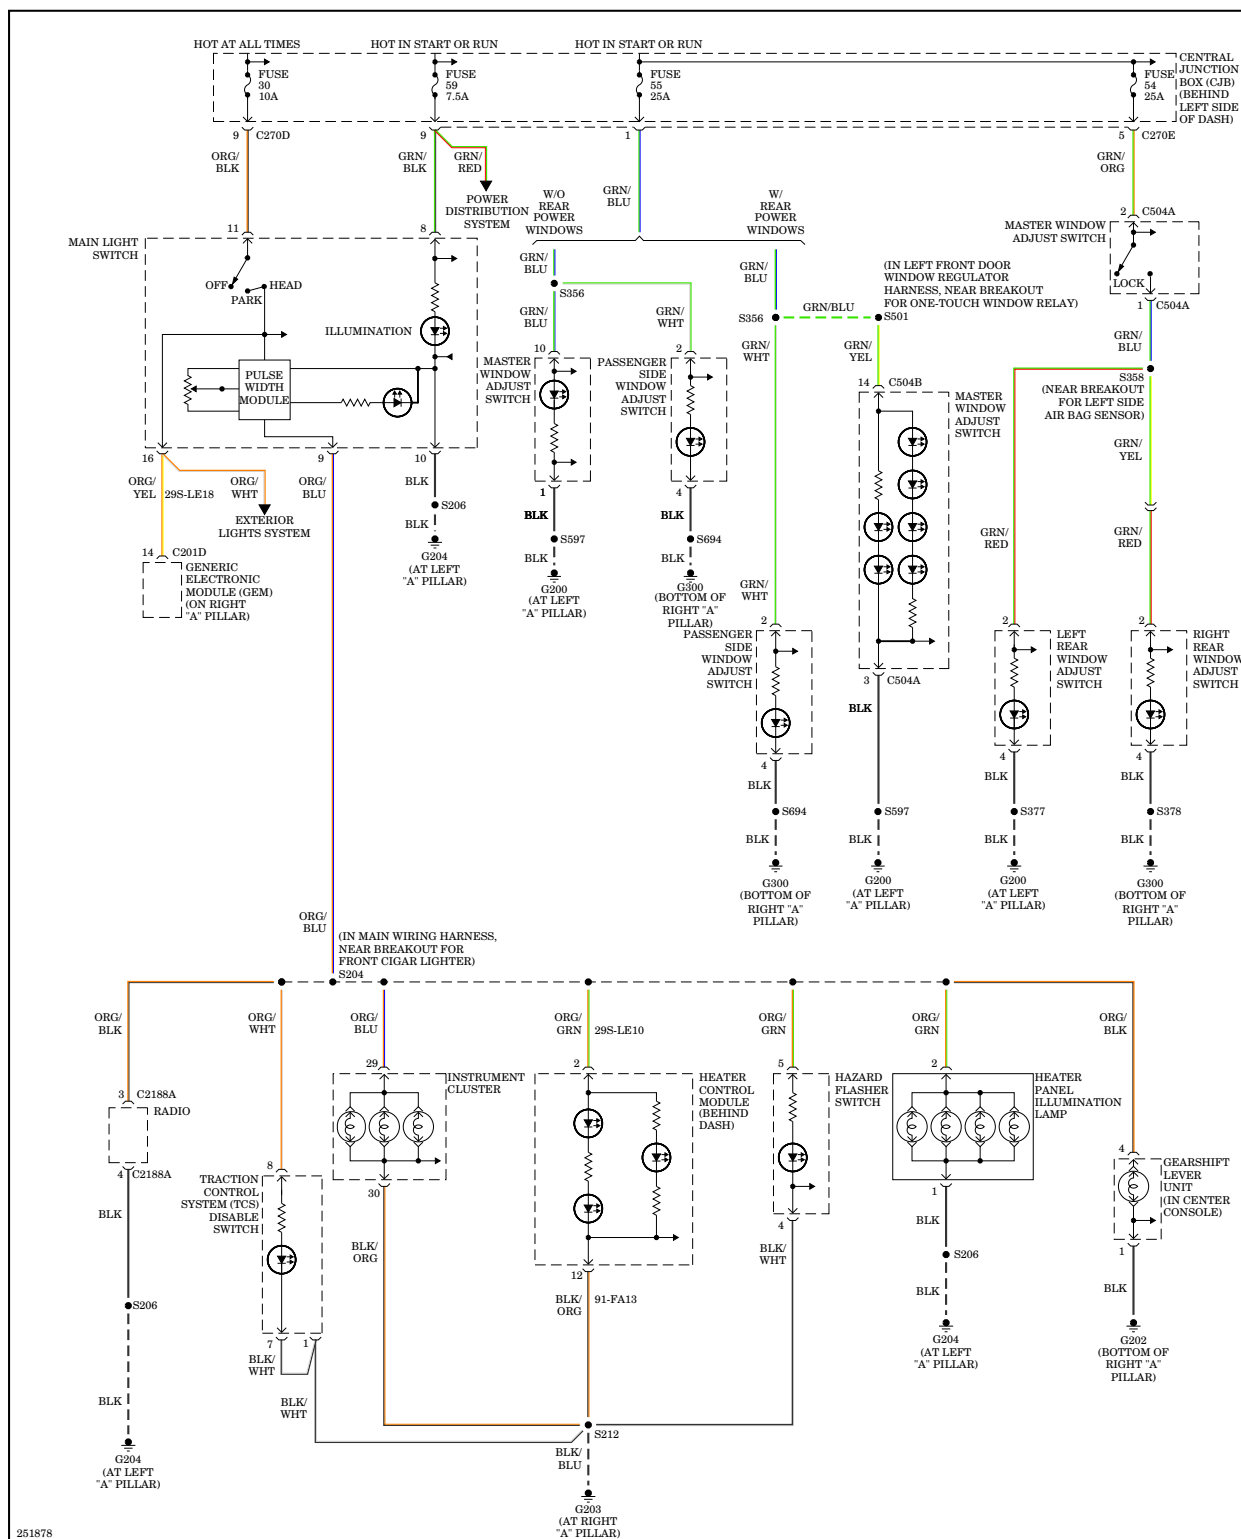


Электросхема подсветки приборов для Ford Focus ST 2007 - Список элементов:

- (in left front door window regulator harness, near breakout for one-touch window relay) s501
- (in main wiring harness, near breakout for front cigar lighter) s204
- C201d
- C2188a
- C270d
- C270e
- C504a
- C504b
- Central junction box (cjb) (behind left side of dash)
- Exterior lights system

- Fuse 10a
- Fuse 25a
- Fuse 7.5a
- G200 (at left "a" pillar)
- G202 (bottom of right "a" pillar)
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of
- G300 (bottom of right "a" pillar)
- Gearshift lever unit (in center console)
- Generic electronic module (gem) (on right "a" pillar)
- Hazard flasher switch
- Head
- Heater control module (behind dash)
- Heater panel illumination lamp
- Hot at all times
- Hot in start or run
- Illumination
- Instrument cluster
- Left rear window adjust switch
- Lock
- Main light switch
- Master window adjust switch
- Off
- Park
- Passenger side window adjust switch
- Power distribution system
- Pulse width module
- Radio
- Right "a" pillar)
- Right rear window adjust switch
- S206
- S212
- S356
- S358 (near breakout for left side air bag sensor)
- S377
- S378
- S597
- S694
- Traction control system (tcs) disable switch
- W/ rear power windows
- W/o rear power windows

ЗАЗЕМЛЕНИЕ ПОДКЛЮЧЕНИЕ МАССЫ

 Электросхема подключение массы заземления (1 из 4) для Ford Focus ST 2007

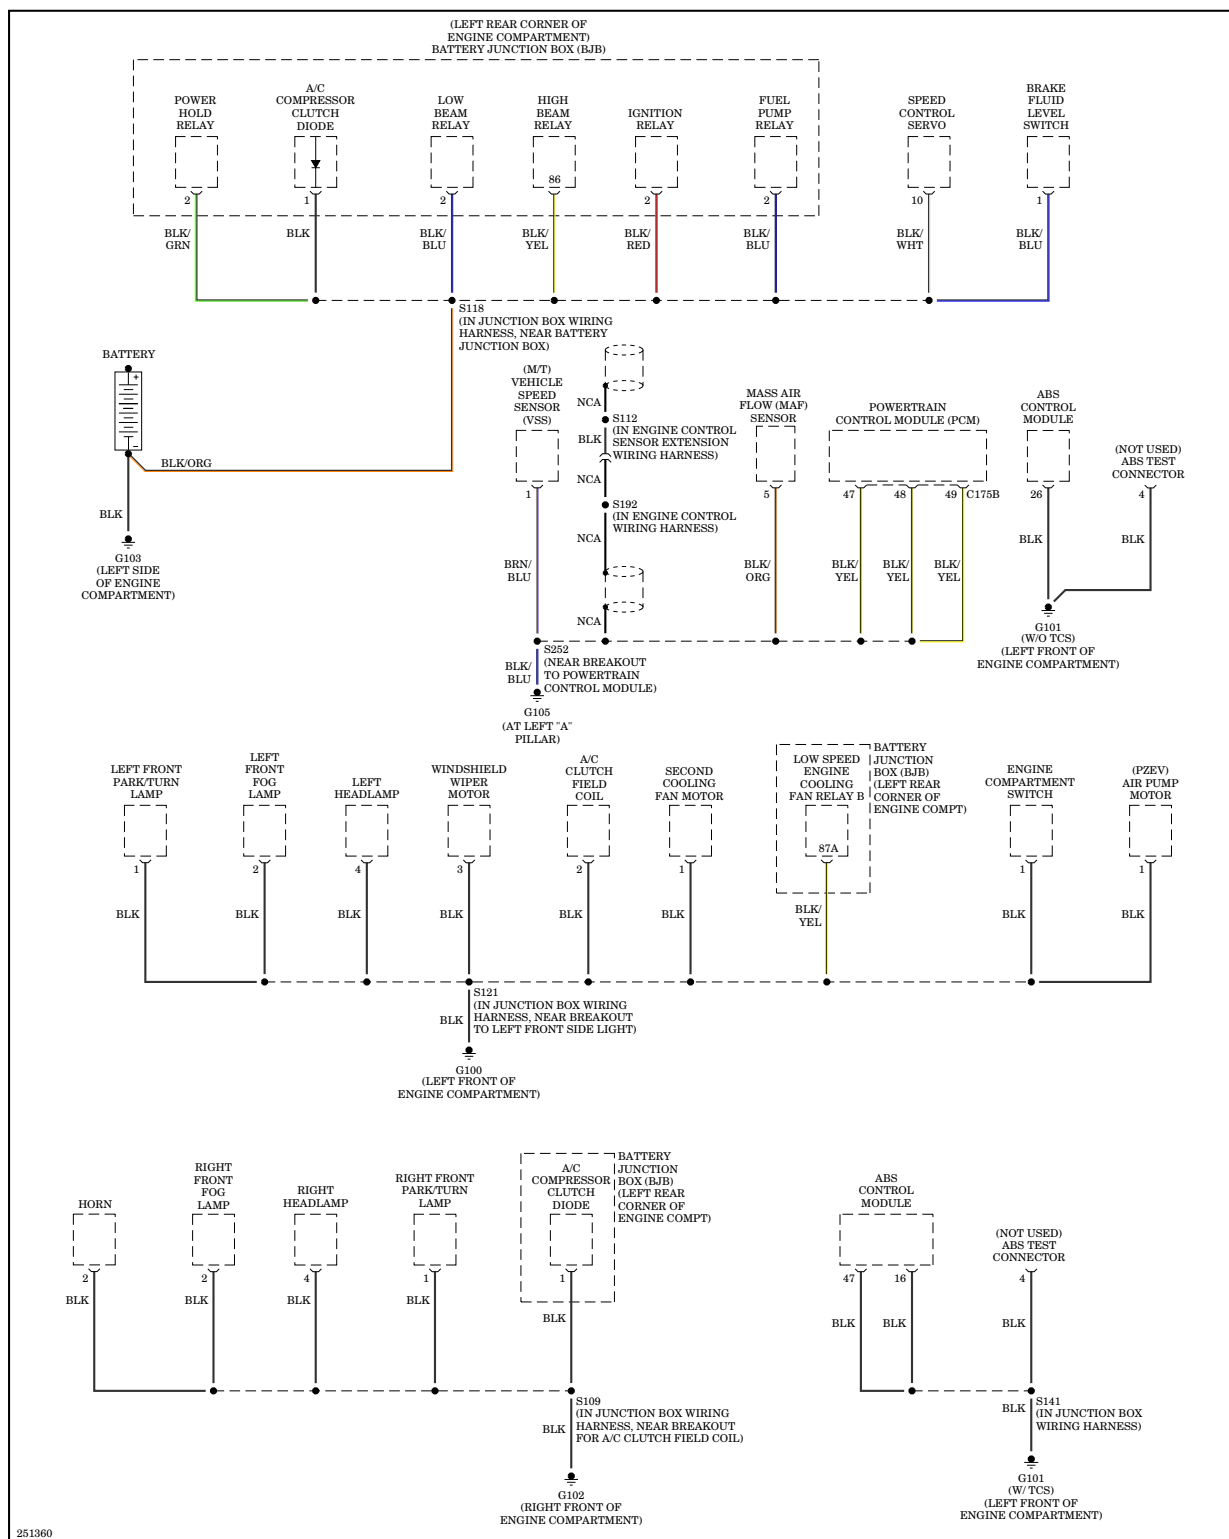


Электросхема подключение массы заземления (1 из 4) для Ford Focus ST 2007 - Список элементов:

- (at left "a" pillar)
- (left rear corner of engine compartment) battery junction box (bjb)
- (m/t)
- (not used) abs test connector
- (pzev) air pump motor
- 87a
- A/c clutch field coil
- A/c compressor clutch diode
- Abs control module
- Battery

- Battery junction box (bjb) (left rear corner of engine compt)
- Brake fluid level switch
- C175b
- Engine compartment switch
- For a/c clutch field coil)
- Fuel pump relay
- G100 (left front of engine compartment)
- G101 (w/ tcs) (left front of engine compartment)
- G101 (w/o tcs) (left front of engine compartment)
- G102 (right front of engine compartment)
- G103 (left side of engine compartment)
- G105
- High beam relay
- Horn
- Ignition relay
- Left front fog lamp
- Left front park/turn lamp
- Left headlamp
- Low beam relay
- Low speed engine cooling fan relay b
- Mass air flow (maf) sensor
- Nca
- Power hold relay
- Powertrain control module (pcm)
- Right front fog lamp
- Right front park/turn lamp
- Right headlamp
- S112 (in engine control sensor extension wiring harness)
- S118 (in junction box wiring harness, near battery junction box)
- S192 (in engine control wiring harness)
- Second cooling fan motor
- Speed control servo
- To left front side light)
- To powertrain control module)
- Vehicle speed sensor (vss)
- Windshield wiper motor

 Электросхема подключение массы заземления (2 из 4) для Ford Focus ST 2007

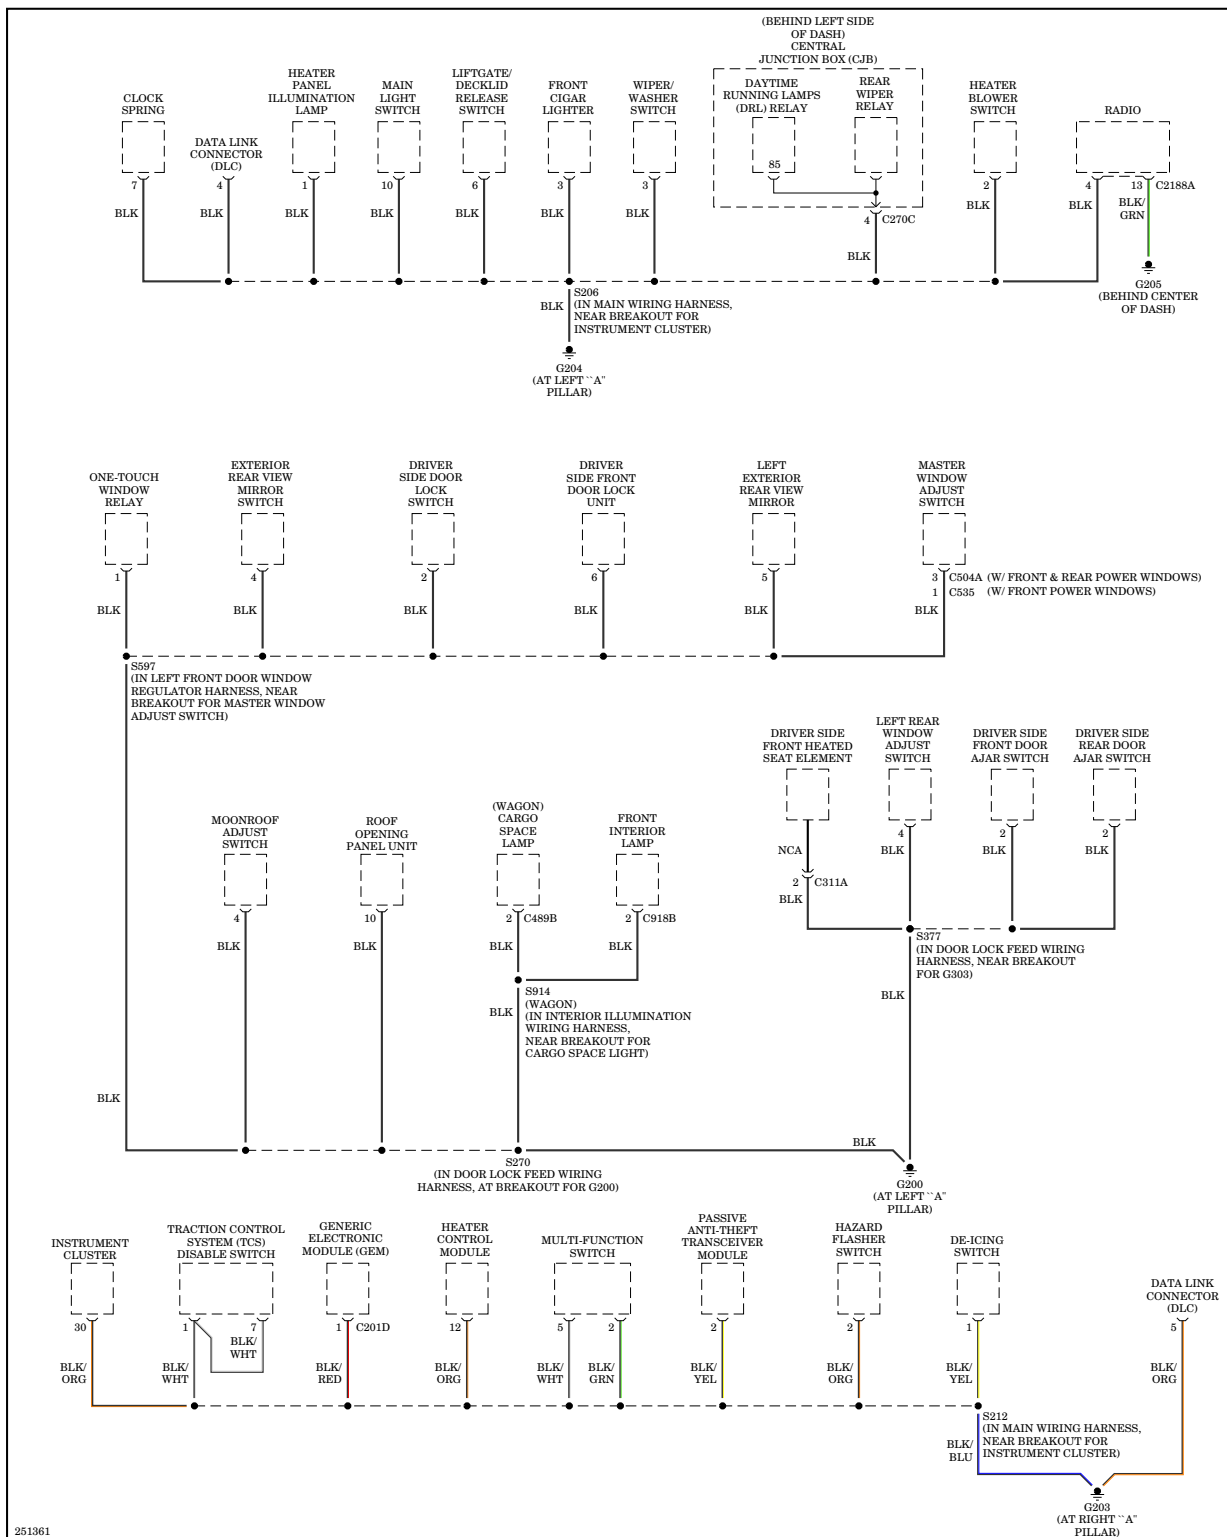


Электросхема подключение массы заземления (2 из 4) для Ford Focus ST 2007 - Список элементов:

- (behind left side of dash) central junction box (cjb)
- (w/ front & rear power windows) (w/ front power windows)
- (wagon) cargo space lamp
- C201d
- C2188a
- C270c
- C311a
- C489b
- C504a
- C535

- C918b
- Clock spring
- Data link connector (dlc)
- Daytime running lamps (drl) relay
- De-icing switch
- Driver side door lock switch
- Driver side front door ajar switch
- Driver side front door lock unit
- Driver side front heated seat element
- Driver side rear door ajar switch
- Exterior rear view mirror switch
- Front cigar lighter
- Front interior lamp
- G200 (at left ``a" pillar)
- G203 (at right ``a" pillar)
- G204 (at left ``a" pillar)
- G205 (behind center of dash)
- Generic electronic module (gem)
- Hazard flasher switch
- Heater blower switch
- Heater control module
- Heater panel illumination lamp
- Instrument cluster
- Left exterior rear view mirror
- Left rear window adjust switch
- Liftgate/ decklid release switch
- Main light switch
- Master window adjust switch
- Moonroof adjust switch
- Multi-function switch
- Nca
- Near breakout for instrument cluster)
- One-touch window relay
- Passive anti-theft transceiver module
- Radio
- Rear wiper relay
- Roof opening panel unit
- S270 (in door lock feed wiring harness, at breakout for g200)
- S377 (in door lock feed wiring harness, near breakout for g303)
- S597 (in left front door window regulator harness, near breakout for master window adjust switch)
- S914 (wagon) (in interior illumination wiring harness, near breakout for cargo space light)
- Traction control system (tcs) disable switch
- Wiper/ washer switch

 Электросхема подключение массы заземления (3 из 4) для Ford Focus ST 2007

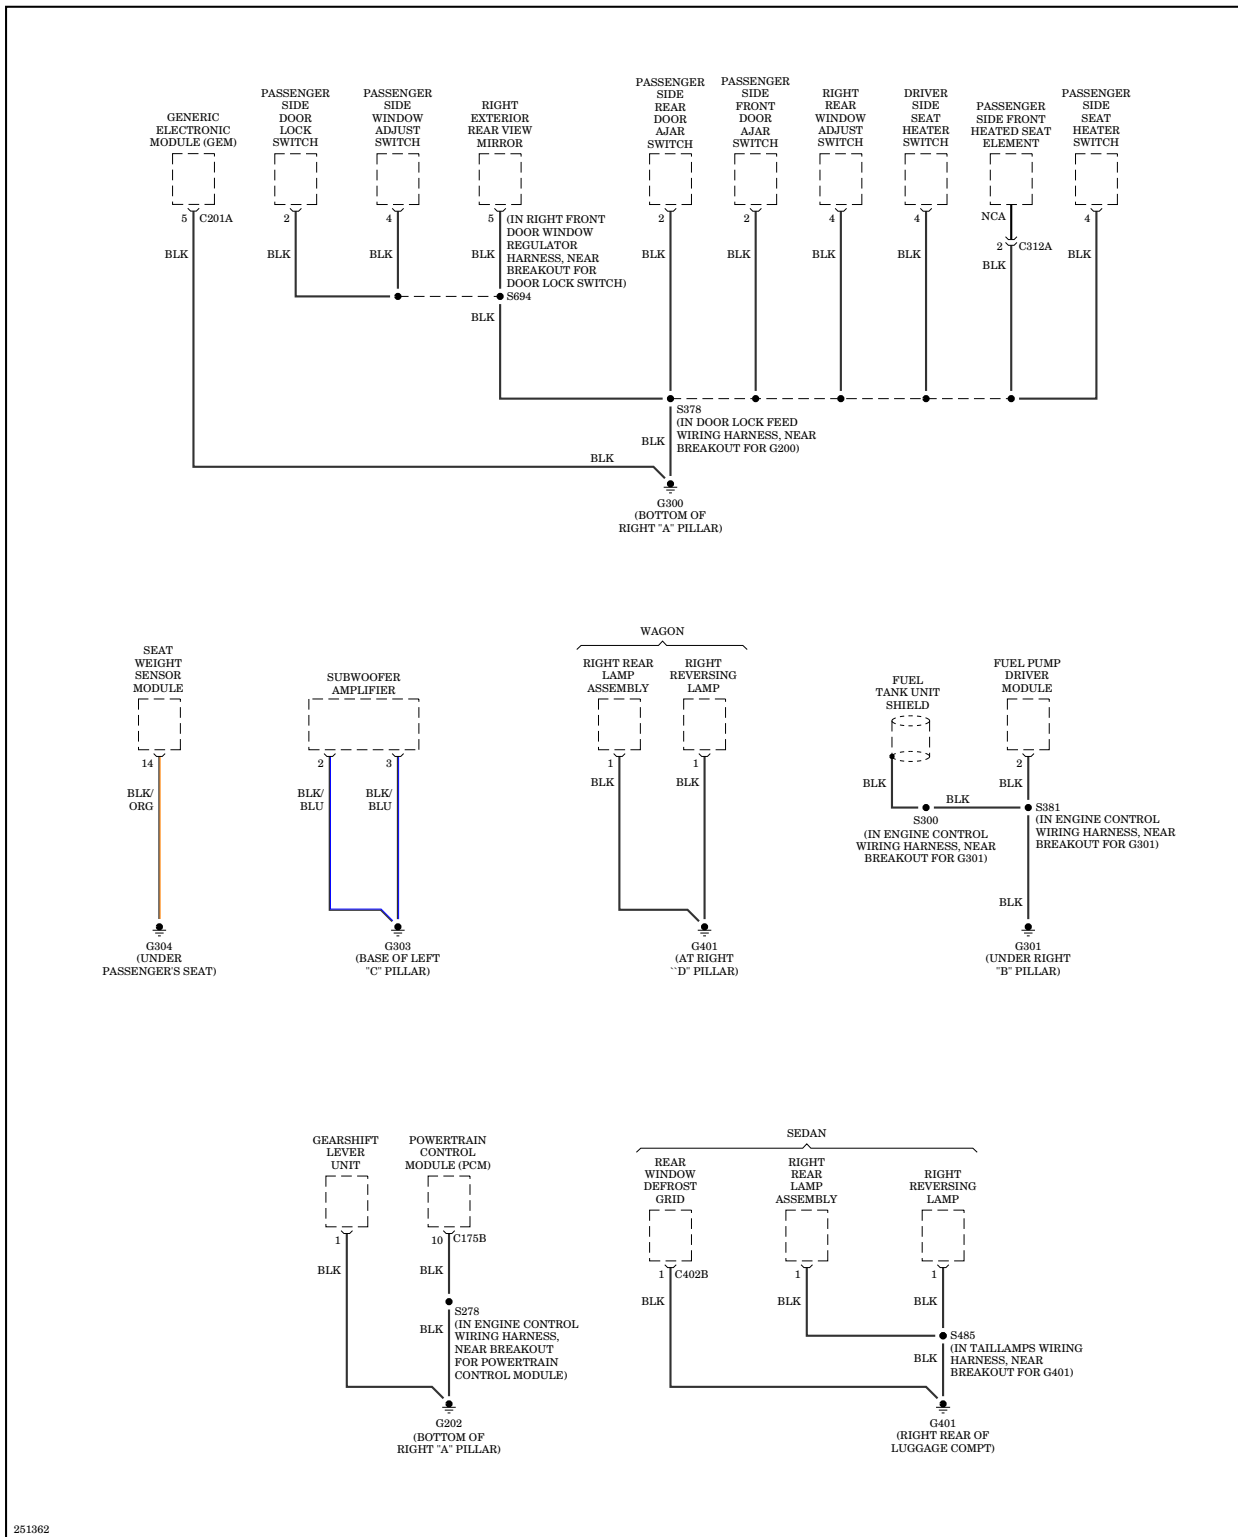


Электросхема подключение массы заземления (3 из 4) для Ford Focus ST 2007 - Список элементов:

- (bottom of right "a" pillar)
- (in engine control wiring harness, near breakout for g301)
- (in right front door window regulator harness, near breakout for door lock switch) s694
- C175b
- C201a
- C312a
- C402b
- Driver side seat heater switch
- Fuel pump driver module
- Fuel tank unit shield

- G202
- G300 (bottom of right "a" pillar)
- G301 (under right "b" pillar)
- G303 (base of left "c" pillar)
- G304 (under passenger's seat)
- G401 (at right ``d" pillar)
- G401 (right rear of luggage compt)
- Gearshift lever unit
- Generic electronic module (gem)
- Nca
- Passenger side door lock switch
- Passenger side front door ajar switch
- Passenger side front heated seat element
- Passenger side rear door ajar switch
- Passenger side seat heater switch
- Passenger side window adjust switch
- Powertrain control module (pcm)
- Rear window defrost grid
- Right exterior rear view mirror
- Right rear lamp assembly
- Right rear window adjust switch
- Right reversing lamp
- S300
- S381 (in engine control wiring harness, near breakout for g301)
- S485 (in taillamps wiring harness, near breakout for g401)
- Seat weight sensor module
- Sedan
- Subwoofer amplifier
- Wagon
- Wiring harness, near breakout for powertrain control module)

 Электросхема подключение массы заземления (4 из 4) для Ford Focus ST 2007

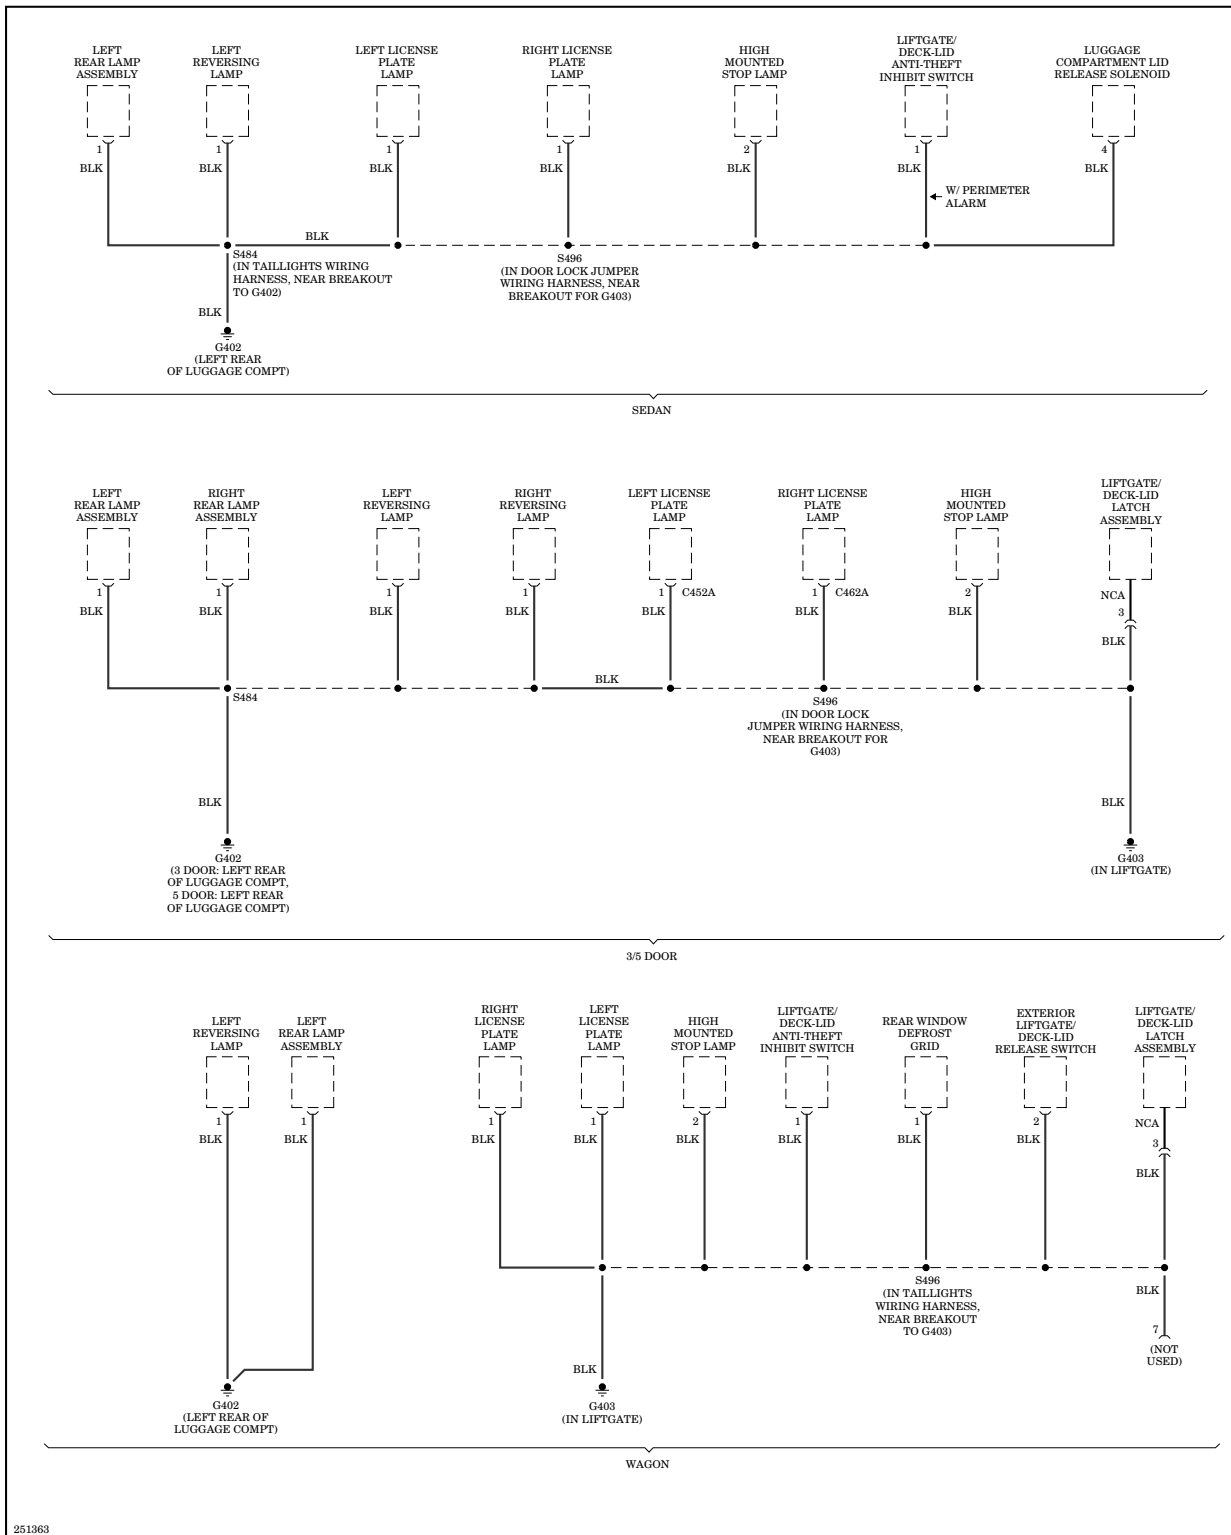

251363

 
Электросхема подключение массы заземления (4 из 4) для Ford Focus ST 2007 - Список элементов:

- (not used)
- 3/5 door
- C452a
- C462a
- Exterior liftgate/ deck-lid release switch
- G402 (3 door: left rear of luggage compt, 5 door: left rear of luggage compt)
- G402 (left rear of luggage compt)
- G403 (in liftgate)
- High mounted stop lamp
- Left license plate lamp

- Left rear lamp assembly
- Left reversing lamp
- Liftgate/ deck-lid anti-theft inhibit switch
- Liftgate/ deck-lid latch assembly
- Luggage compartment lid release solenoid
- Nca
- Rear window defrost grid
- Right license plate lamp
- Right rear lamp assembly
- Right reversing lamp
- S484
- S484 (in taillights wiring harness, near breakout to g402)
- S496 (in door lock jumper wiring harness, near breakout for g403)
- S496 (in taillights wiring harness, near breakout to g403)
- Sedan
- W/ perimeter alarm
- Wagon

Звуковой сигнал Гудок

Электросхема звукового сигнал Гудка для Ford Focus ST 2007

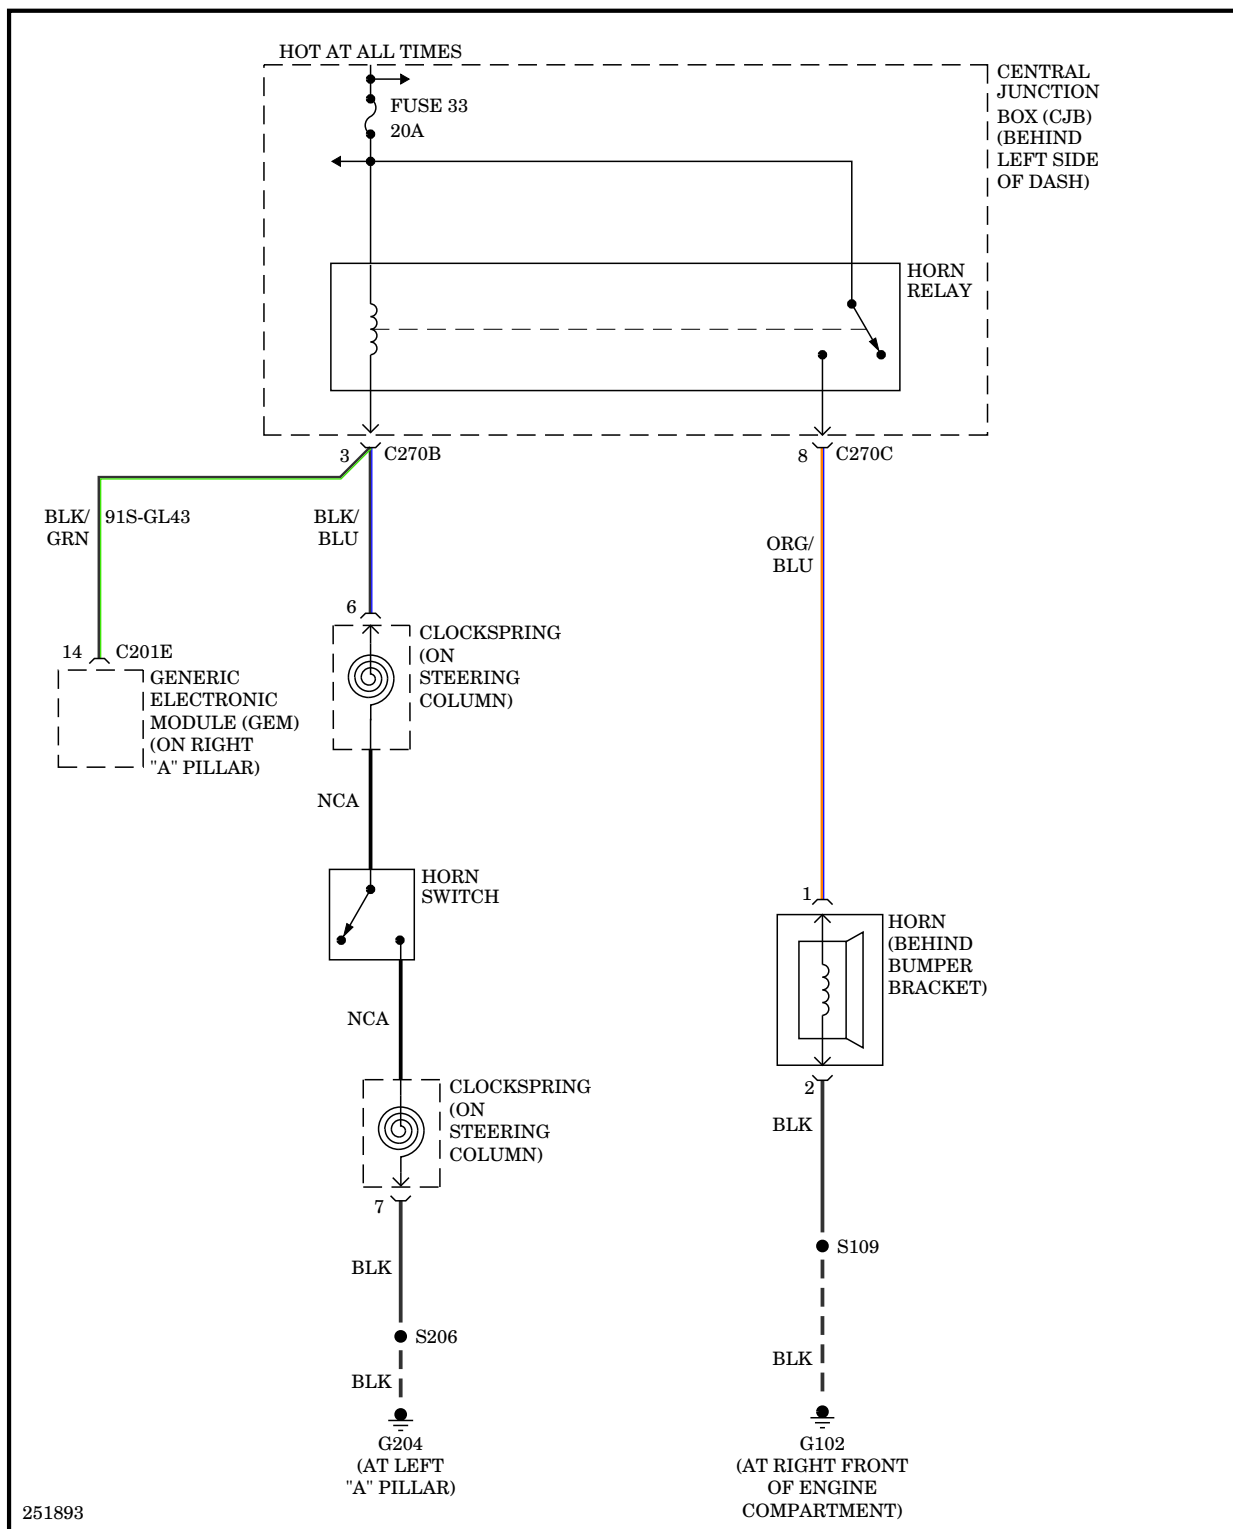


Электросхема звукового сигнал Гудка для Ford Focus ST 2007 - Список элементов:

- 20a
- Box (cjb) (behind left side of dash)
- C201e
- C270b
- C270c
- Central junction
- Clockspring (on steering column)
- Fuse 33
- G102 (at right front of engine compartment)
- G204 (at left "a" pillar)

- Generic electronic module (gem) (on right "a" pillar)
- Horn (behind bumper bracket)
- Horn relay
- Horn switch
- Hot at all times
- Nca
- S109
- S206

Магнитола Мультимедия

 Электросхема магнитолы для Ford Focus ST 2007

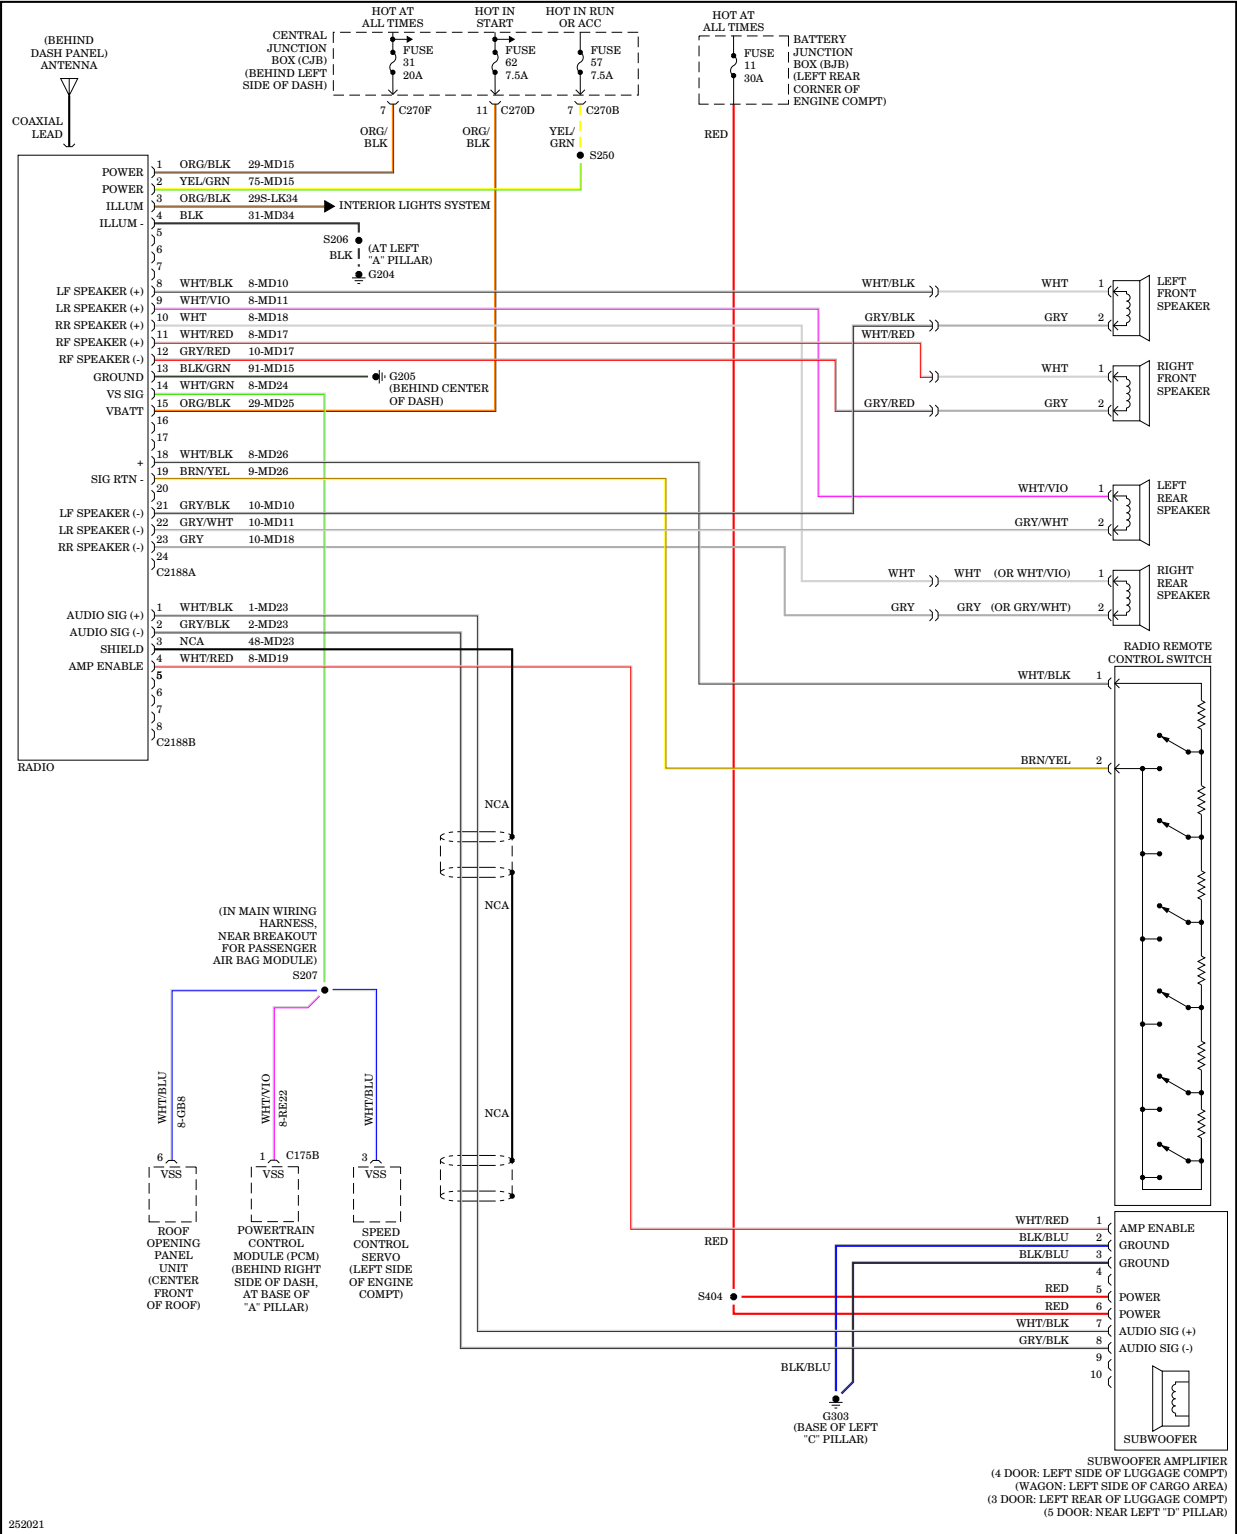




Электросхема магнитолы для Ford Focus ST 2007 - Список элементов:

- (at left "a" pillar)
- (behind dash panel) antenna
- (in main wiring harness, near breakout for passenger air bag module)
- 1-md23
- 10-md10
- 10-md11
- 10-md17
- 10-md18
- 2-md23
- 29-md15
- 29-md25
- 29s-lk34
- 31-md34
- 48-md23
- 75-md15
- 8-gb8
- 8-md10
- 8-md11
- 8-md17
- 8-md18
- 8-md19
- 8-md24
- 8-md26
- 8-re22
- 9-md26
- 91-md15
- Amp enable
- Audio sig (+)
- Audio sig (-)
- Battery junction box (bjb) (left rear corner of engine compt)
- C175b
- C2188a
- C2188b
- C270b
- C270d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Coaxial lead
- Fuse 20a
- Fuse 30a
- Fuse 7.5a
- G204
- G205 (behind center of dash)
- G303 (base of left "c" pillar)
- Ground
- Hot at all times
- Hot in run or acc
- Hot in start
- Illum
- Illum -
- Interior lights system
- Left front speaker
- Left rear speaker
- Lf speaker (+)
- Lf speaker (-)
- Lr speaker (+)
- Lr speaker (-)
- Nca
- Power
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Radio
- Radio remote control switch
- Red
- Rf speaker (+)
- Rf speaker (-)
- Right front speaker
- Right rear speaker
- Roof opening panel unit (center front of roof)

- Rr speaker (+)
- Rr speaker (-)
- S206
- S207
- S250
- S404
- Shield
- Sig rtn -
- Speed control servo (left side of engine compt)
- Subwoofer
- Subwoofer amplifier (4 door: left side of luggage compt) (wagon: left side of cargo area) (3 door: left rear of luggage compt) (5 door: near left "d" pillar)
- Vbatt
- Vs sig
- Vss

Подогрев стекол и зеркал

 Электросхема подогрева зеркал заднего вида для Ford Focus ST 2007

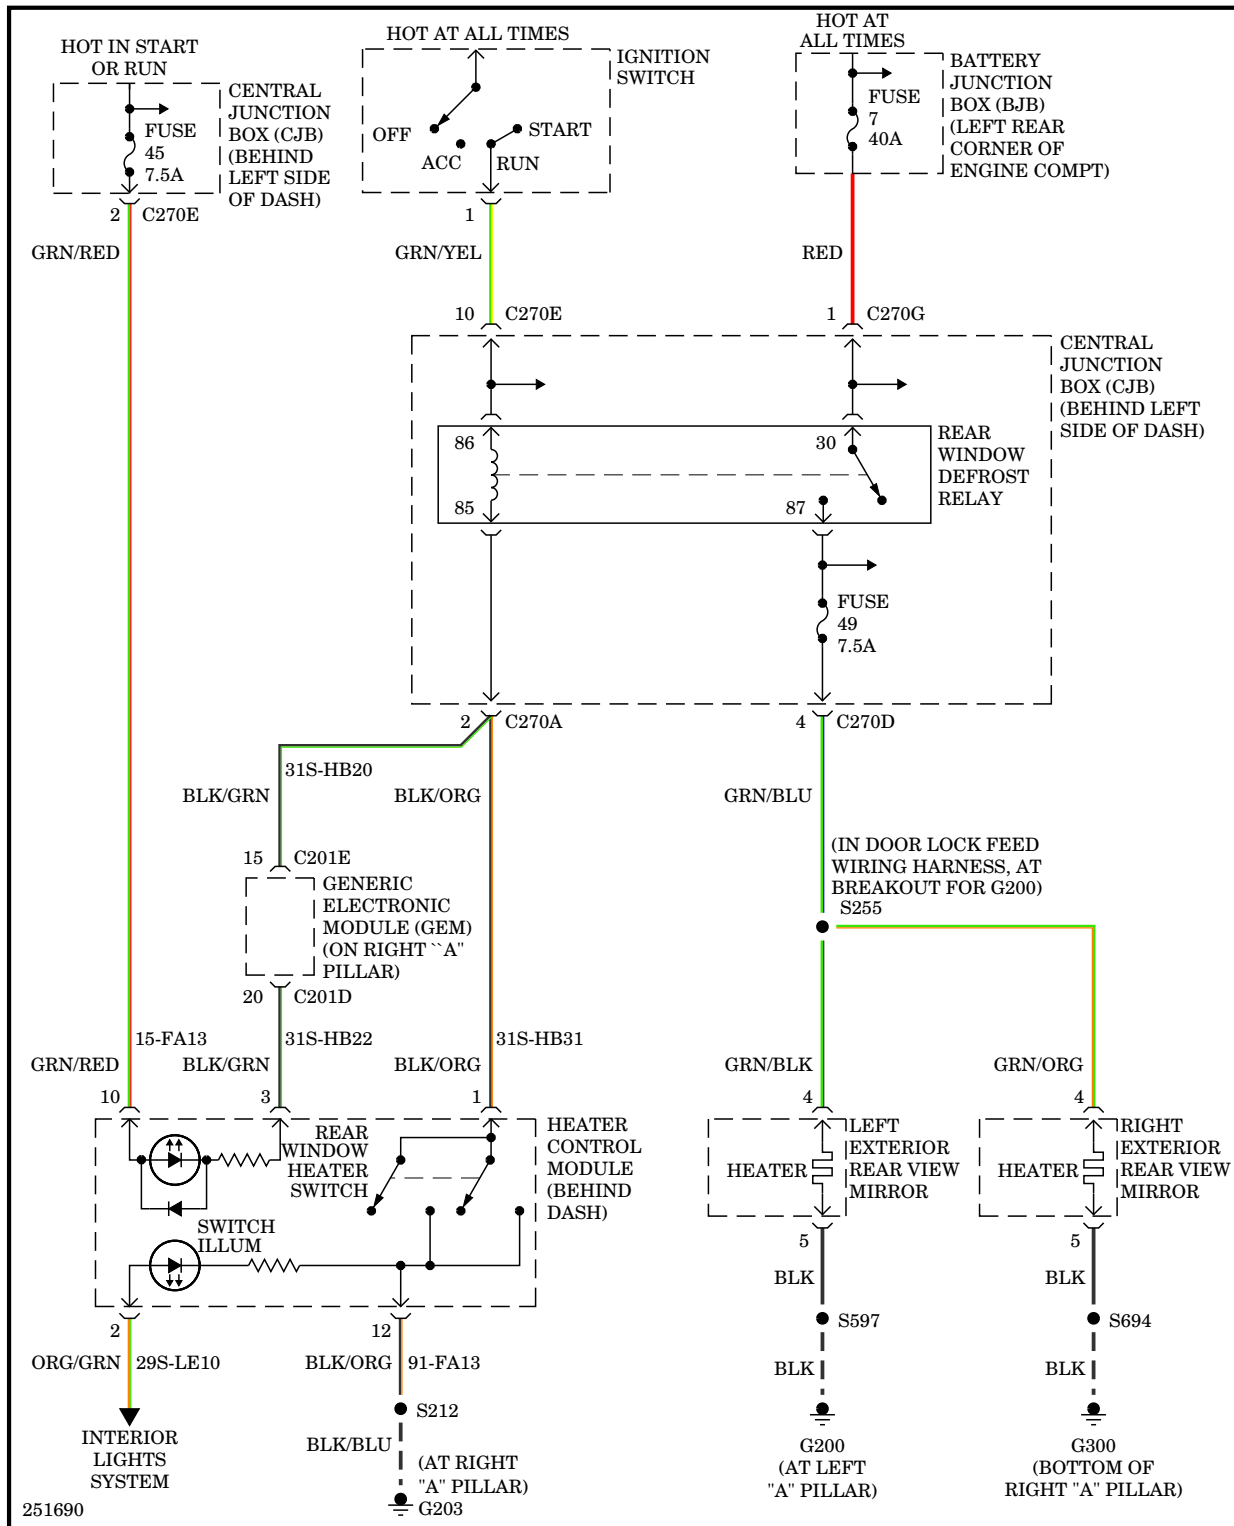


Электросхема подогрева зеркал заднего вида для Ford Focus ST 2007 - Список элементов:

- (at right "a" pillar) g203
- (in door lock feed wiring harness, at breakout for g200)
- 15-fa13
- 31s-hb20
- 31s-hb22
- 31s-hb31
- Acc
- Battery junction box (bjb) (left rear corner of engine compt)
- C201d
- C201e

- C270a
- C270d
- C270e
- C270g
- Central junction box (cjb) (behind left side of dash)
- Fuse 40a
- Fuse 7.5a
- G200 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- Generic electronic module (gem) (on right ``a" pillar)
- Heater
- Heater control module (behind dash)
- Hot at all times
- Hot in start or run
- Ignition switch
- Interior lights system
- Left exterior rear view mirror
- Off
- Rear window defrost relay
- Rear window heater switch
- Red
- Right exterior rear view mirror
- Run
- S212
- S255
- S597
- S694
- Start
- Switch illum

 Электросхема заднего стекла для Ford Focus ST 2007

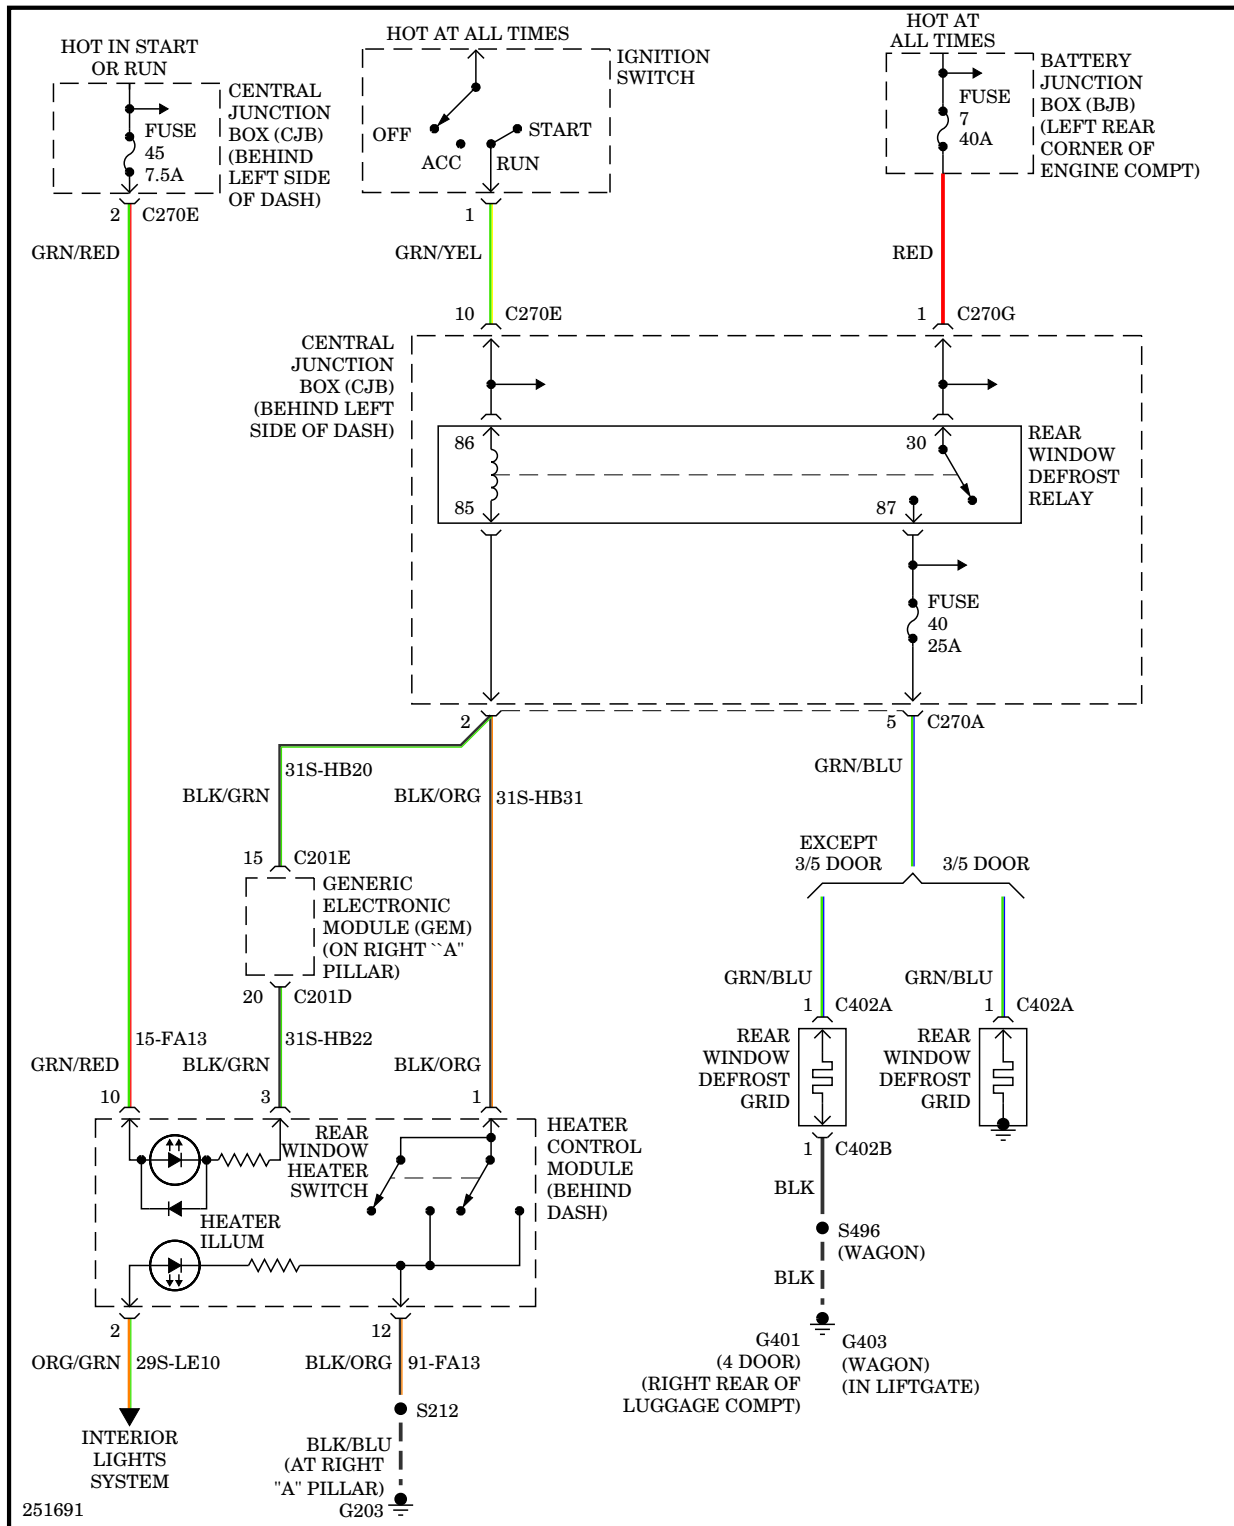


Электросхема заднего стекла для Ford Focus ST 2007 - Список элементов:

- 15-fa13
- 3/5 door
- 31s-hb20
- 31s-hb22
- Acc
- Battery junction box (bjb) (left rear corner of engine compt)
- C201d
- C201e
- C270a
- C270e

- C270g
- C402a
- C402b
- Central junction box (cjb) (behind left side of dash)
- Except 3/5 door
- Fuse 25a
- Fuse 40a
- Fuse 7.5a
- G401 (4 door) (right rear of luggage compt)
- G403 (wagon) (in liftgate)
- Generic electronic module (gem) (on right ``a" pillar)
- Heater control module (behind dash)
- Heater illum
- Hot at all times
- Hot in start or run
- Ignition switch
- Interior lights system
- Off
- Rear window defrost grid
- Rear window defrost relay
- Rear window heater switch
- Red
- Run
- S212
- S496 (wagon)
- Start

ПОДУШКИ БЕЗОПАСНОСТИ AIR BAG

 Электросхема подушек безопасности SRS AirBag (1 из 2) для Ford Focus ST 2007

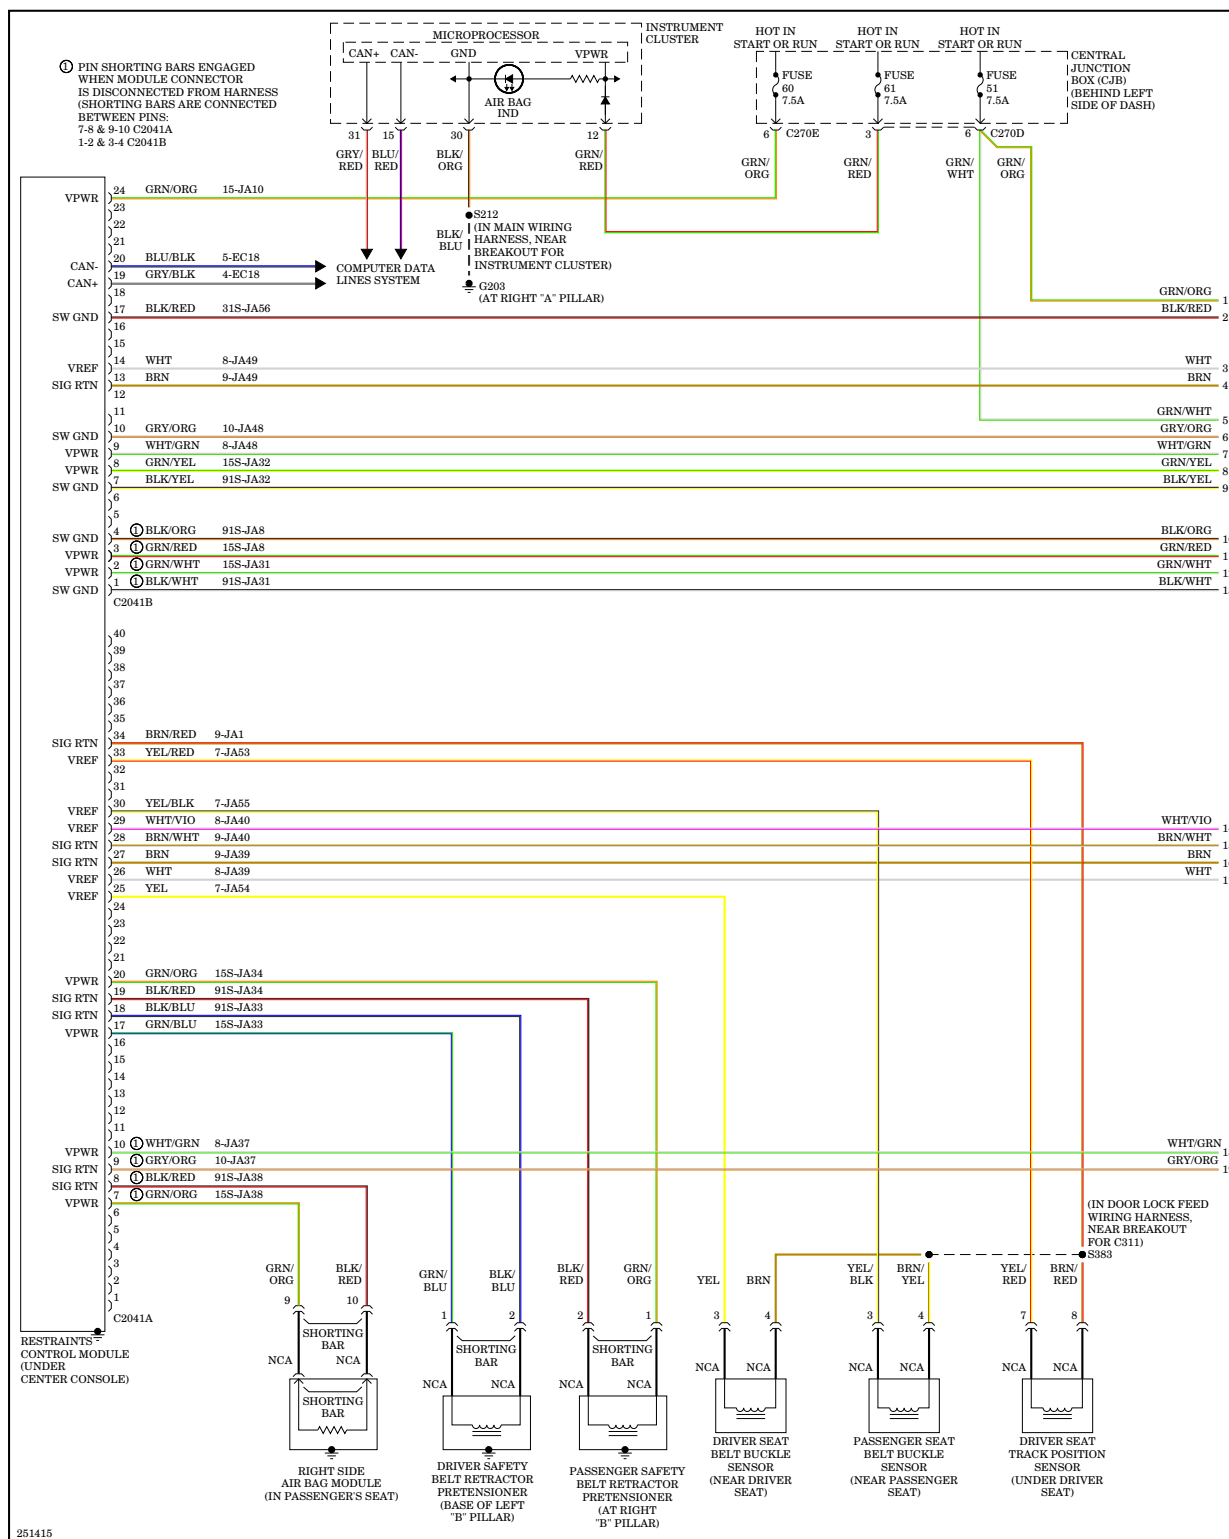


Электросхема подушек безопасности SRS AirBag (1 из 2) для Ford Focus ST 2007 - Список элементов:

- (in door lock feed wiring harness, near breakout for c311) s383
- 10-ja37
- 10-ja48
- 15-ja10
- 15s-ja31
- 15s-ja32
- 15s-ja33
- 15s-ja34
- 15s-ja38
- 15s-ja8

- 31s-ja56
- 4-ec18
- 5-ec18
- 7-ja53
- 7-ja54
- 7-ja55
- 8-ja37
- 8-ja39
- 8-ja40
- 8-ja48
- 8-ja49
- 9-ja1
- 9-ja39
- 9-ja40
- 9-ja49
- 91s-ja31
- 91s-ja32
- 91s-ja33
- 91s-ja34
- 91s-ja38
- 91s-ja8
- Air bag ind
- C2041a
- C2041b
- C270d
- C270e
- Can+
- Can-
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Driver safety belt retractor pretensioner (base of left "b" pillar)
- Driver seat belt buckle sensor (near driver seat)
- Driver seat track position sensor (under driver seat)
- Fuse 7.5a
- G203 (at right "a" pillar)
- Gnd
- Hot in start or run
- Instrument cluster
- Microprocessor
- Nca
- Passenger safety belt retractor pretensioner (at right "b" pillar)
- Passenger seat belt buckle sensor (near passenger seat)
- Pin shorting bars engaged when module connector is disconnected from harness (shorting bars are connected between pins: 7-8 & 9-10 c2041a 1-2 & 3-4 c2041b)
- Restraints control module (under center console)
- Right side air bag module (in passenger's seat)
- Shorting bar
- Sig rtn
- Sw gnd
- Vpwr
- Vref

 Электросхема подушек безопасности SRS AirBag (2 из 2) для Ford Focus ST 2007

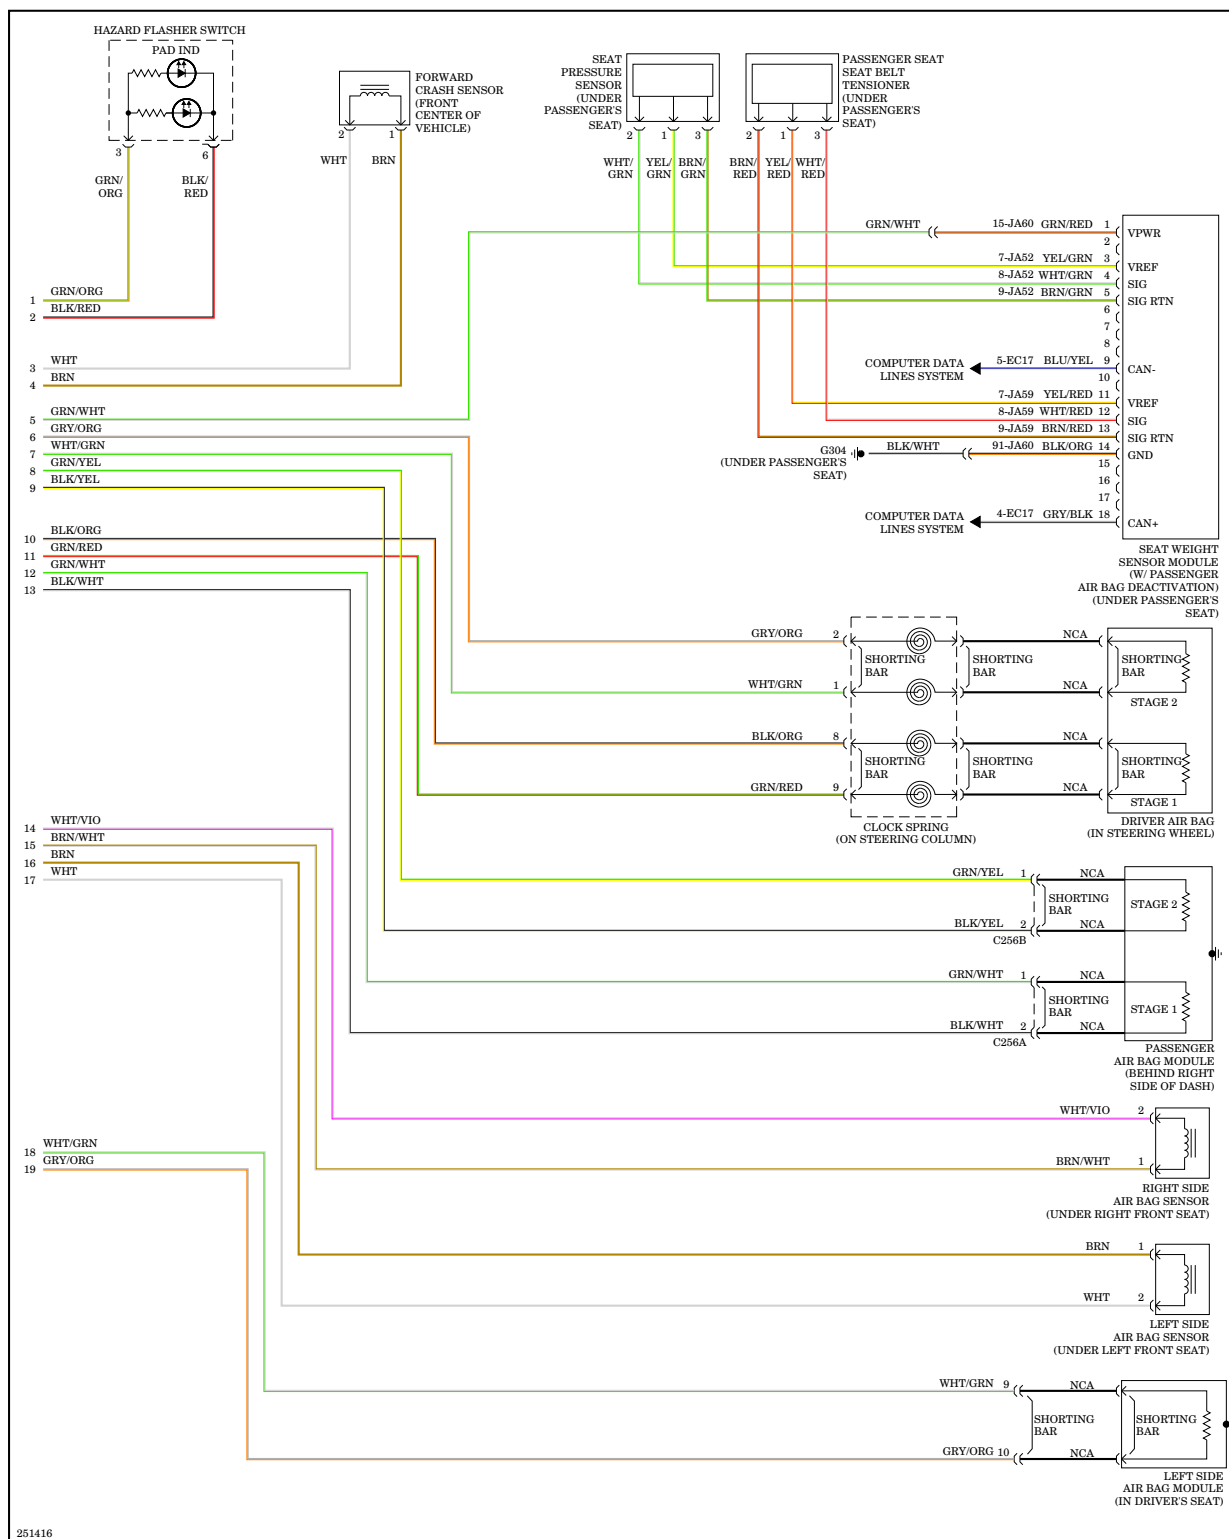


Электросхема подушек безопасности SRS AirBag (2 из 2) для Ford Focus ST 2007 - Список элементов:

- 15-ja60
- 4-ec17
- 5-ec17
- 7-ja52
- 7-ja59
- 8-ja52
- 8-ja59
- 9-ja52
- 9-ja59
- 91-ja60

- C256a
- C256b
- Can+
- Can-
- Clock spring (on steering column)
- Computer data lines system
- Driver air bag (in steering wheel)
- Forward crash sensor (front center of vehicle)
- G304 (under passenger's seat)
- Gnd
- Hazard flasher switch
- Left side air bag module (in driver's seat)
- Left side air bag sensor (under left front seat)
- Nca
- Pad ind
- Passenger air bag module (behind right side of dash)
- Passenger seat seat belt tensioner (under passenger's seat)
- Right side air bag sensor (under right front seat)
- Seat pressure sensor (under passenger's
- Seat weight sensor module (w/ passenger air bag deactivation) (under passenger's seat)
- Seat)
- Shorting bar
- Sig
- Sig rtn
- Stage 1
- Stage 2
- Vpwr
- Vref

ПРЕДУПРЕЖДАЮЩИЕ СИСТЕМЫ

 Электросхема предупреждающей системы для Ford Focus ST 2007

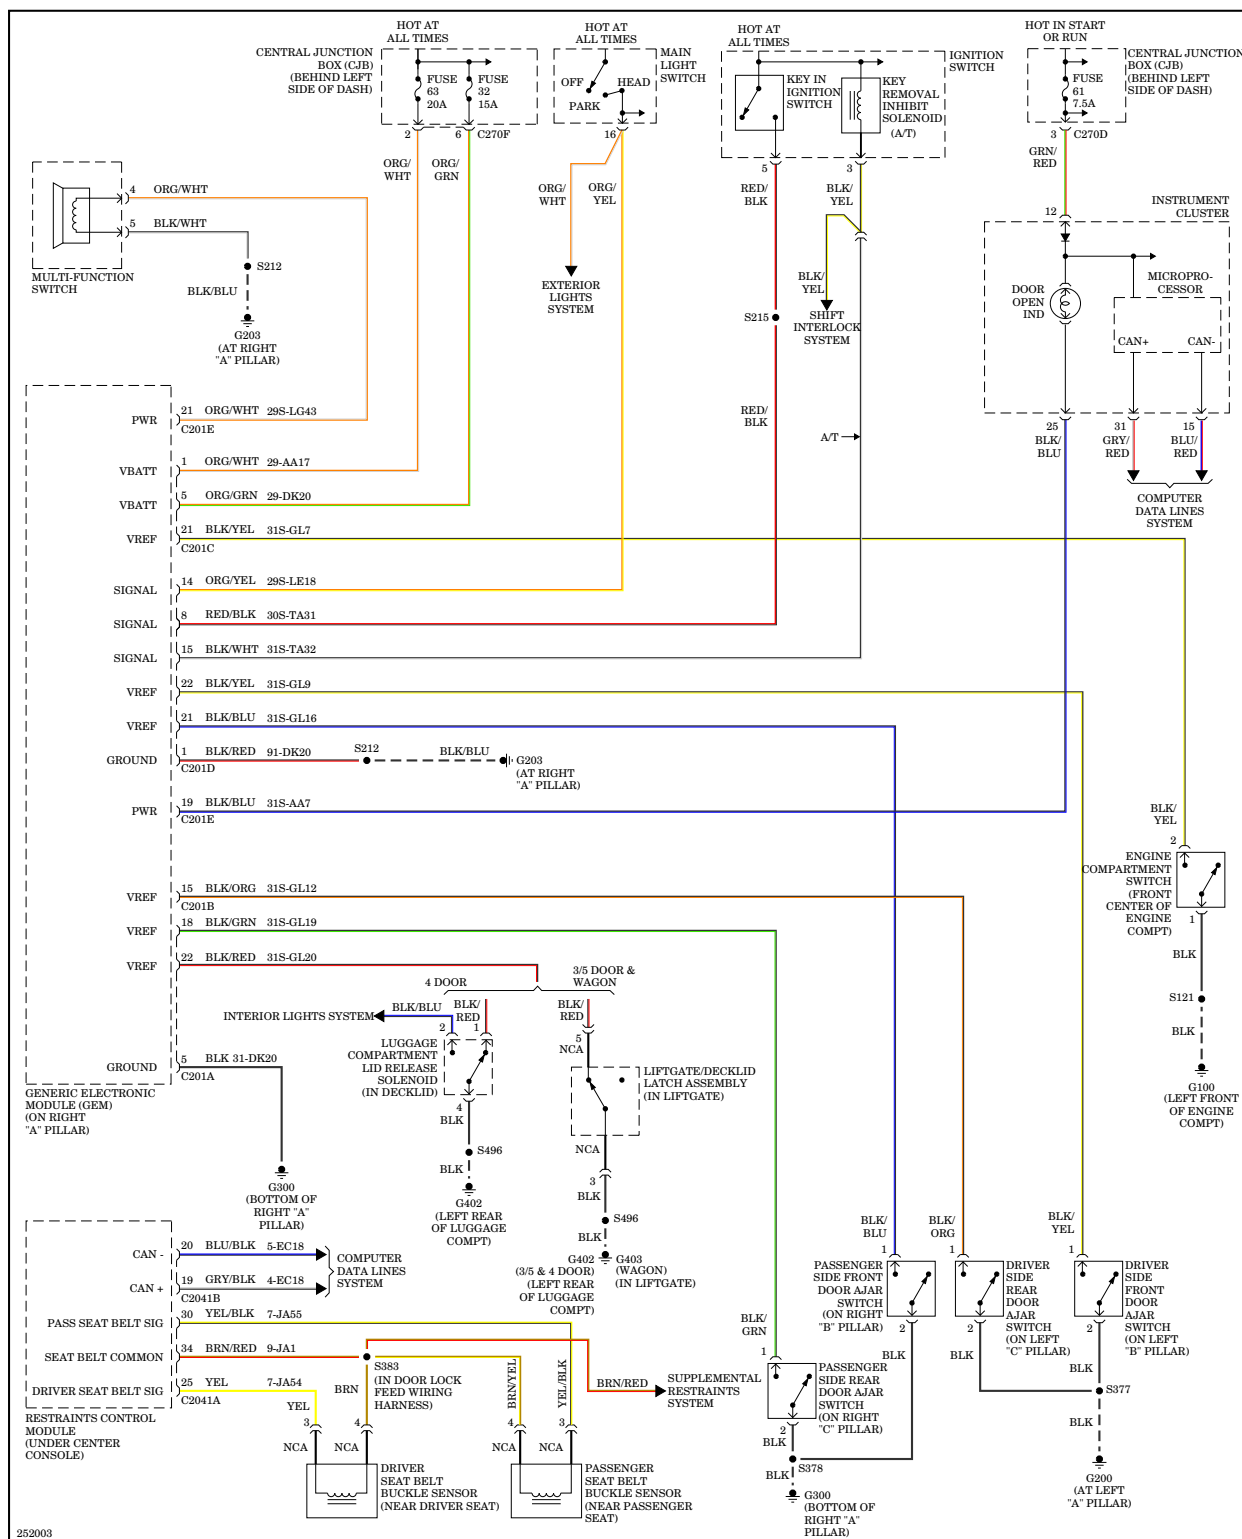

Электросхема предупреждающей системы для Ford Focus ST 2007 - Список элементов:

 
- (a/t)
- 29-aa17
- 29-dk20
- 29s-le18
- 29s-lg43
- 3/5 door & wagon
- 30s-ta31
- 31-dk20
- 31s-aa7
- 31s-gl12

- 31s-gl16
- 31s-gl19
- 31s-gl20
- 31s-gl7
- 31s-gl9
- 31s-ta32
- 4 door
- 4-ec18
- 5-ec18
- 7-ja54
- 7-ja55
- 9-ja1
- 91-dk20
- A/t
- C201a
- C201b
- C201c
- C201d
- C201e
- C2041a
- C2041b
- C270d
- C270f
- Can +
- Can -
- Can+
- Can-
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Door open ind
- Driver seat belt buckle sensor (near driver seat)
- Driver seat belt sig
- Driver side front door ajar switch (on left "b" pillar)
- Driver side rear door ajar switch (on left "c" pillar)
- Engine compartment switch (front center of engine compt)
- Exterior lights system
- Fuse 15a
- Fuse 20a
- Fuse 7.5a
- G100 (left front of engine compt)
- G200 (at left "a" pillar)
- G203 (at right "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (3/5 & 4 door) (left rear of luggage compt)
- G402 (left rear of luggage compt)
- G403 (wagon) (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- Ground
- Head
- Hot at all times
- Hot in start or run
- Ignition switch
- Instrument cluster
- Interior lights system
- Key in ignition switch
- Key removal inhibit solenoid
- Liftgate/decklid latch assembly (in liftgate)
- Luggage compartment lid release solenoid (in decklid)
- Main light switch
- Micropro- cessor
- Multi-function switch
- Nca
- Off
- Park
- Pass seat belt sig
- Passenger seat belt buckle sensor (near passenger seat)
- Passenger side front door ajar switch (on right "b" pillar)
- Passenger side rear door ajar switch (on right "c" pillar)
- Pwr
- Restraints control module (under center console)
- S121
- S212
- S215
- S377
- S383 (in door lock feed wiring harness)

- S496
- Seat belt common
- Shift interlock system
- Signal
- Vbatt
- Vref

ПРИБОРНАЯ ПАНЕЛЬ

Электросхема панели приборов для Ford Focus ST 2007

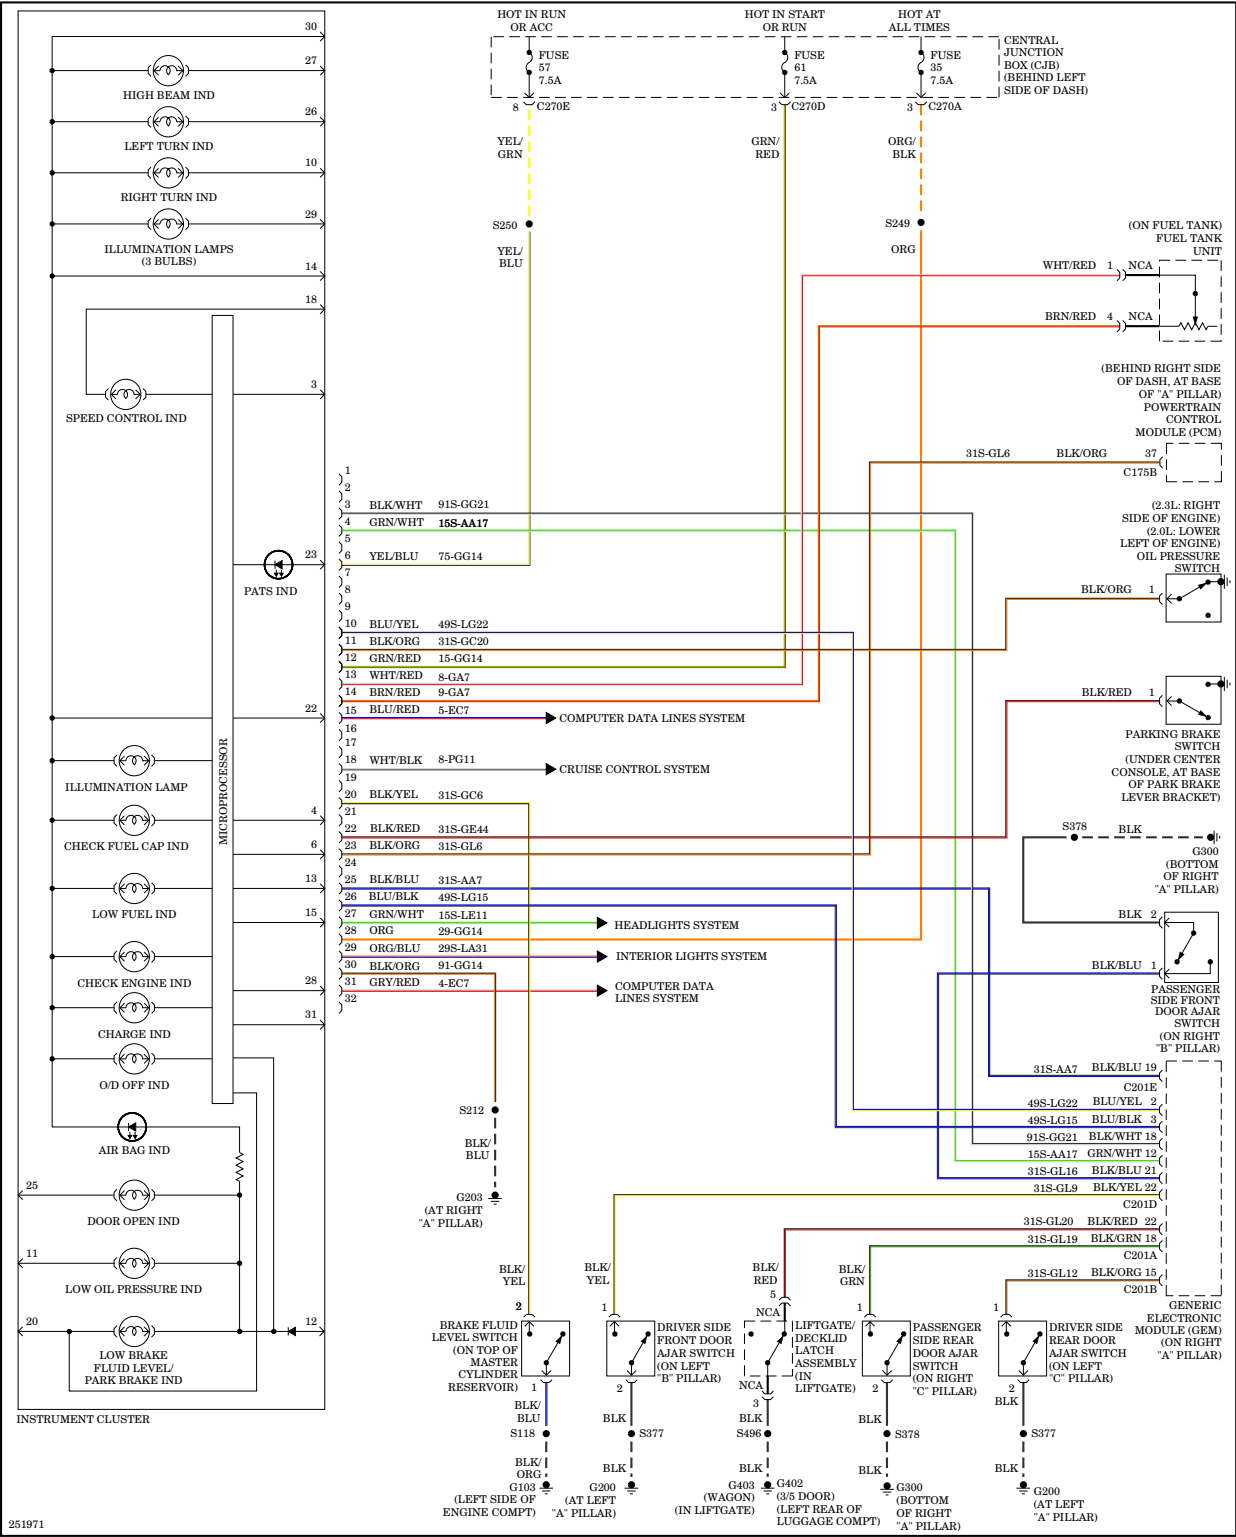




Электросхема панели приборов для Ford Focus ST 2007 - Список элементов:

- (2.3l: right side of engine) (2.0l: lower left of engine) oil pressure switch
- (at left "a" pillar)
- (behind right side of dash, at base of "a" pillar) powertrain control module (pcm)
- (on fuel tank) fuel tank unit
- 15-gg14
- 15s-aa17
- 15s-aa17 15s-aa17
- 15s-le11
- 29-gg14
- 29s-la31
- 31s-aa7
- 31s-gc20
- 31s-gc6
- 31s-ge44
- 31s-gl12
- 31s-gl16
- 31s-gl19
- 31s-gl20
- 31s-gl6
- 31s-gl9
- 4-ec7
- 49s-lg15
- 49s-lg22
- 5-ec7
- 75-gg14
- 8-ga7
- 8-pg11
- 9-ga7
- 91-gg14
- 91s-gg21
- Air bag ind
- Brake fluid level switch (on top of master cylinder reservoir)
- C175b
- C201a
- C201b
- C201d
- C201e
- C270a
- C270d
- C270e
- Central junction box (cjb) (behind left side of dash)
- Charge ind
- Check engine ind
- Check fuel cap ind
- Computer data lines system
- Cruise control system
- Door open ind
- Driver side front door ajar switch (on left "b" pillar)
- Driver side rear door ajar switch (on left "c" pillar)
- Fuse 7.5a
- G103 (left side of engine compt)
- G200
- G200 (at left "a" pillar)
- G203 (at right "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (3/5 door) (left rear of luggage compt)
- G403 (wagon) (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- Headlights system
- High beam ind
- Hot at all times
- Hot in run or acc
- Hot in start or run
- Illumination lamp
- Illumination lamps (3 bulbs)
- Instrument cluster
- Interior lights system
- Left turn ind

- Liftgate/ decklid latch assembly (in liftgate)
- Low brake fluid level/ park brake ind
- Low fuel ind
- Low oil pressure ind
- Microprocessor
- Nca
- O/d off ind
- Parking brake switch (under center console, at base of park brake lever bracket)
- Passenger side front door ajar switch (on right "b" pillar)
- Passenger side rear door ajar switch (on right "c" pillar)
- Pats ind
- Right turn ind
- S118
- S212
- S249
- S250
- S377
- S378
- S496
- Speed control ind

ПРИВОД ЗЕРКАЛ

 Электросхема привода зеркал для Ford Focus ST 2007

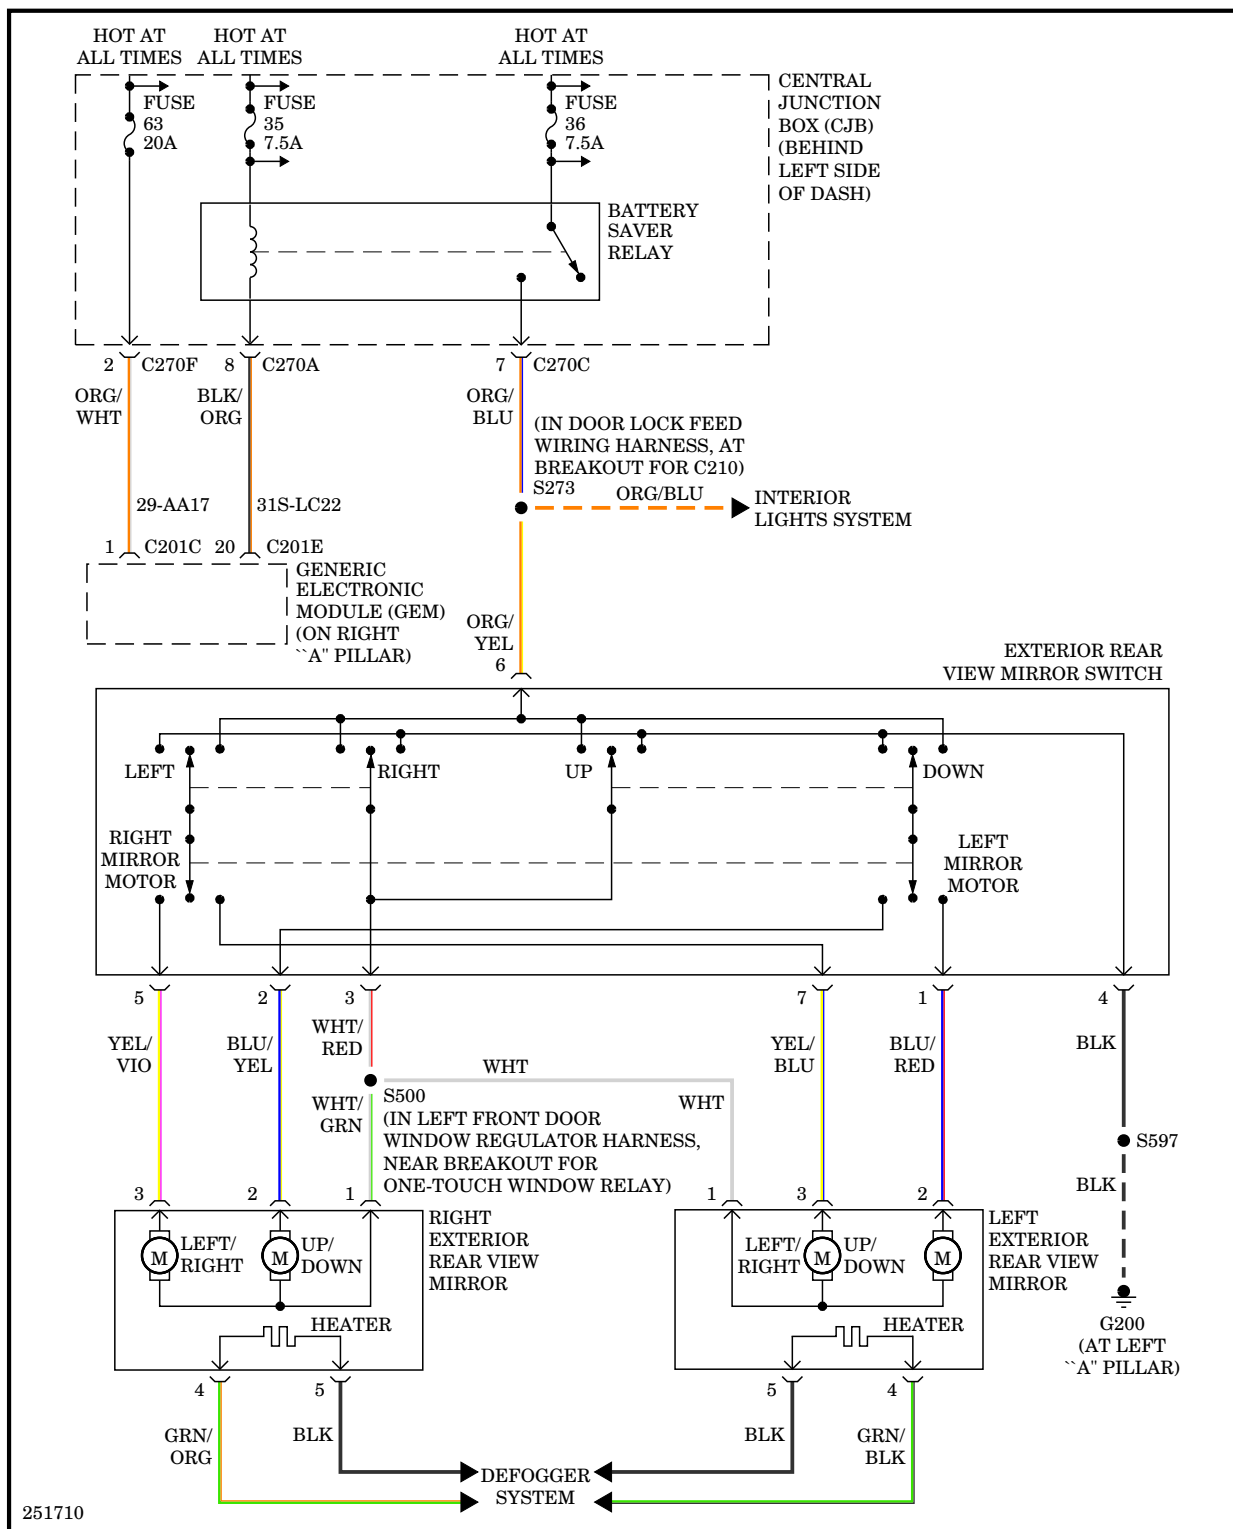


Электросхема привода зеркал для Ford Focus ST 2007 - Список элементов:

- (in left front door window regulator harness, near breakout for one-touch window relay)
- 29-aa17
- 31s-lc22
- Battery saver relay
- C201c
- C201e
- C270a
- C270c
- C270f
- Central junction box (cjb) (behind left side of dash)

- Defogger system
- Down
- Exterior rear view mirror switch
- Fuse 20a
- Fuse 7.5a
- G200 (at left ``a" pillar)
- Generic electronic module (gem) (on right ``a" pillar)
- Heater
- Hot at all times
- Interior lights system
- Left
- Left exterior rear view mirror
- Left mirror motor
- Left/ right
- Right
- Right exterior rear view mirror
- Right mirror motor
- S597
- Up/ down

ПРИВОД ЛЮКА И КРЫШИ

 Электросхема привода люка или крыши для Ford Focus ST 2007

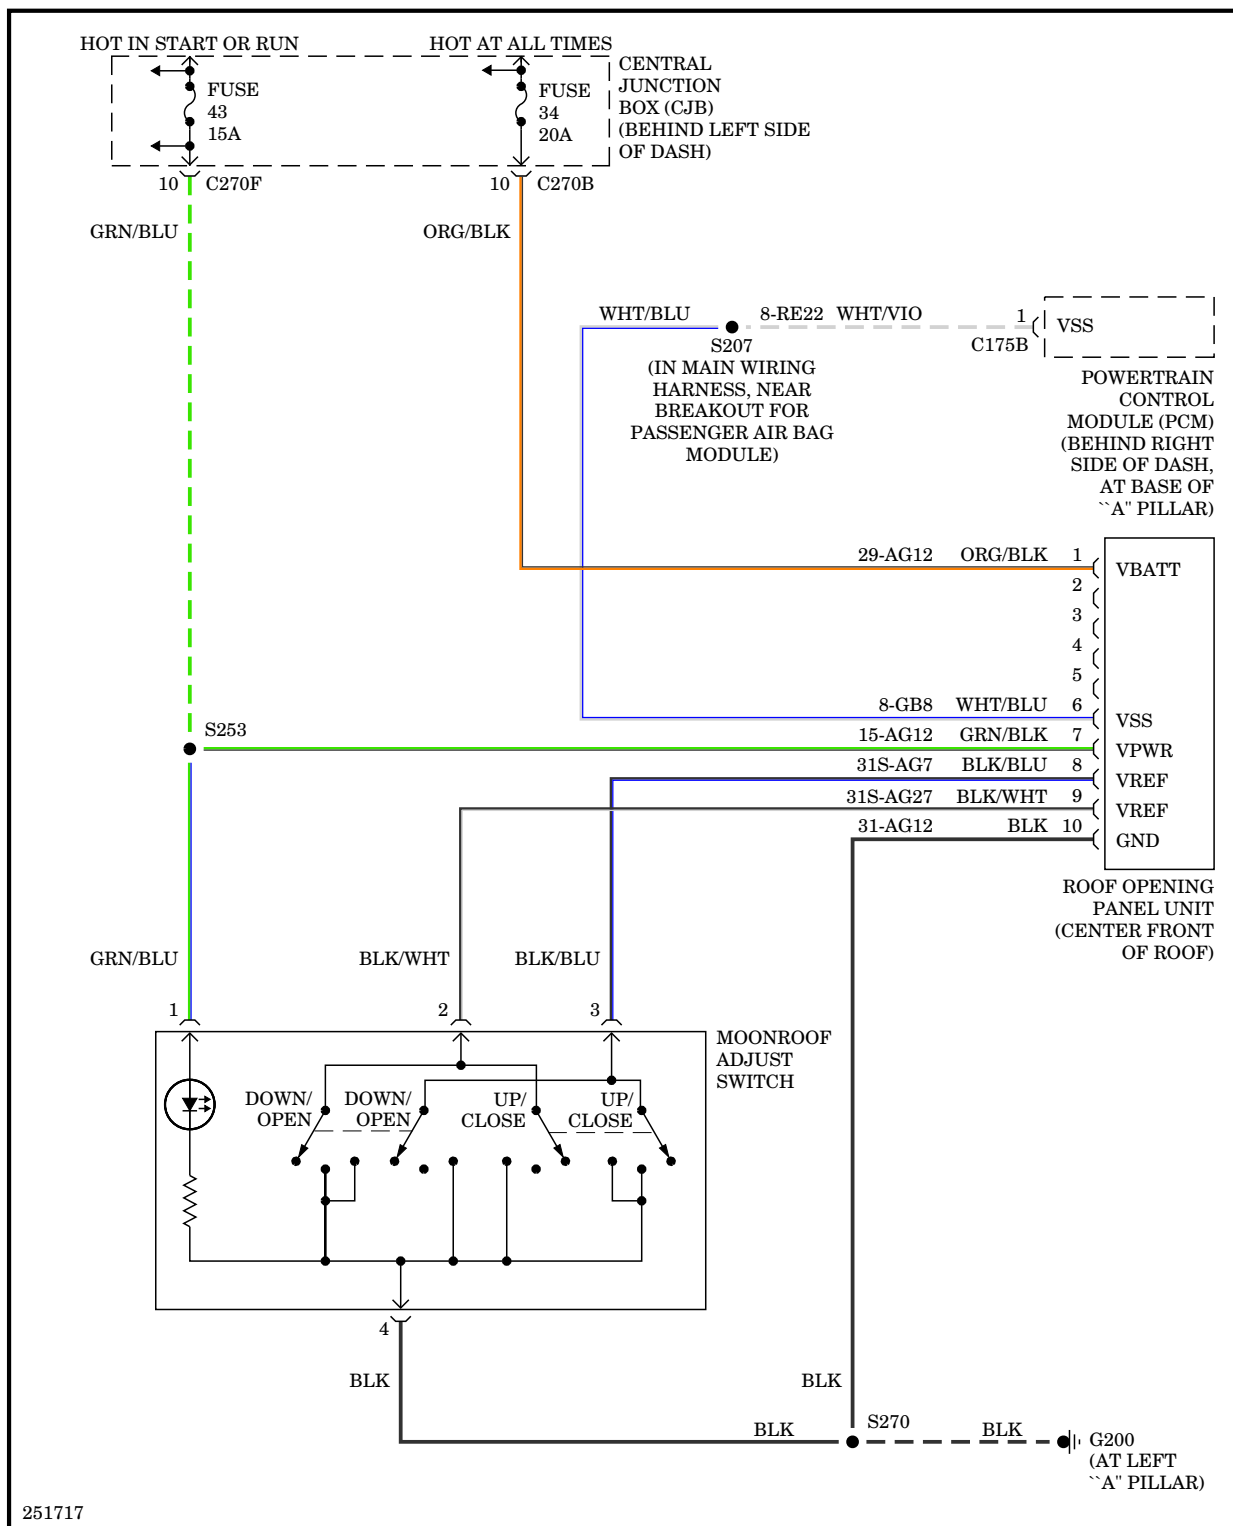

251717

 
Электросхема привода люка или крыши для Ford Focus ST 2007 - Список элементов:

- 15-ag12
- 29-ag12
- 31-ag12
- 31s-ag27
- 31s-ag7
- 8-gb8
- 8-re22
- C175b
- C270b
- C270f

- Central junction box (cjb) (behind left side of dash)
- Down/ open
- Fuse 15a
- Fuse 20a
- G200 (at left ``a" pillar)
- Gnd
- Hot at all times
- Hot in start or run
- Moonroof adjust switch
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Roof opening panel unit (center front of roof)
- S207 (in main wiring harness, near breakout for passenger air bag module)
- S253
- S270
- Up/ close
- Vbatt
- Vpwr
- Vref
- Vss

ПРИВОД СТЕКЛОПОДЪЕМНИКОВ

Электросхема стеклоподъемников, С Задние Окна со стеклоподъемником для Ford Focus ST 2007

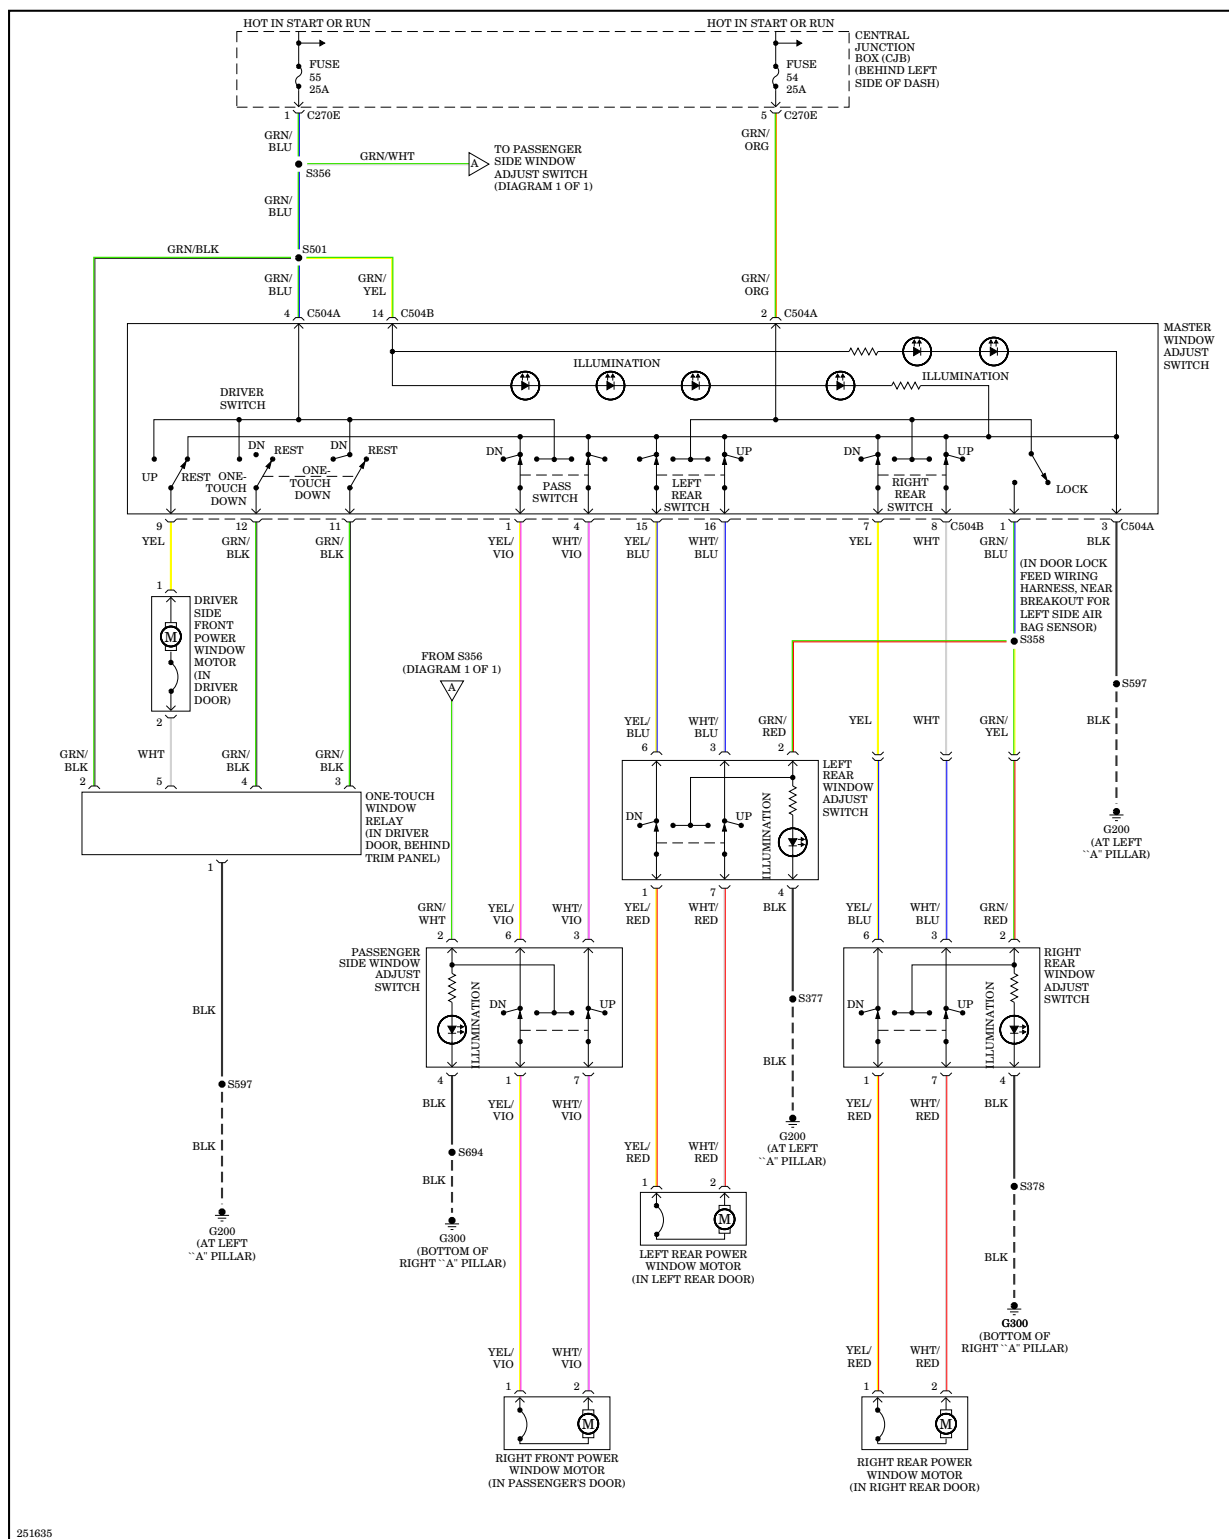

251635

Электросхема стеклоподъемников, С Задние Окна со стеклоподъемником для Ford Focus ST 2007 - Список элементов:

- (in door lock feed wiring harness, near breakout for left side air bag sensor) s358
- C270e
- C504a
- C504b
- Central junction box (cjb) (behind left side of dash)
- Driver side front power window motor (in driver door)
- Driver switch
- From s356 (diagram 1 of 1)
- Fuse 25a

- G200 (at left ``a" pillar)
- G300 (bottom of right ``a" pillar)
- G300 g300 (bottom of right ``a" pillar)
- Hot in start or run
- Illumination
- Left rear power window motor (in left rear door)
- Left rear switch
- Left rear window adjust switch
- Lock
- Master window adjust switch
- One- touch down
- One-touch window relay (in driver door, behind trim panel)
- Pass switch
- Passenger side window adjust switch
- Rest
- Right front power window motor (in passenger's door)
- Right rear power window motor (in right rear door)
- Right rear switch
- Right rear window adjust switch
- S356
- S377
- S378
- S501
- S597
- S694
- To passenger side window adjust switch (diagram 1 of 1)

Электросхема стеклоподъемников, без Задние Окна со стеклоподъемником для Ford Focus ST 2007

 


- C270e
- Central junction box (cjb) (behind left side of dash)
- Driver switch
- Fuse 25a
- G200 (at left ``a" pillar)
- G300 (bottom of right ``a" pillar)
- Hot in start or run
- Illumination
- Left front power window motor (in driver's door)

- Master window adjust switch
- One- touch down
- Passenger side window adjust switch
- Passenger switch
- Rest
- Right front power window motor (in passenger's door)
- S356
- S597
- S694

Противоугонная система Сигнализация

Электросхема открывания авто (1 из 2) для Ford Focus ST 2007

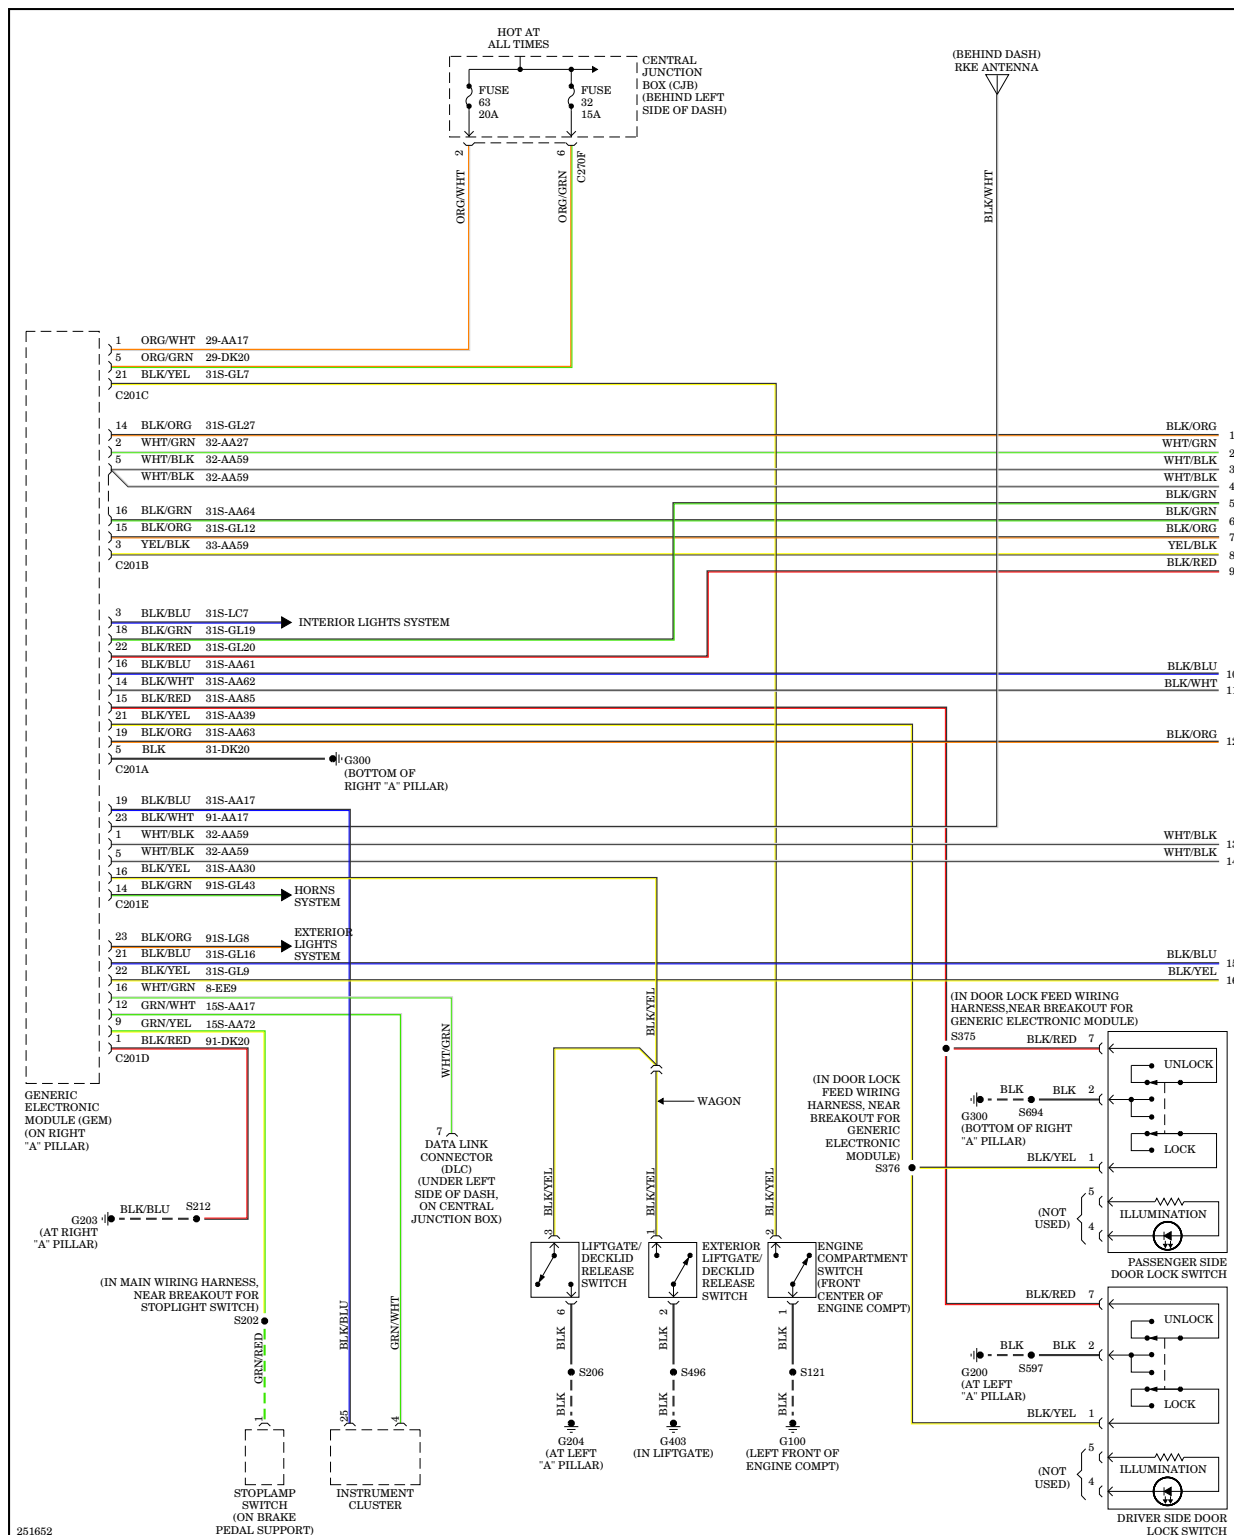




Электросхема открывания авто (1 из 2) для Ford Focus ST 2007 - Список элементов:

- (behind dash) rke antenna
- (in door lock feed wiring harness, near breakout for generic electronic module) s376
- (in door lock feed wiring harness,near breakout for generic electronic module)
- (in main wiring harness, near breakout for stoplight switch) s202
- (not used)
- 15s-aa17
- 15s-aa72
- 29-aa17
- 29-dk20
- 31-dk20
- 31s-aa17
- 31s-aa30
- 31s-aa39
- 31s-aa61
- 31s-aa62
- 31s-aa63
- 31s-aa64
- 31s-aa85
- 31s-gl12
- 31s-gl16
- 31s-gl19
- 31s-gl20
- 31s-gl27
- 31s-gl7
- 31s-gl9
- 31s-lc7
- 32-aa27
- 32-aa59
- 33-aa59
- 8-ee9
- 91-aa17
- 91-dk20
- 91s-gl43
- 91s-lg8
- C201a
- C201b
- C201c
- C201d
- C201e
- C270f
- Central junction box (cjb) (behind left side of dash)
- Data link connector (dlc) (under left side of dash, on central junction box)
- Driver side door lock switch
- Engine compartment switch (front center of engine compt)
- Exterior liftgate/ decklid release switch
- Exterior lights system
- Fuse 15a
- Fuse 20a
- G100 (left front of engine compt)
- G200 (at left "a" pillar)
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G403 (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- Horns system
- Hot at all times
- Illumination
- Instrument cluster
- Interior lights system
- Liftgate/ decklid release switch
- Lock
- Passenger side door lock switch
- S121
- S206
- S212
- S375


- S496
- S597
- S694
- Stoplamp switch (on brake pedal support)
- Unlock
- Wagon

 Электросхема открывания авто (2 из 2) для Ford Focus ST 2007

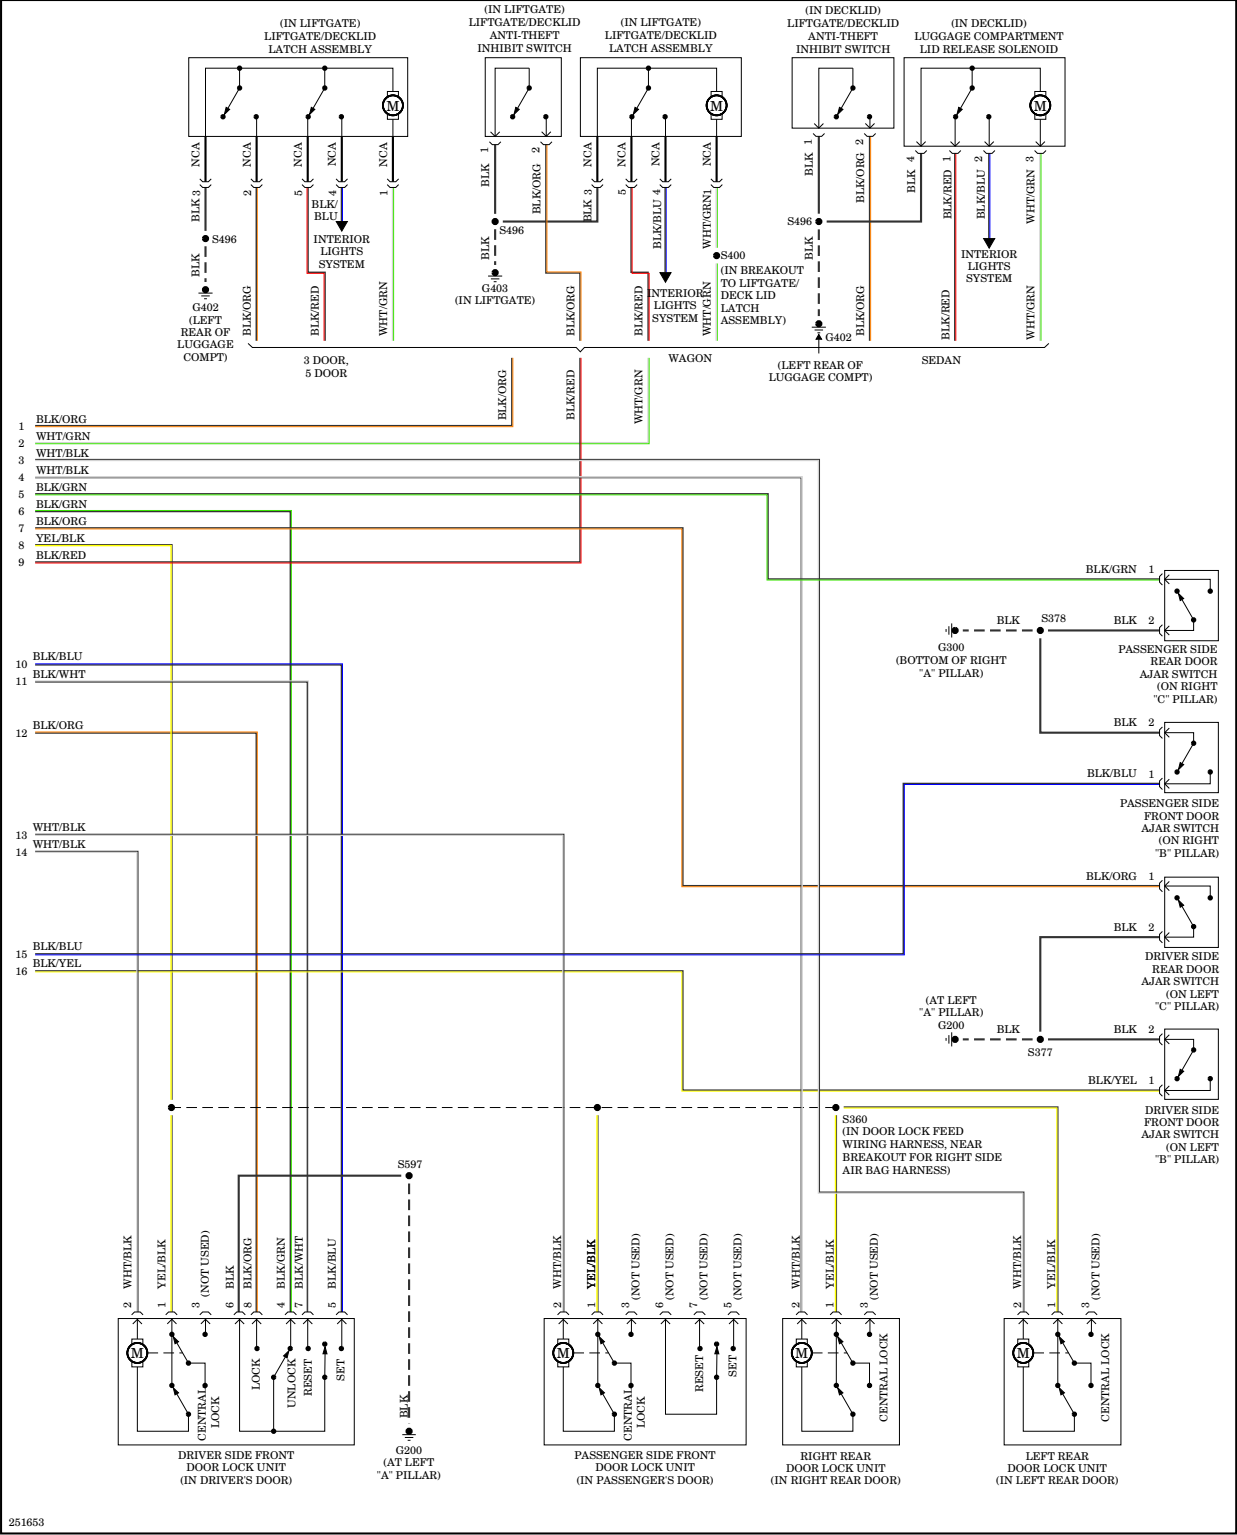

- (at left "a" pillar) g200
- (in breakout to liftgate/ deck lid latch assembly)
- (in decklid) liftgate/decklid anti-theft inhibit switch
- (in decklid) luggage compartment lid release solenoid
- (in liftgate) liftgate/decklid anti-theft inhibit switch
- (in liftgate) liftgate/decklid latch assembly
- (left rear of luggage compt)
- (not used)
- 3 door, 5 door
- Central
- Central lock
- Driver side front door ajar switch (on left "b" pillar)
- Driver side front door lock unit (in driver's door)
- Driver side rear door ajar switch (on left "c" pillar)
- G200 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (left rear of luggage compt)
- G403 (in liftgate)
- Interior lights system
- Left rear door lock unit (in left rear door)
- Lock
- Nca
- Passenger side front door ajar switch (on right "b" pillar)
- Passenger side front door lock unit (in passenger's door)
- Passenger side rear door ajar switch (on right "c" pillar)
- Reset
- Right rear door lock unit (in right rear door)
- S360 (in door lock feed wiring harness, near breakout for right side air bag harness)
- S377
- S378
- S400
- S496
- S597
- Sedan
- Set
- Unlock
- Wagon

 пассивная Электросхема противоугонной сигнализации для Ford Focus ST 2007

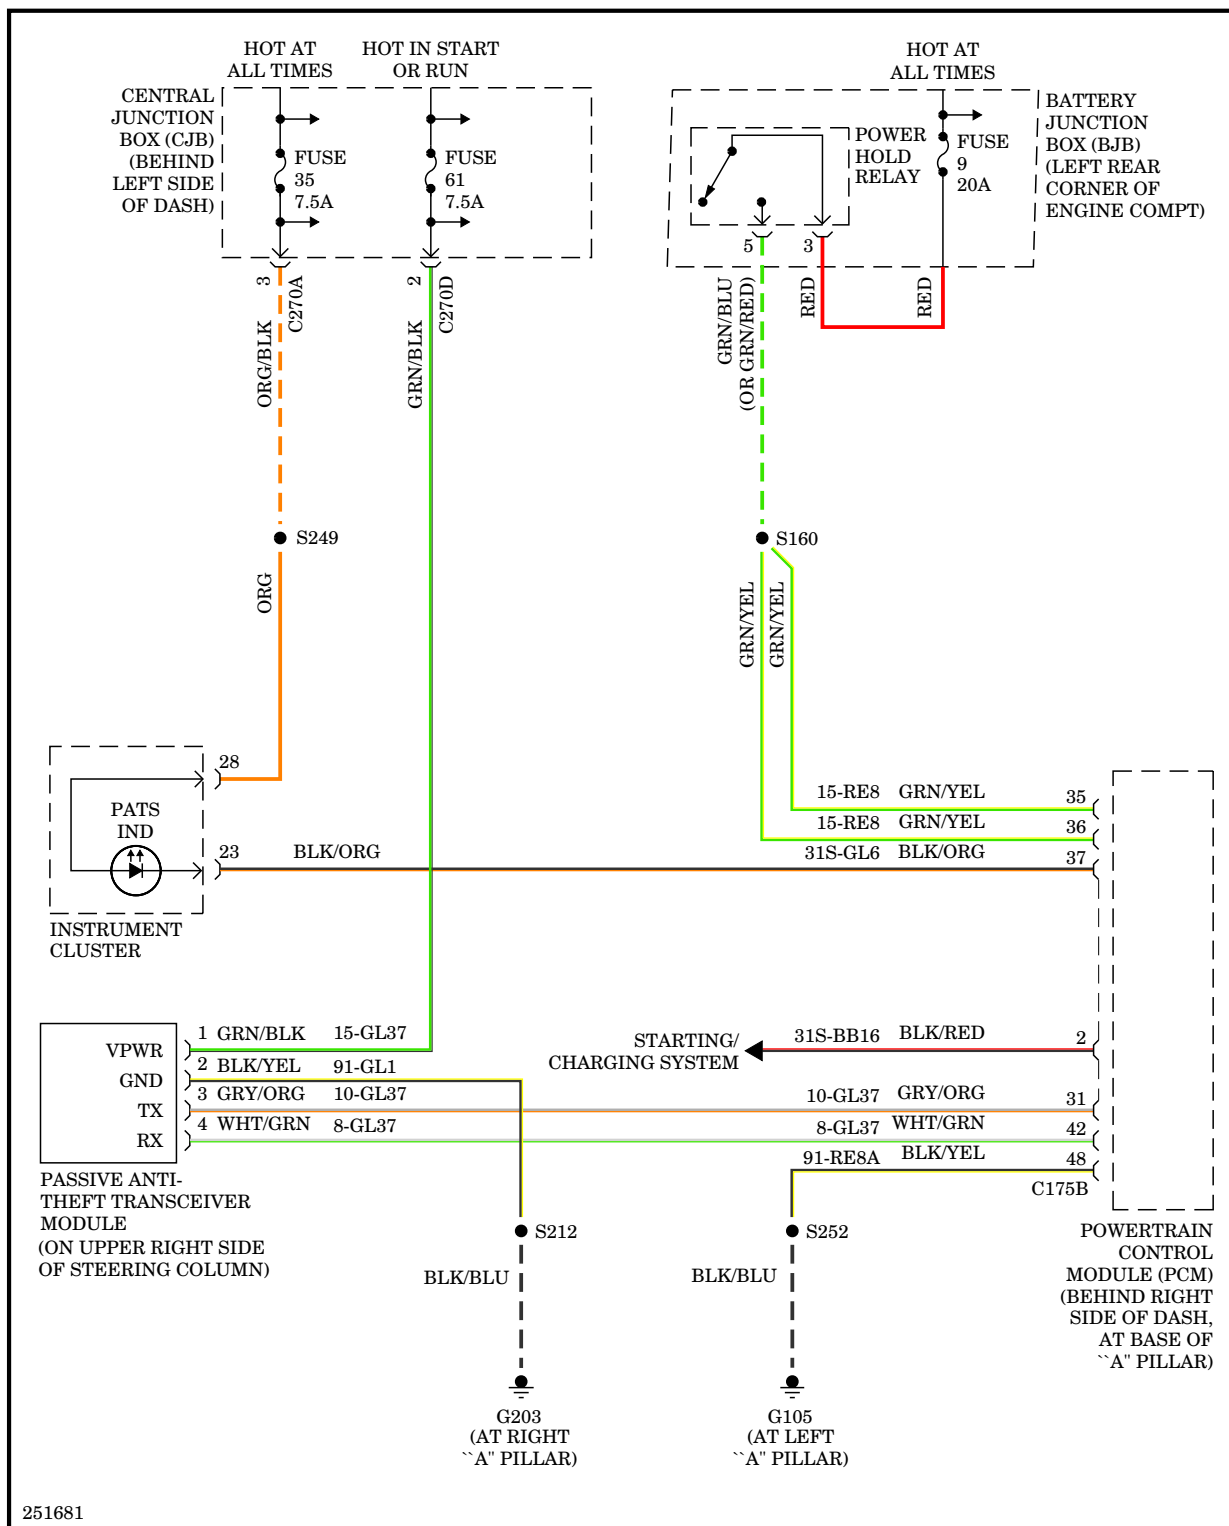

251681

пассивная Электросхема противоугонной сигнализации для Ford Focus ST 2007 - Список элементов:

- 10-gl37
- 15-gl37
- 15-re8
- 31s-bb16
- 31s-gl6
- 8-gl37
- 91-gl1
- 91-re8a
- Battery junction box (bjb) (left rear corner of engine compt)
- C175b

- C270a
- C270d
- Central junction box (cjb) (behind left side of dash)
- Fuse 20a
- Fuse 7.5a
- G105 (at left ``a" pillar)
- G203 (at right ``a" pillar)
- Gnd
- Hot at all times
- Hot in start or run
- Instrument cluster
- Passive anti- theft transceiver module (on upper right side of steering column)
- Pats ind
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- S160
- S212
- S249
- S252
- Starting/ charging system
- Vpwr

СИСТЕМА АНТИБЛОКИРОВОЧНОЙ ТОРМОЗНОЙ СИСТЕМЫ ABS

 
Электросхема антиблокировочной тормозной системы АБС (ABS), С Регулирование тягового усилия для Ford Focus ST 2007



- (left side of engine comp)
- (not used)
- 15-cf6
- 15s-re13
- 30-cf13
- 30-cf6
- 31-cf13
- 31-cf6
- 4-ec7

- 4-ec9
- 5-ec7
- 5-ec9
- 8-cf32
- 8-cf34
- 8-cf38
- 8-cf40
- 9-cf32
- 9-cf34
- 9-cf38
- 9-cf40
- 91s-cf54
- Abs control module (left rear corner of engine compartment, under master cylinder)
- Abs test connector
- Automatic transmission
- Battery junction box (bjb) (left rear corner of engine compt)
- Brake pedal position switch (on brake pedal support bracket)
- C175b
- C270f
- Can h
- Can l
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Fuse 10a
- Fuse 20a
- Fuse 30a
- G101 (left front of engine compt)
- G203 (at right "a" pillar)
- Gearshift lever unit (in center console)
- Gnd
- Hot at all times
- Hot in start or run
- Interior lights system
- Left front wheel speed sensor (on left front wheel hub)
- Left rear wheel speed sensor (except 4 door: at left rear wheel) (4 door: on left rear wheel hub)
- Nca
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Red
- Right front wheel speed sensor (on right front wheel hub)
- Right rear wheel speed sensor (except 4 door: at right rear wheel) (4 door: on right rear wheel hub)
- S141
- S212
- S267 (in engine control harness, near breakout to c211b)
- Speed control servo (left side of engine compt)
- Stop- lamp sig
- Stoplamp switch (on brake pedal support)
- Traction control system (tcs) disable switch
- Vbatt
- Vpwr
- Vref

Электросхема антиблокировочной тормозной системы АБС (ABS), без Регулирование тягового усилия для Ford Focus ST 2007

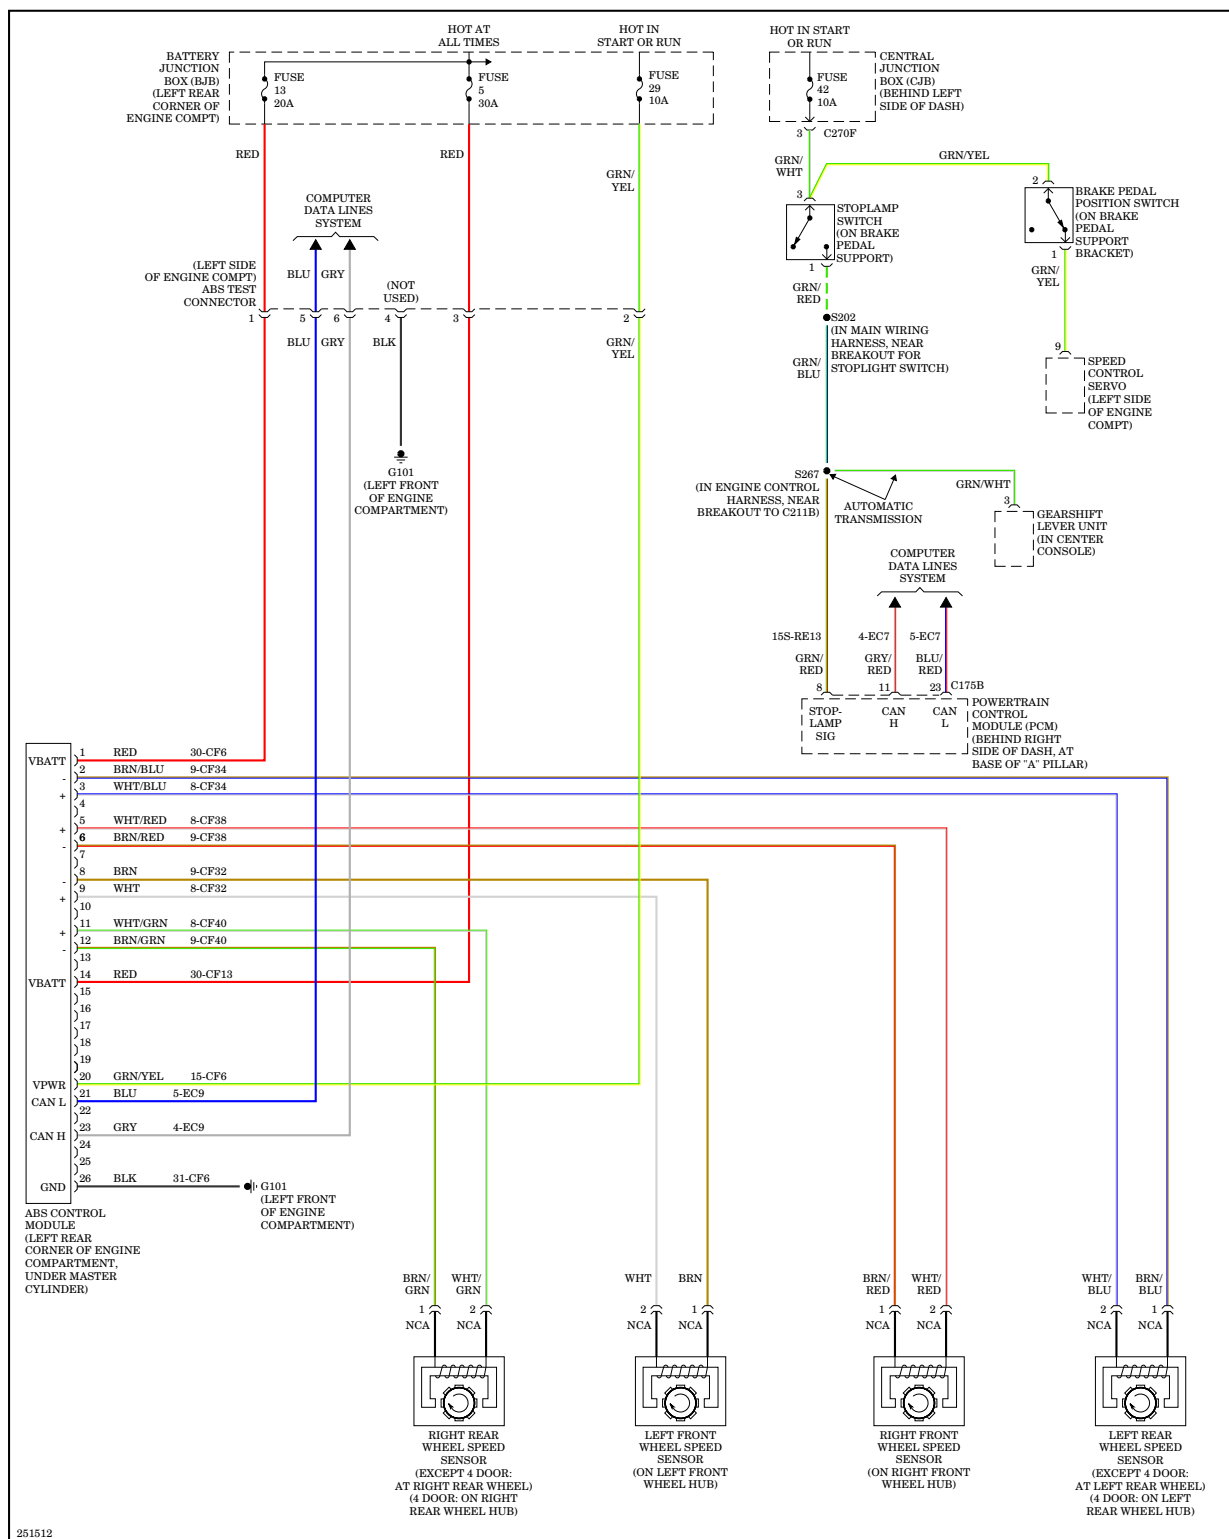


Электросхема антиблокировочной тормозной системы АБС (ABS), без Регулирование тягового усилия для Ford Focus ST 2007 - Список элементов:

- (left side of engine compt) abs test connector
- (not used)
- 15-cf6
- 15s-re13
- 30-cf13
- 30-cf6
- 31-cf6
- 4-ec7
- 4-ec9

- 5-ec7
- 5-ec9
- 8-cf32
- 8-cf34
- 8-cf38
- 8-cf40
- 9-cf32
- 9-cf34
- 9-cf38
- 9-cf40
- Abs control module (left rear corner of engine compartment, under master cylinder)
- Automatic transmission
- Battery junction box (bjb) (left rear corner of engine compt)
- Brake pedal position switch (on brake pedal support bracket)
- C175b
- C270f
- Can h
- Can l
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Fuse 10a
- Fuse 20a
- Fuse 30a
- G101 (left front of engine compartment)
- Gearshift lever unit (in center console)
- Gnd
- Hot at all times
- Hot in start or run
- Left front wheel speed sensor (on left front wheel hub)
- Left rear wheel speed sensor (except 4 door: at left rear wheel) (4 door: on left rear wheel hub)
- Nca
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Red
- Right front wheel speed sensor (on right front wheel hub)
- Right rear wheel speed sensor (except 4 door: at right rear wheel) (4 door: on right rear wheel hub)
- S267 (in engine control harness, near breakout to c211b)
- Speed control servo (left side of engine compt)
- Stop- lamp sig
- Stoplamp switch (on brake pedal support)
- Vbatt
- Vpwr

СИСТЕМА КОНДИЦИОНЕРА

 Электросхема кондиционера с ручным управлением (1 из 2) для Ford Focus ST 2007

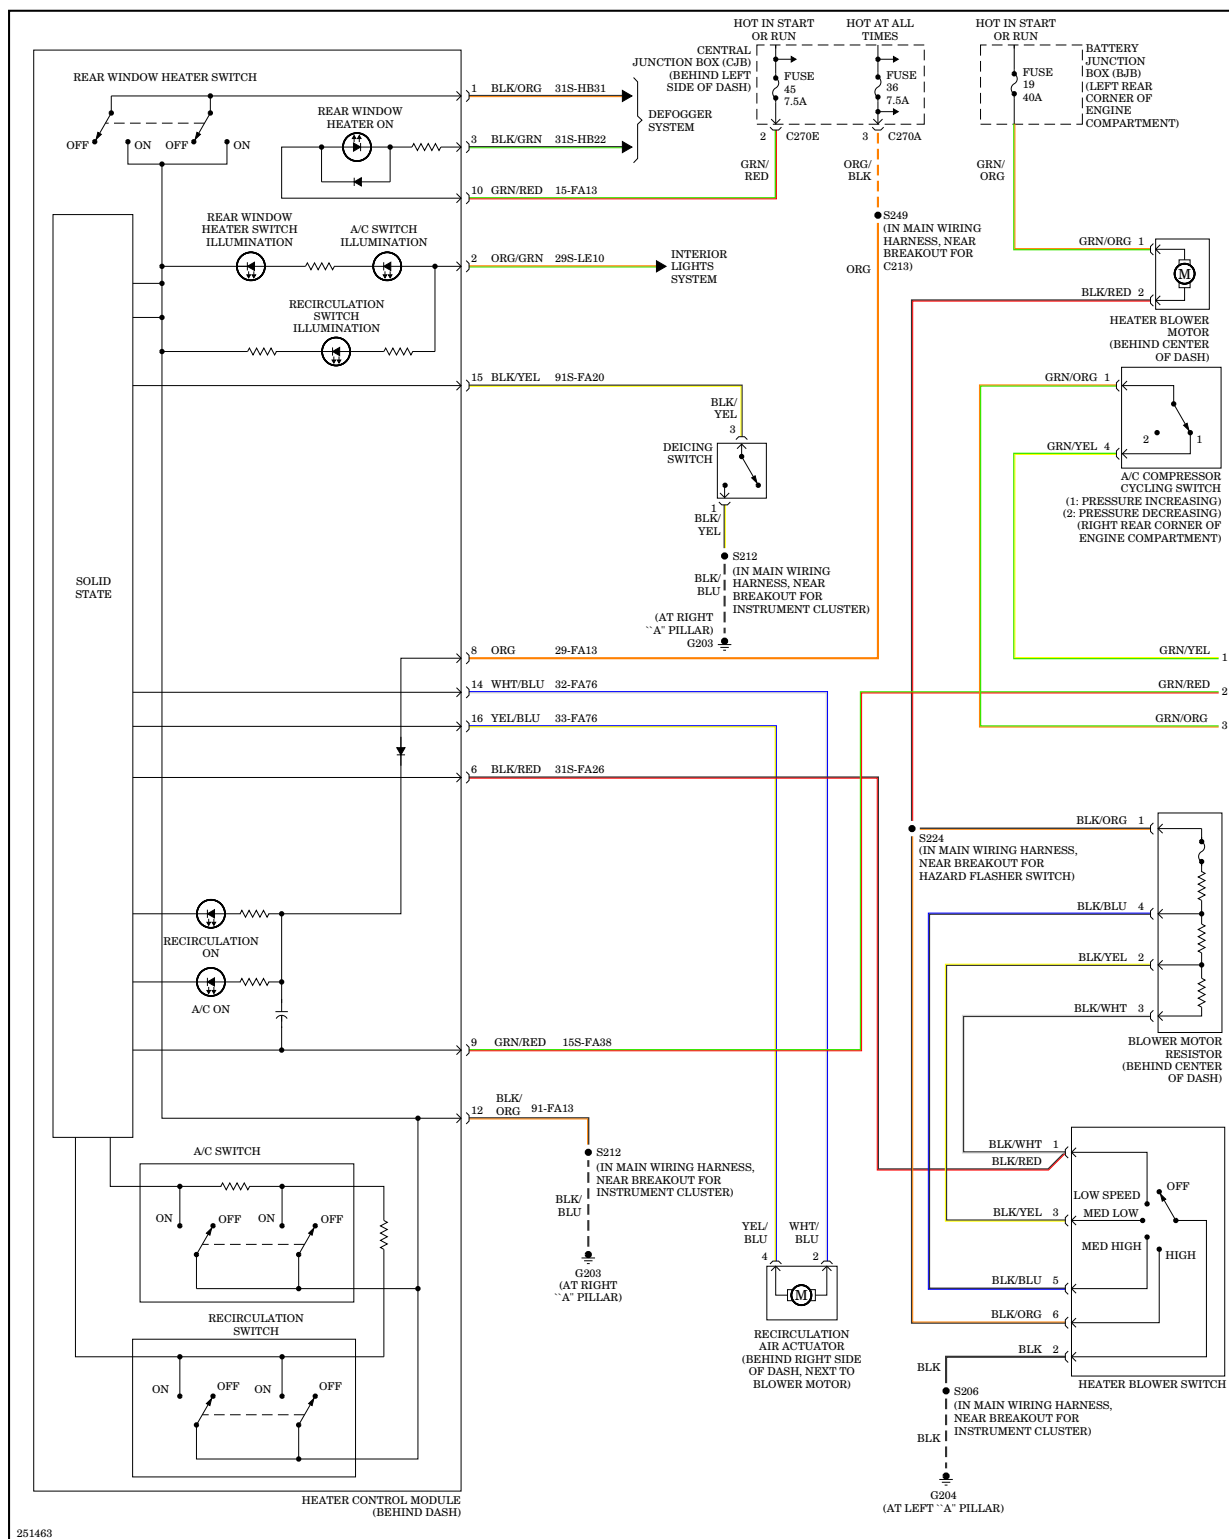

Электросхема кондиционера с ручным управлением (1 из 2) для Ford Focus ST 2007 - Список элементов:

- (at left ``a" pillar)
- (at right ``a" pillar) g203
- (in main wiring harness, near breakout for instrument cluster)
- 15-fa13
- 15s-fa38
- 29-fa13
- 29s-le10
- 31s-fa26
- 31s-hb22

 
- 31s-hb31
- 32-fa76
- 33-fa76
- 91-fa13
- 91s-fa20
- A/c compressor cycling switch (1: pressure increasing) (2: pressure decreasing) (right rear corner of engine compartment)
- A/c on
- A/c switch
- A/c switch illumination
- Battery junction box (bjb) (left rear corner of engine compartment)
- Blower motor resistor (behind center of dash)
- C270a
- C270e
- Central junction box (cjb) (behind left side of dash)
- Defogger system
- Deicing switch
- Fuse 40a
- Fuse 7.5a
- G203 (at right ``a" pillar)
- G204
- Heater blower motor (behind center of dash)
- Heater blower switch
- Heater control module (behind dash)
- High
- Hot at all times
- Hot in start or run
- Interior lights system
- Low speed
- Med high
- Med low
- Off
- Rear window heater on
- Rear window heater switch
- Rear window heater switch illumination
- Recirculation air actuator (behind right side of dash, next to blower motor)
- Recirculation on
- Recirculation switch
- Recirculation switch illumination
- S206
- S212
- S224 (in main wiring harness, near breakout for hazard flasher switch)
- Solid state

Электросхема кондиционера с ручным управлением (2 из 2) для Ford Focus ST 2007

- 31s-fa11
- 31s-pa17
- 31s-pa21
- 31s-pa7
- 8-pa13
- 8-rj33
- 87a
- 9-re8
- A/c clutch field coil (on a/c compressor)
- A/c clutch relay
- A/c com- pressor clutch diode
- Accs
- Acpsw
- Battery junction box (bjb) (left rear corner of engine compartment)
- C175b
- C175e
- C270c
- Central junction box (cjb) (behind left side of dash)
- Dual pressure switch
- Engine cooling fan motor (on radiator)
- Engine cooling fan relay
- Engine cooling fan resistor (front of engine compartment, near engine cooling fan)
- Fuse 10a
- Fuse 20a
- Fuse 2a
- Fuse 50a
- G100 (left front of engine compartment)
- G102 (right front of engine compartment)
- G103 (left side of engine compartment)
- High pressure
- High speed fan control relay
- Hot at all times
- Hot in start or run
- Low speed cooling fan relay b
- Low speed engine cooling fan relay a
- Nca
- Nca s189 (in engine control sensor extension wiring harness, at breakout for c1026)
- Near battery junction box) s107
- Near breakout to left front side light)
- Normal pressure
- Power distribution system
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- Rly ctrl
- S1002 (near breakout to c134)
- S117
- S118 (in junction box wiring harness, near battery junction box)
- S121 (in junction box wiring harness, near breakout to left front side light)
- S134
- S163 (in engine control wiring harness, near breakout for c144)
- Second cooling fan motor (on radiator)
- Sig rtn
- Vref

СИСТЕМА КРУИЗКОНТРОЛЯ

Электросхема системы круизконтроля, А/Т для Ford Focus ST 2007

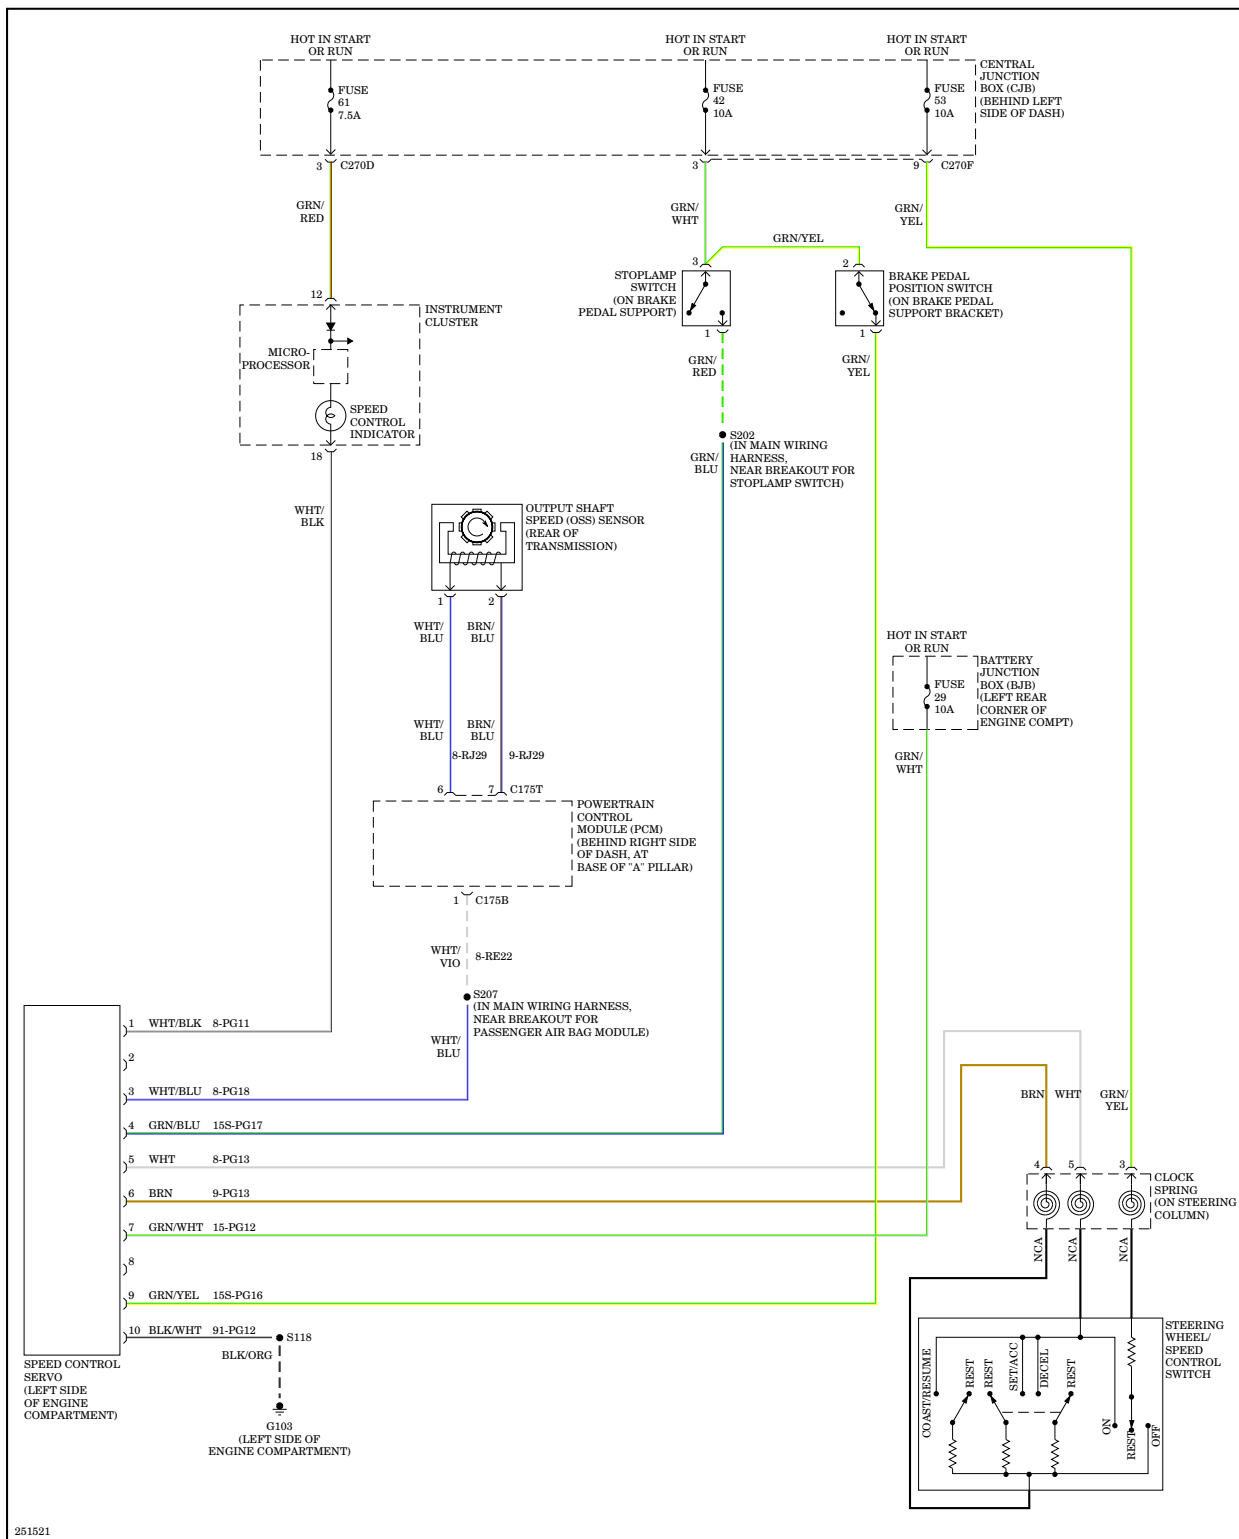


Электросхема системы круизконтроля, А/Т для Ford Focus ST 2007 - Список элементов:

- 15-pg12
- 15s-pg16
- 15s-pg17
- 8-pg11
- 8-pg13
- 8-pg18
- 8-re22
- 8-rj29
- 9-pg13
- 9-rj29

- 91-pg12
- Battery junction box (bjb) (left rear corner of engine compt)
- Brake pedal position switch (on brake pedal support bracket)
- C175b
- C175t
- C270d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Clock spring (on steering column)
- Coast/resume
- Decel
- Fuse 10a
- Fuse 7.5a
- G103 (left side of engine compartment)
- Hot in start or run
- Instrument cluster
- Micro- processor
- Nca
- Off
- Output shaft speed (oss) sensor (rear of transmission)
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Rest
- S118
- S202 (in main wiring harness, near breakout for stoplamp switch)
- S207 (in main wiring harness, near breakout for passenger air bag module)
- Set/acc
- Speed control indicator
- Speed control servo (left side of engine compartment)
- Steering wheel/ speed control switch
- Stoplamp switch (on brake pedal support)

 Электросхема системы круизконтроля, М/Т для Ford Focus ST 2007

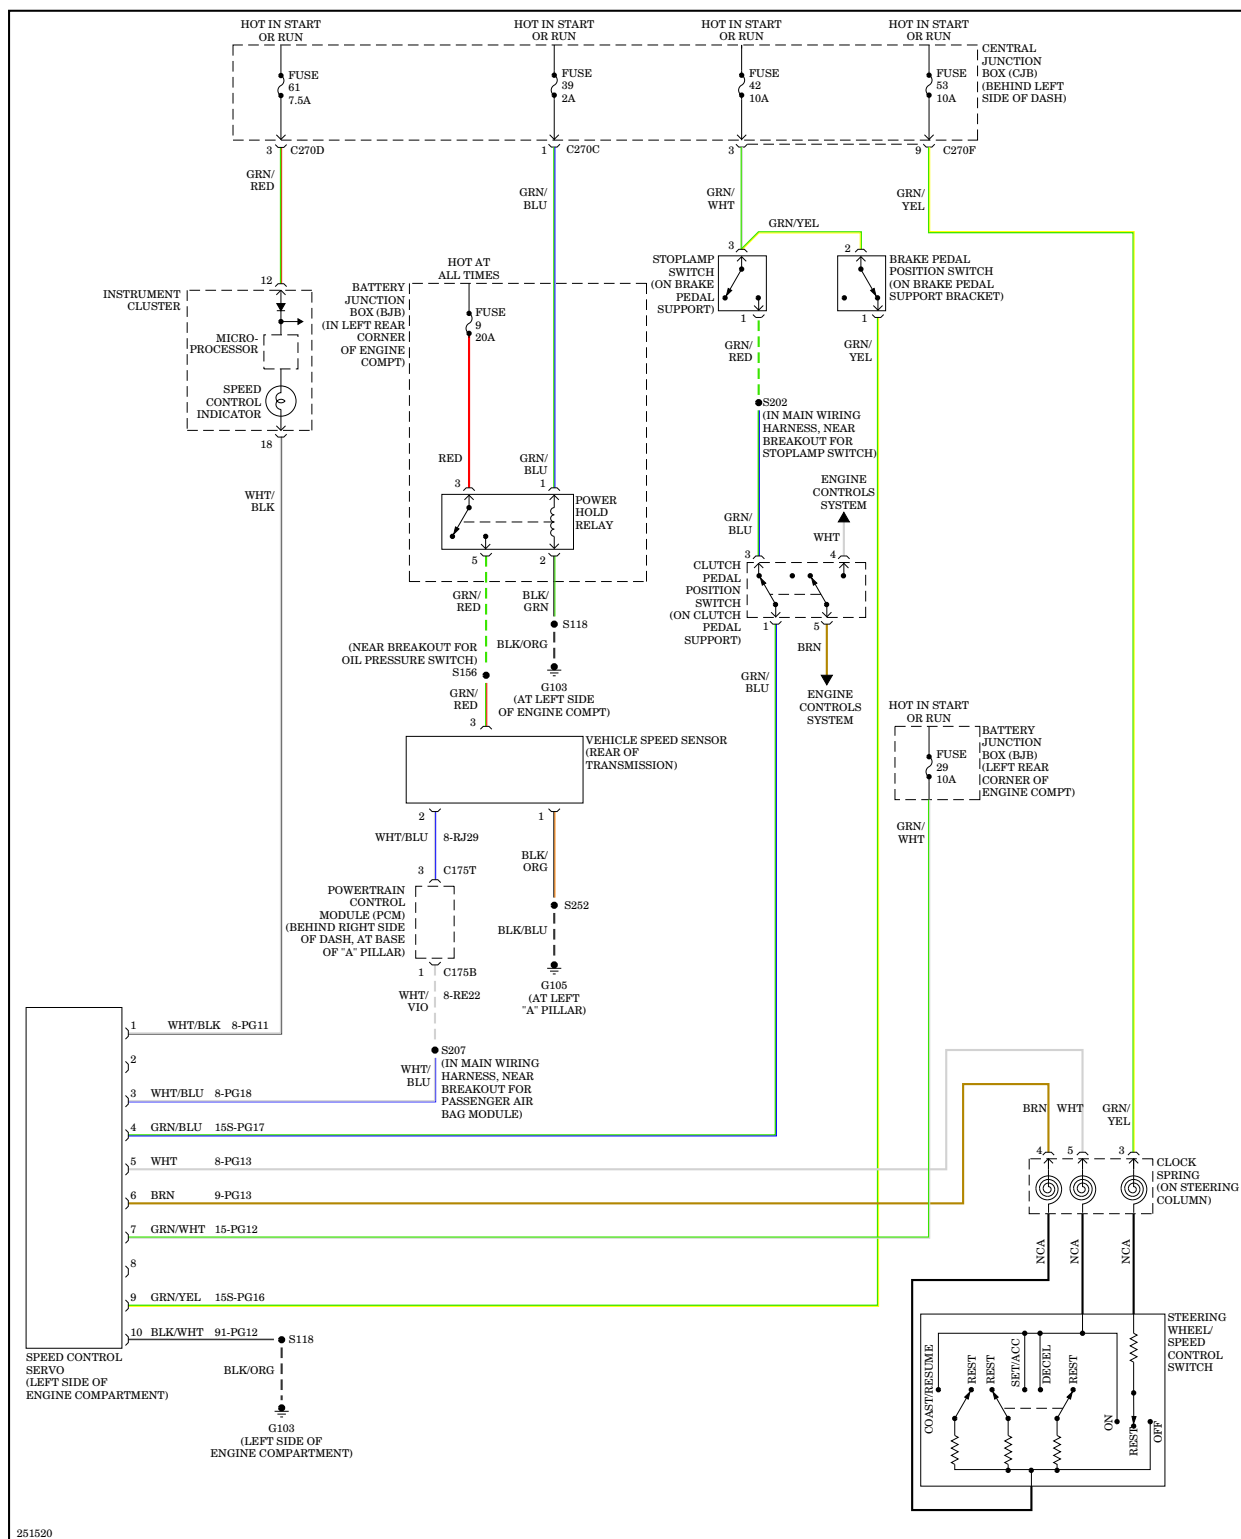


Электросхема системы круизконтроля, М/Т для Ford Focus ST 2007 - Список элементов:

- (near breakout for oil pressure switch) s156
- 15-pg12
- 15s-pg16
- 15s-pg17
- 8-pg11
- 8-pg13
- 8-pg18
- 8-re22
- 8-rj29
- 9-pg13

- 91-pg12
- Battery junction box (bjb) (in left rear corner of engine compt)
- Battery junction box (bjb) (left rear corner of engine compt)
- Brake pedal position switch (on brake pedal support bracket)
- C175b
- C175t
- C270c
- C270d
- C270f
- Central junction box (cjb) (behind left side of dash)
- Clock spring (on steering column)
- Clutch pedal position switch (on clutch pedal support)
- Coast/resume
- Decel
- Engine controls system
- Fuse 10a
- Fuse 20a
- Fuse 2a
- Fuse 7.5a
- G103 (at left side of engine compt)
- G103 (left side of engine compartment)
- G105 (at left "a" pillar)
- Hot at all times
- Hot in start or run
- Instrument cluster
- Micro- processor
- Nca
- Off
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Red
- Rest
- S118
- S202 (in main wiring harness, near breakout for stoplamp switch)
- S252
- Set/acc
- Speed control indicator
- Speed control servo (left side of engine compartment)
- Steering wheel/ speed control switch
- Stoplamp switch (on brake pedal support)
- Vehicle speed sensor (rear of transmission)

СИСТЕМА ОХЛАЖДЕНИЯ

 Электросхема системы охлаждения для Ford Focus ST 2007

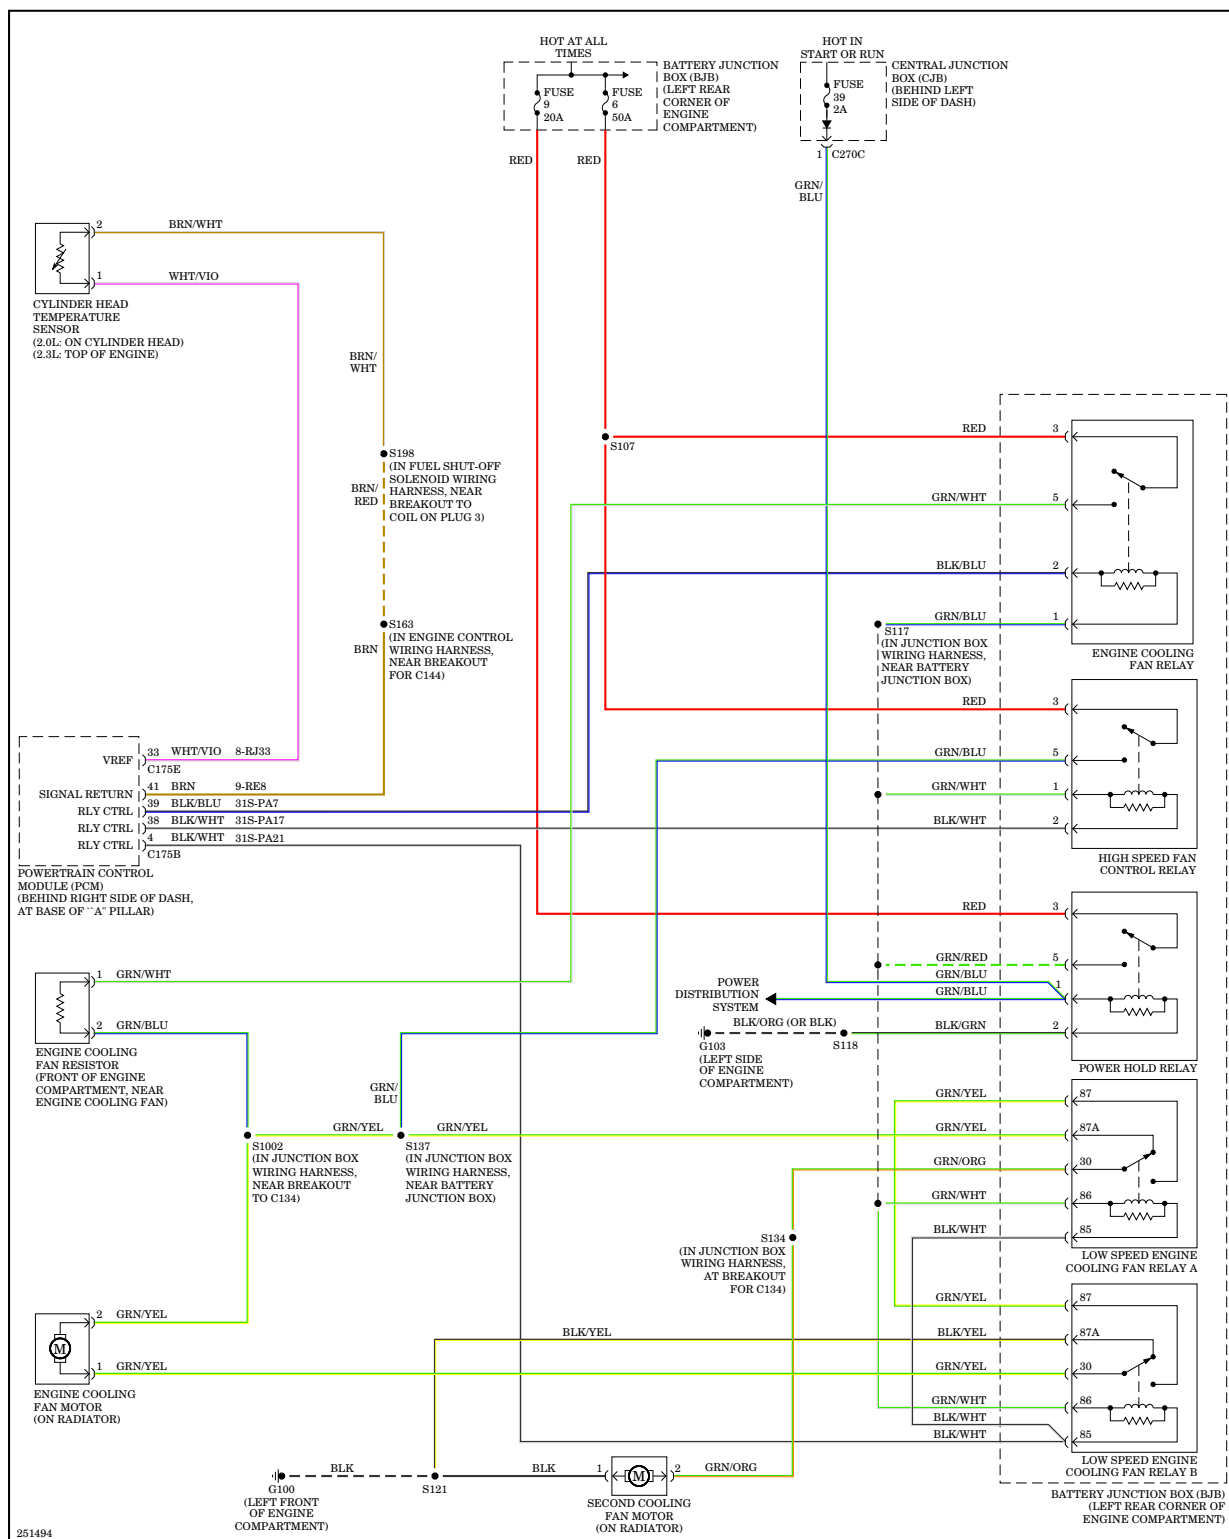


Электросхема системы охлаждения для Ford Focus ST 2007 - Список элементов:

- (in junction box wiring harness, near battery junction box)
- 31s-pa17
- 31s-pa21
- 31s-pa7
- 8-rj33
- 87a
- 9-re8
- Battery junction box (bjb) (left rear corner of engine compartment)
- C175b
- C175e

- C270c
- Central junction box (cjb) (behind left side of dash)
- Cylinder head temperature sensor (2.0l: on cylinder head) (2.3l: top of engine)
- Engine cooling fan motor (on radiator)
- Engine cooling fan relay
- Engine cooling fan resistor (front of engine compartment, near engine cooling fan)
- Fuse 20a
- Fuse 2a
- Fuse 50a
- G100 (left front of engine compartment)
- G103 (left side of engine compartment)
- High speed fan control relay
- Hot at all times
- Hot in start or run
- Low speed engine cooling fan relay a
- Low speed engine cooling fan relay b
- Power distribution system
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- Rly ctrl
- S1002 (in junction box
- S107
- S117
- S118
- S121
- S134 (in junction box wiring harness, at breakout for c134)
- S137 (in junction box
- S163 (in engine control wiring harness, near breakout for c144)
- S198 (in fuel shut-off solenoid wiring harness, near breakout to coil on plug 3)
- Second cooling fan motor (on radiator)
- Signal return
- Vref
- Wiring harness, near battery junction box)
- Wiring harness, near breakout to c134)

СИСТЕМА ПЕРЕДАЧИ ДАННЫХ

 Электросхема линии передачи данных CAN для Ford Focus ST 2007

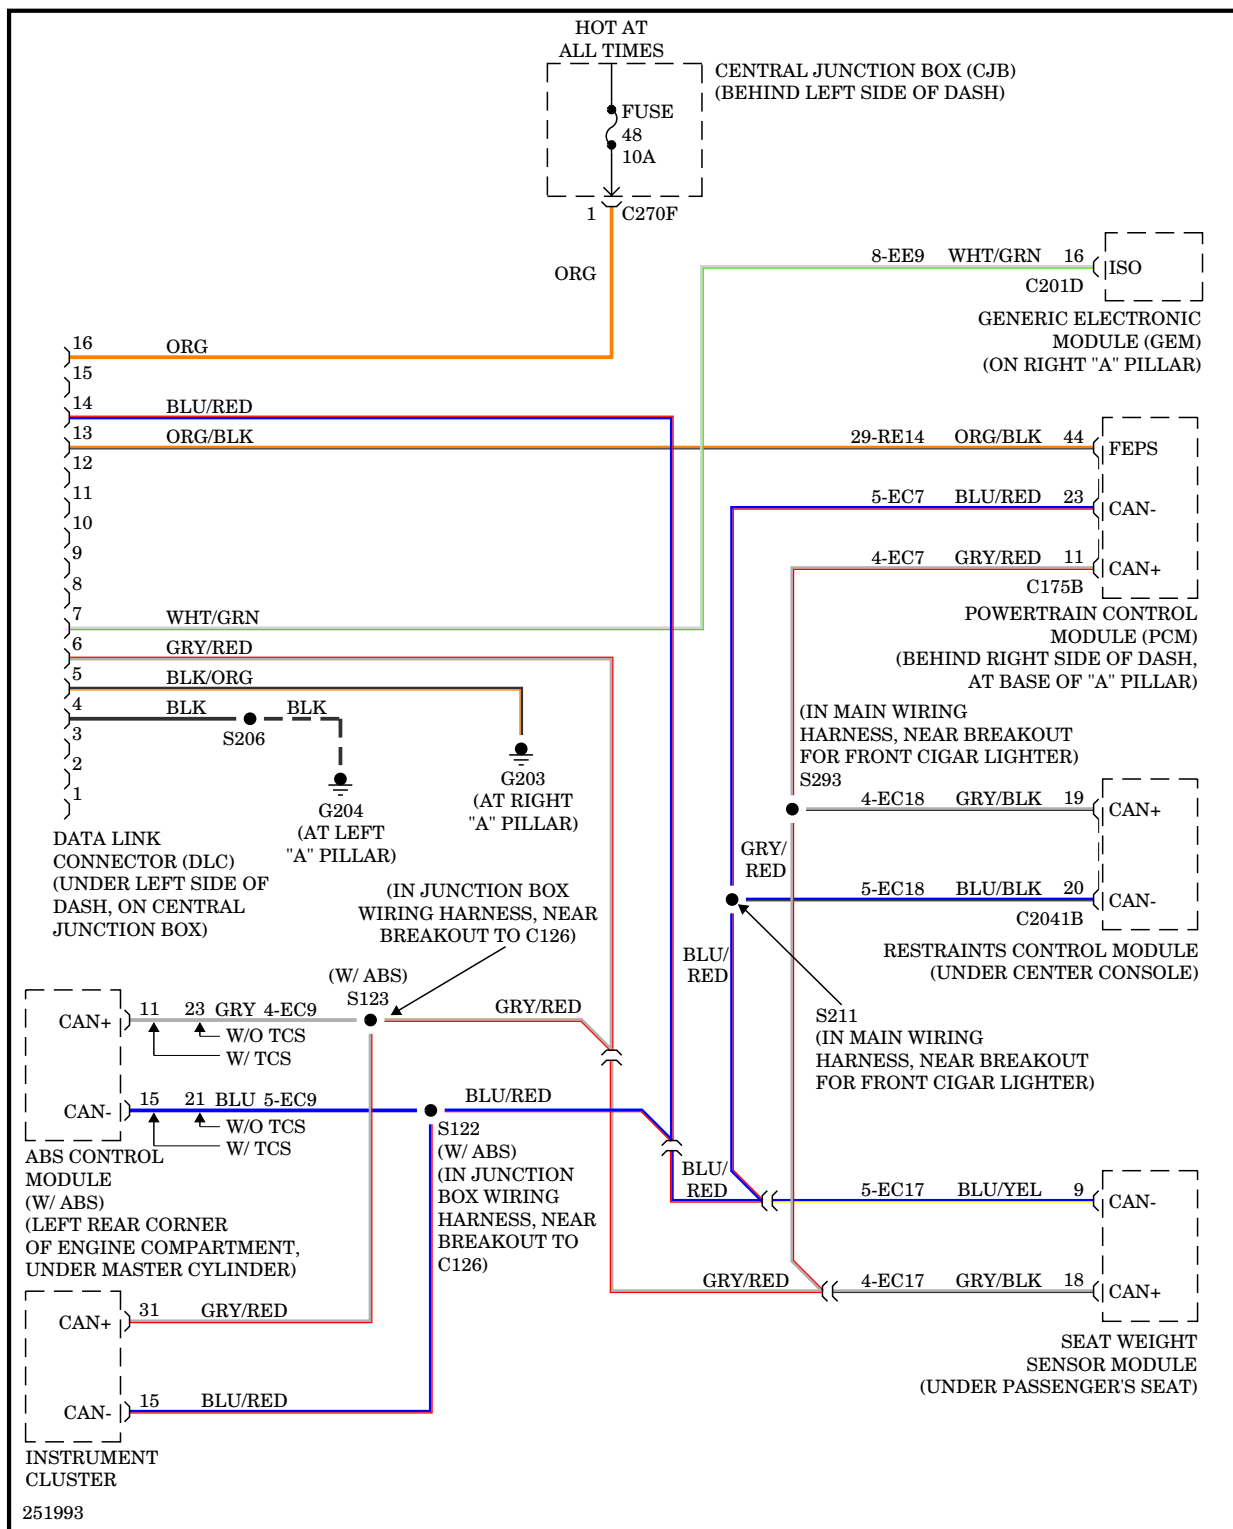

Электросхема линии передачи данных CAN для Ford Focus ST 2007 - Список элементов:

 
- (in junction box wiring harness, near breakout to c126)
- (in main wiring harness, near breakout for front cigar lighter) s293
- (w/ abs) s123
- 29-re14
- 4-ec17
- 4-ec18
- 4-ec7
- 4-ec9
- 5-ec17
- 5-ec18

- 5-ec7
- 5-ec9
- 8-ee9
- Abs control module (w/ abs) (left rear corner of engine compartment, under master cylinder)
- C175b
- C201d
- C2041b
- C270f
- Can+
- Can-
- Central junction box (cjb) (behind left side of dash)
- Data link connector (dlc) (under left side of dash, on central junction box)
- Feps
- Fuse 10a
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- Generic electronic module (gem) (on right "a" pillar)
- Hot at all times
- Instrument cluster
- Iso
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Restraints control module (under center console)
- S122 (w/ abs) (in junction box wiring harness, near breakout to c126)
- S206
- S211 (in main wiring harness, near breakout for front cigar lighter)
- Seat weight sensor module (under passenger's seat)
- W/o tcs w/ tcs

СИСТЕМА УПРАВЛЕНИЯ ДВИГАТЕЛЯ

2.0L

2.0L, Электросхема системы управления двигателем (1 из 4) для Ford Focus ST 2007

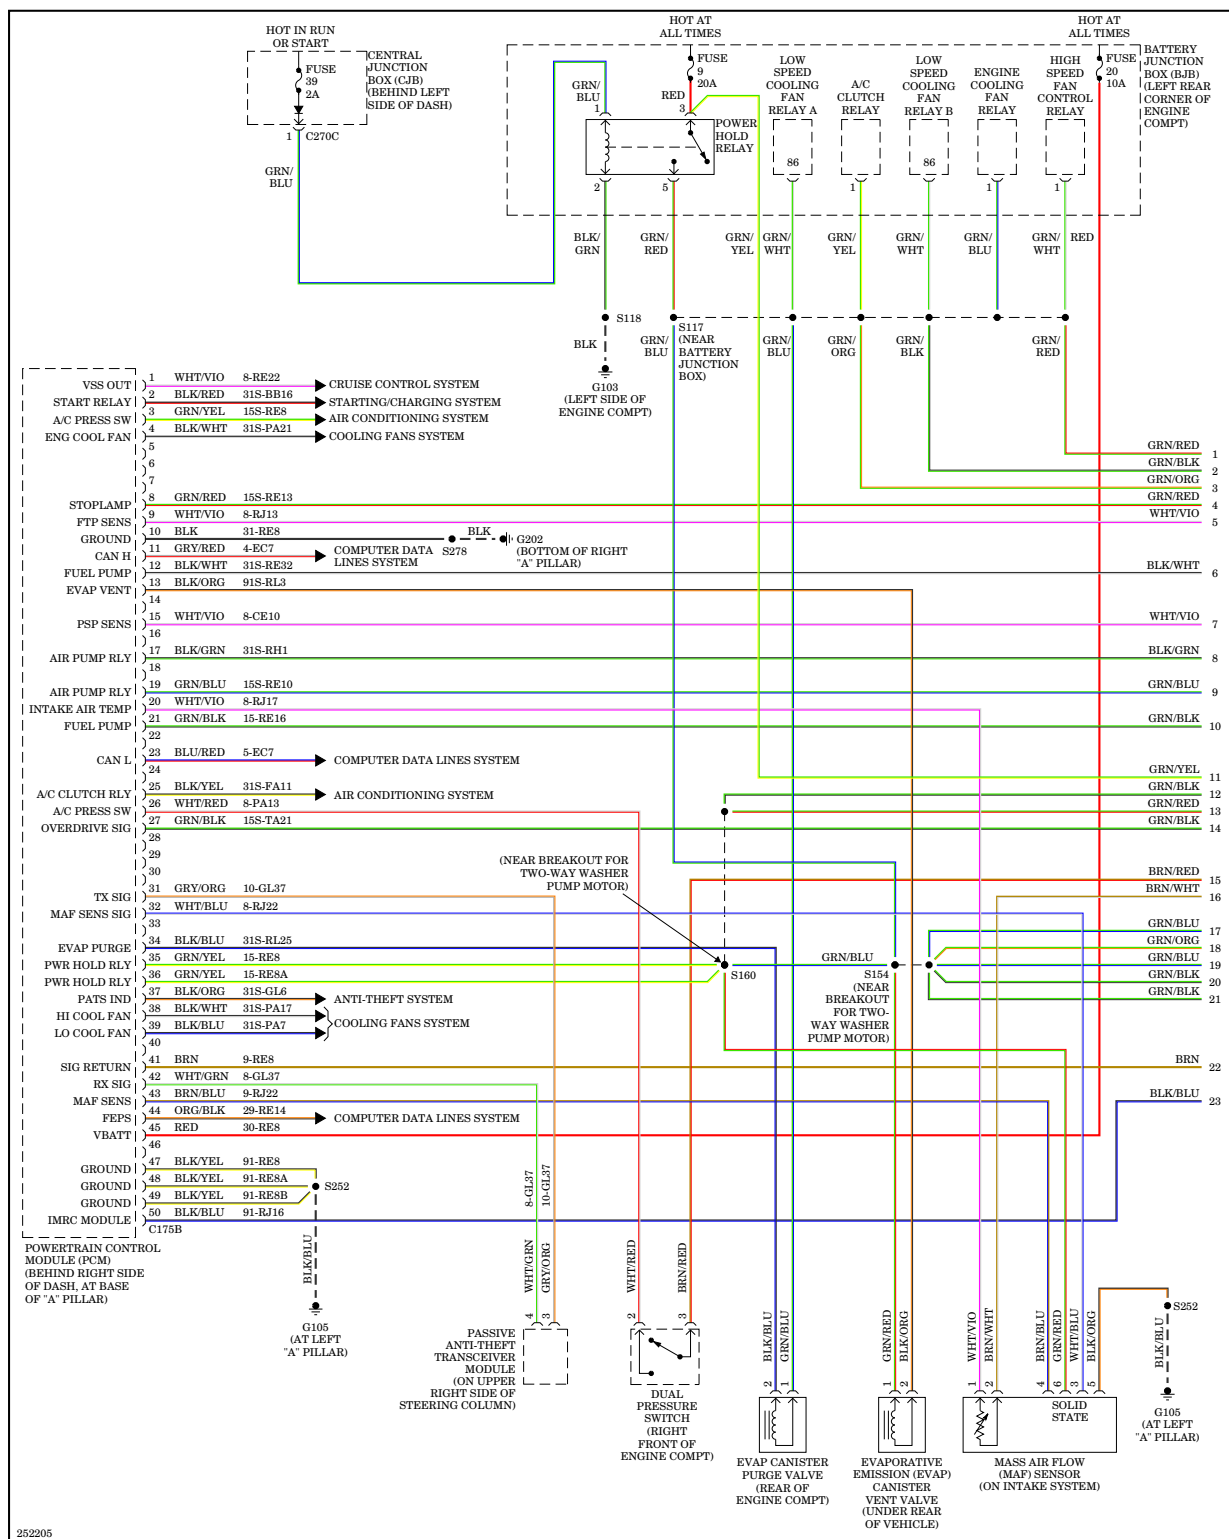


2.0L, Электросхема системы управления двигателем (1 из 4) для Ford Focus ST 2007 - Список элементов:

- (near breakout for two-way washer pump motor)
- 10-gl37
- 15-re16
- 15-re8
- 15-re8a
- 15s-re10
- 15s-re13
- 15s-re8
- 15s-ta21

- 29-re14
- 30-re8
- 31-re8
- 31s-bb16
- 31s-fa11
- 31s-gl6
- 31s-pa17
- 31s-pa21
- 31s-pa7
- 31s-re32
- 31s-rh1
- 31s-rl25
- 4-ec7
- 5-ec7
- 8-ce10
- 8-gl37
- 8-pa13
- 8-re22
- 8-rj13
- 8-rj17
- 8-rj22
- 9-re8
- 9-rj22
- 91-re8
- 91-re8a
- 91-re8b
- 91-rj16
- 91s-rl3
- A/c clutch relay
- A/c clutch rly
- A/c press sw
- Air conditioning system
- Air pump rly
- Anti-theft system
- Battery junction box (bjb) (left rear corner of engine compt)
- Battery junction box)
- C175b
- C270c
- Can h
- Can l
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Cooling fans system
- Cruise control system
- Dual pressure switch (right front of engine compt)
- Eng cool fan
- Engine cooling fan relay
- Evap canister purge valve (rear of engine compt)
- Evap purge
- Evap vent
- Evaporative emission (evap) canister vent valve (under rear of vehicle)
- Feps
- Ftp sens
- Fuel pump
- Fuse 10a
- Fuse 20a
- Fuse 2a
- G103 (left side of engine compt)
- G105 (at left "a" pillar)
- G202 (bottom of right "a" pillar)
- Ground
- Hi cool fan
- High speed fan control relay
- Hot at all times
- Hot in run or start
- Imrc module
- Intake air temp
- Lo cool fan
- Low speed cooling fan relay a
- Low speed cooling fan relay b
- Maf sens
- Maf sens sig
- Mass air flow (maf) sensor (on intake system)
- Overdrive sig
- Passive anti-theft transceiver module (on upper right side of steering column)

- Pats ind
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Psp sens
- Pwr hold rly
- Red
- Rx sig
- S118
- S154 (near breakout for two- way washer pump motor)
- S160
- S252
- S278
- Sig return
- Solid state
- Start relay
- Starting/charging system
- Stoplamp
- Tx sig
- Vbatt
- Vss out

 2.0L, Электросхема системы управления двигателем (2 из 4) для Ford Focus ST 2007

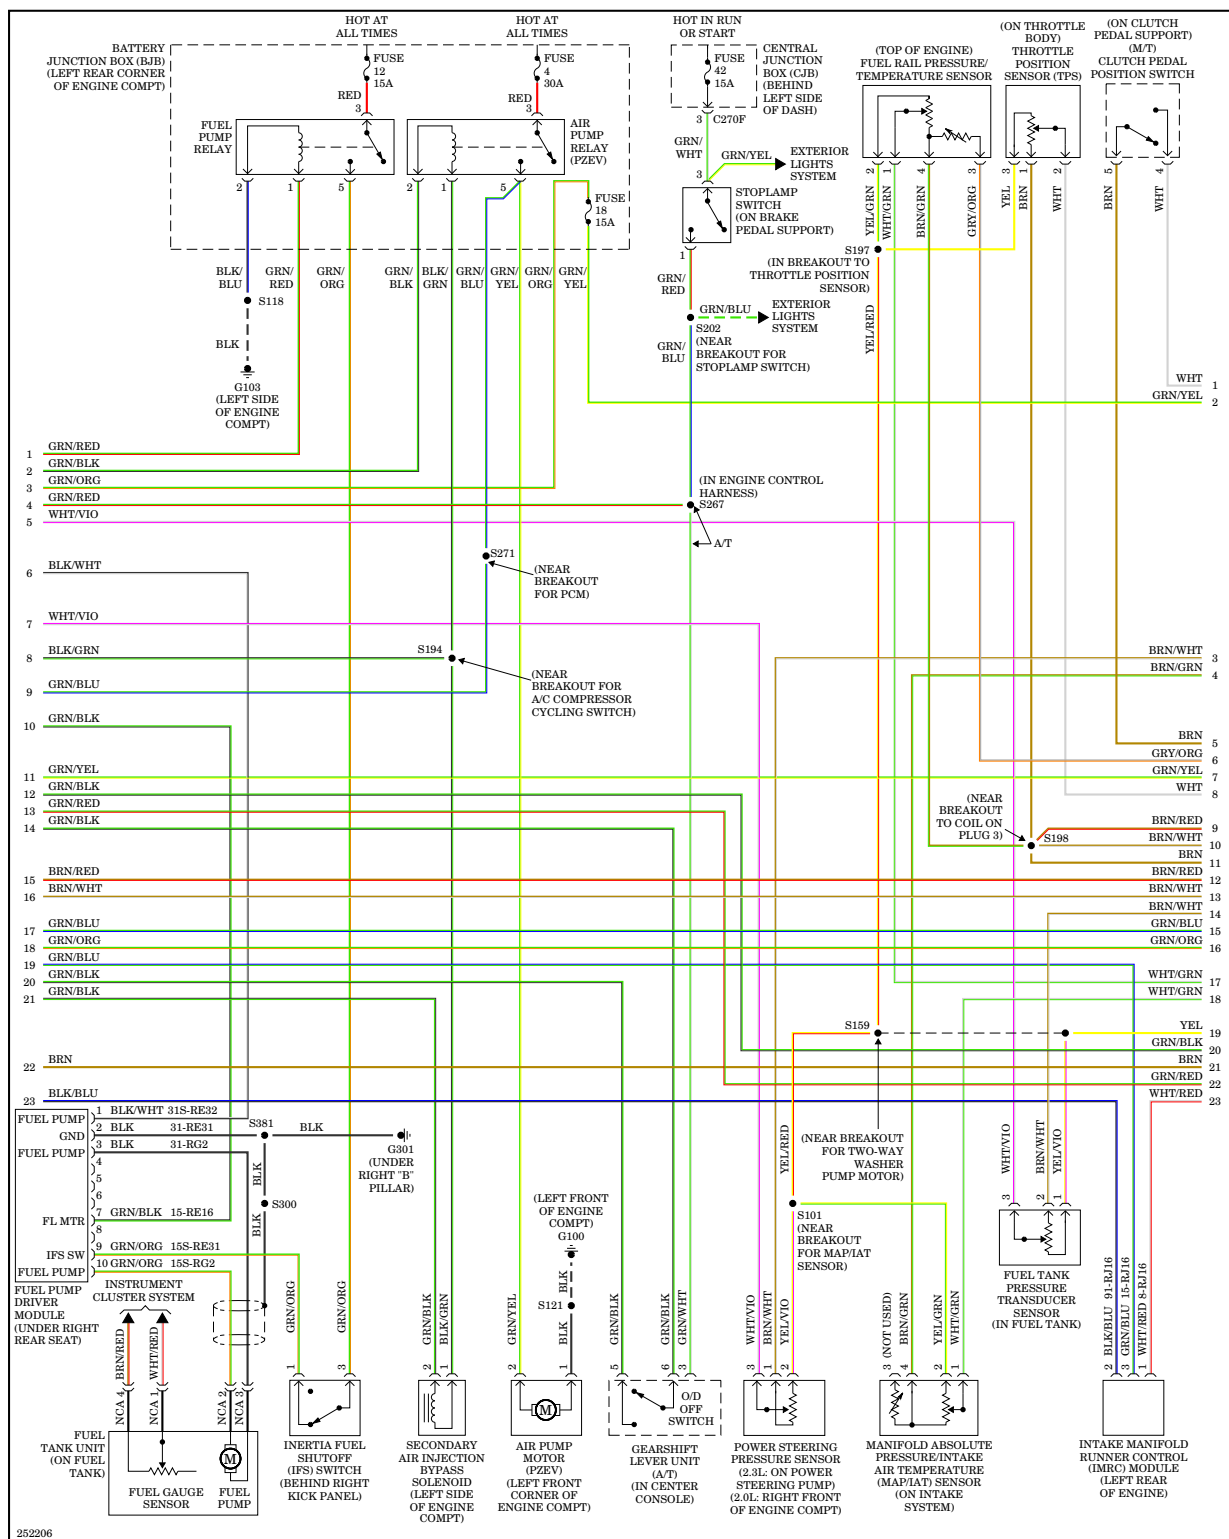


2.0L, Электросхема системы управления двигателем (2 из 4) для Ford Focus ST 2007 - Список элементов:

- (in engine control harness) s267
- (left front of engine compt) g100
- (near breakout for a/c compressor cycling switch)
- (near breakout for pcm)
- (near breakout for two-way washer pump motor)
- (near breakout to coil on plug 3)
- (not used)
- (on clutch pedal support) (m/t) clutch pedal position switch
- (on throttle body) throttle position sensor (tps)

- (top of engine) fuel rail pressure/ temperature sensor
- 15-re16
- 15-rj16
- 15s-re31
- 15s-rg2
- 31-re31
- 31-rg2
- 31s-re32
- 8-rj16
- 91-rj16
- A/t
- Air pump motor (pzev) (left front corner of engine compt)
- Air pump relay (pzev)
- Battery junction box (bjb) (left rear corner of engine compt)
- C270f
- Central junction box (cjb) (behind left side of dash)
- Exterior lights system
- Fl mtr
- Fuel gauge sensor
- Fuel pump
- Fuel pump driver module (under right rear seat)
- Fuel pump relay
- Fuel tank pressure transducer sensor (in fuel tank)
- Fuel tank unit (on fuel tank)
- Fuse 15a
- Fuse 30a
- G103 (left side of engine compt)
- G301 (under right "b" pillar)
- Gearshift lever unit (a/t) (in center console)
- Gnd
- Hot at all times
- Hot in run or start
- Ifs sw
- Inertia fuel shutoff (ifs) switch (behind right kick panel)
- Instrument cluster system
- Intake manifold runner control (imrc) module (left rear of engine)
- Manifold absolute pressure/intake air temperature (map/iat) sensor (on intake system)
- Nca
- O/d off switch
- Power steering pressure sensor (2.3l: on power steering pump) (2.0l: right front of engine compt)
- Red
- S101 (near breakout for map/iat sensor)
- S118
- S121
- S159
- S194
- S197 (in breakout to throttle position sensor)
- S198
- S271
- S300
- S381
- Secondary air injection bypass solenoid (left side of engine compt)
- Stoplamp switch (on brake pedal support)
- Stoplamp switch)

 2.0L, Электросхема системы управления двигателем (3 из 4) для Ford Focus ST 2007

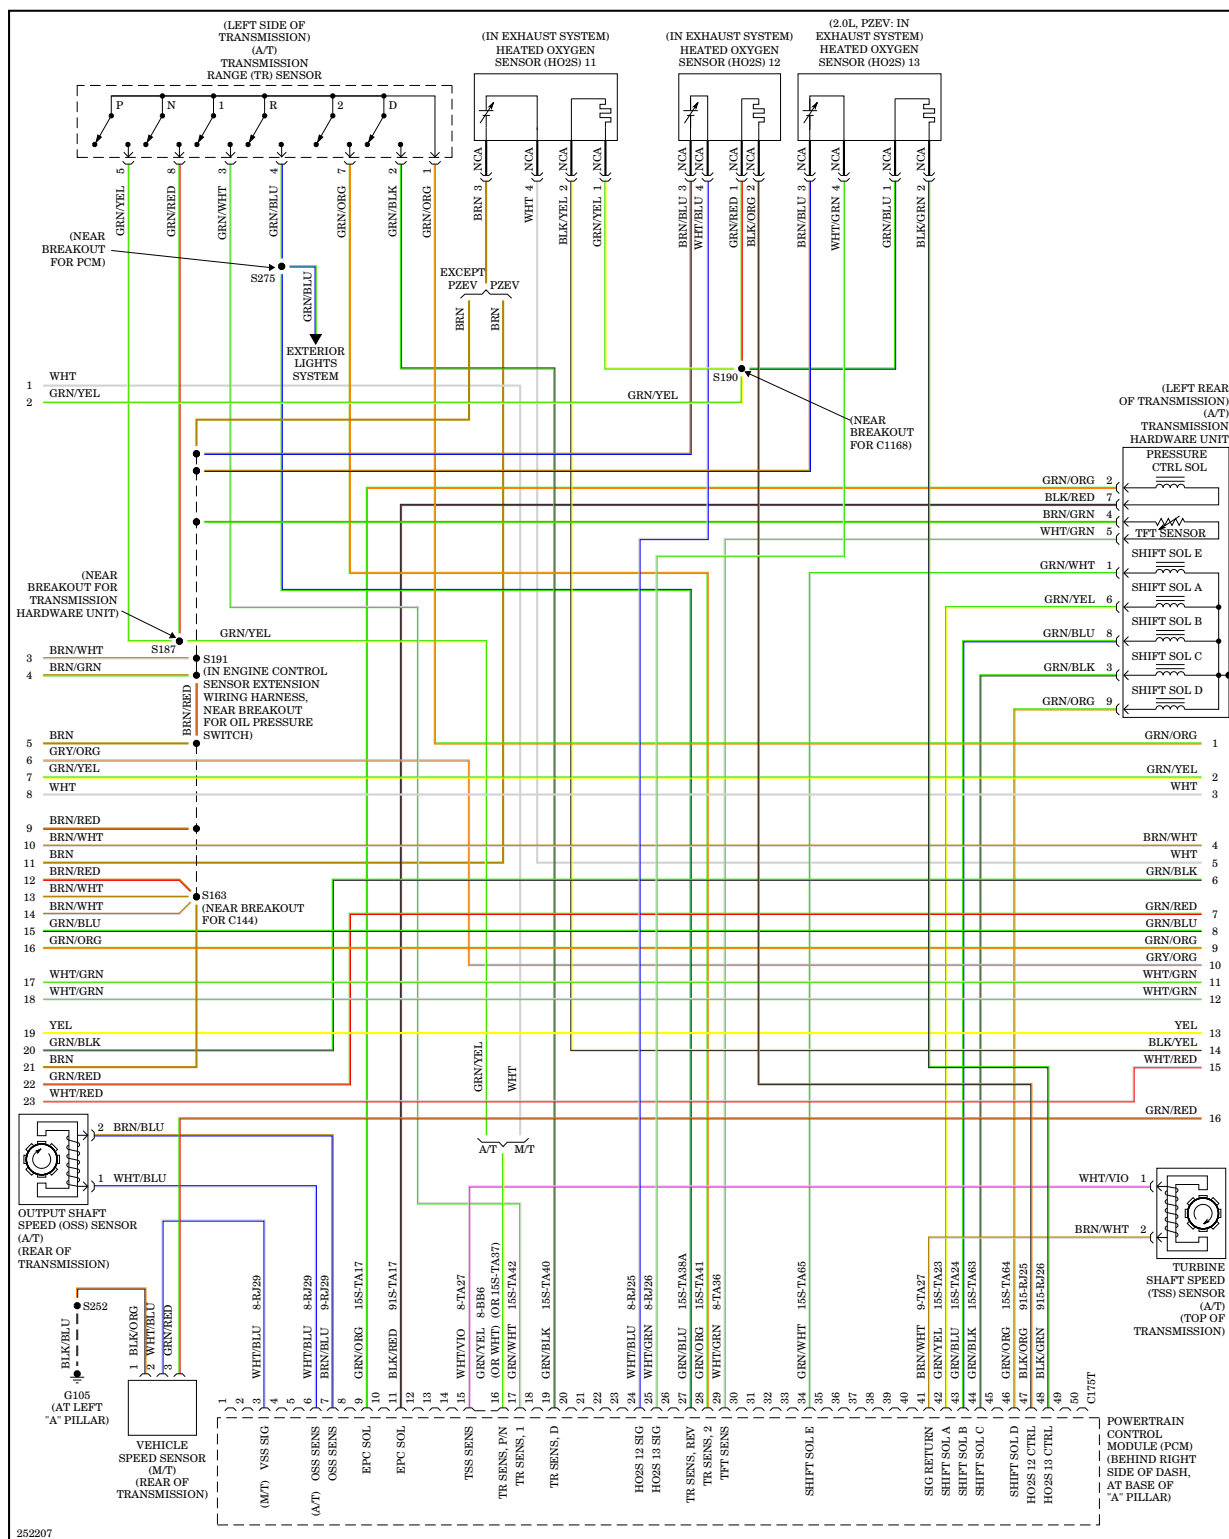

2.0L, Электросхема системы управления двигателем (3 из 4) для Ford Focus ST 2007 - Список элементов:

- (2.0L, pzev: in exhaust system)
- (a/t)
- (in exhaust system) heated oxygen sensor (ho2s) 11
- (in exhaust system) heated oxygen sensor (ho2s) 12
- (left rear of transmission) (a/t) transmission hardware unit
- (left side of transmission) (a/t) transmission range (tr) sensor
- (m/t)
- (near breakout for c1168)
- (near breakout for pcm)

- (near breakout for transmission hardware unit)
- (or 15s-ta37)
- 15s-ta17
- 15s-ta23
- 15s-ta24
- 15s-ta38a
- 15s-ta40
- 15s-ta41
- 15s-ta42
- 15s-ta63
- 15s-ta64
- 15s-ta65
- 8-bb6
- 8-rj25
- 8-rj26
- 8-rj29
- 8-ta27
- 8-ta36
- 9-rj29
- 9-ta27
- 915-rj25
- 915-rj26
- 91s-ta17
- A/t
- C175t
- Epc sol
- Except pzev
- Exterior lights system
- G105 (at left "a" pillar)
- Heated oxygen sensor (ho2s) 13
- Ho2s 12 ctrl
- Ho2s 12 sig
- Ho2s 13 ctrl
- Ho2s 13 sig
- M/t
- Nca
- Oss sens
- Output shaft speed (oss) sensor (a/t) (rear of transmission)
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Pressure ctrl sol
- Pzev
- S163 (near breakout for c144)
- S187
- S190
- S191 (in engine control sensor extension wiring harness, near breakout for oil pressure switch)
- S252
- S275
- Shift sol a
- Shift sol b
- Shift sol c
- Shift sol d
- Shift sol e
- Sig return
- Tft sens
- Tft sensor
- Tr sens, 1
- Tr sens, 2
- Tr sens, d
- Tr sens, p/n
- Tr sens, rev
- Tss sens
- Turbine shaft speed (tss) sensor (a/t) (top of transmission)
- Vehicle speed sensor (m/t) (rear of transmission)
- Vss sig

 
2.0L, Электросхема системы управления двигателем (4 из 4) для Ford Focus ST 2007

- 15s-rr6
- 15s-rr7
- 15s-rr8
- 31s-pa37
- 31s-rl10
- 31s-rl11
- 31s-rl12
- 31s-rl13
- 31s-rl20
- 31s-rl9
- 4-eb6
- 5-eb6
- 7-re8
- 8-rj11
- 8-rj14
- 8-rj16
- 8-rj18
- 8-rj20
- 8-rj28
- 8-rj3
- 8-rj33
- 8-rj4
- 9-rj18
- 9-rj3
- 9-rj4
- 91s-pa51
- 91s-pa52
- 91s-pa53
- 91s-pa54
- 91s-rj14
- A/t
- C175e
- Camshaft position sensor (2.0l: top of engine) (2.3l: top rear of engine)
- Check engine ind
- Cht sens
- Ckp sens
- Cmp sig
- Coil 1
- Coil 2
- Coil 3
- Coil 4
- Coil on plug
- Computer data lines system
- Crankshaft position sensor (2.0l: lower right front of eng) (2.3l: right front of engine)
- Cylinder head temperature sensor (2.0l: on cylinder head) (2.3l: top of engine)
- Egr coil 1
- Egr coil 2
- Egr coil 3
- Egr coil 4
- Fuel inj 1
- Fuel inj 2
- Fuel inj 3
- Fuel inj 4
- Fuel rail
- Fuel rail temp
- G105 (at left "a" pillar)
- G203 (at right "a" pillar)
- Gen comm
- Gen monitor
- Ho2s 11 ctrl
- Ho2s 11 sig
- Iac valve
- Ignition transformer capacitor (top front of engine)
- Imrc module
- Imrc sol 1
- Imtv ctrl
- Inlet manifold runner control (imrc) solenoid (on intake system)
- Instrument cluster
- Intake manifold tuning valve (imtv) (2.3l, m/t) (on intake system)
- Knock sens
- Knock sensor (2.0l: left front of engine) (2.3l: right side of engine)
- M/t
- Map sig
- Nca
- O/d off ind

- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Ref volt
- S112
- S156 (near breakout for oil pressure switch)
- S169
- S199
- S212
- Sig return
- Solid state
- Starting/charging system
- Tps sig
- Vbatt

2.3L

2.3L, Электросхема системы управления двигателем (1 из 4) для Ford Focus ST 2007

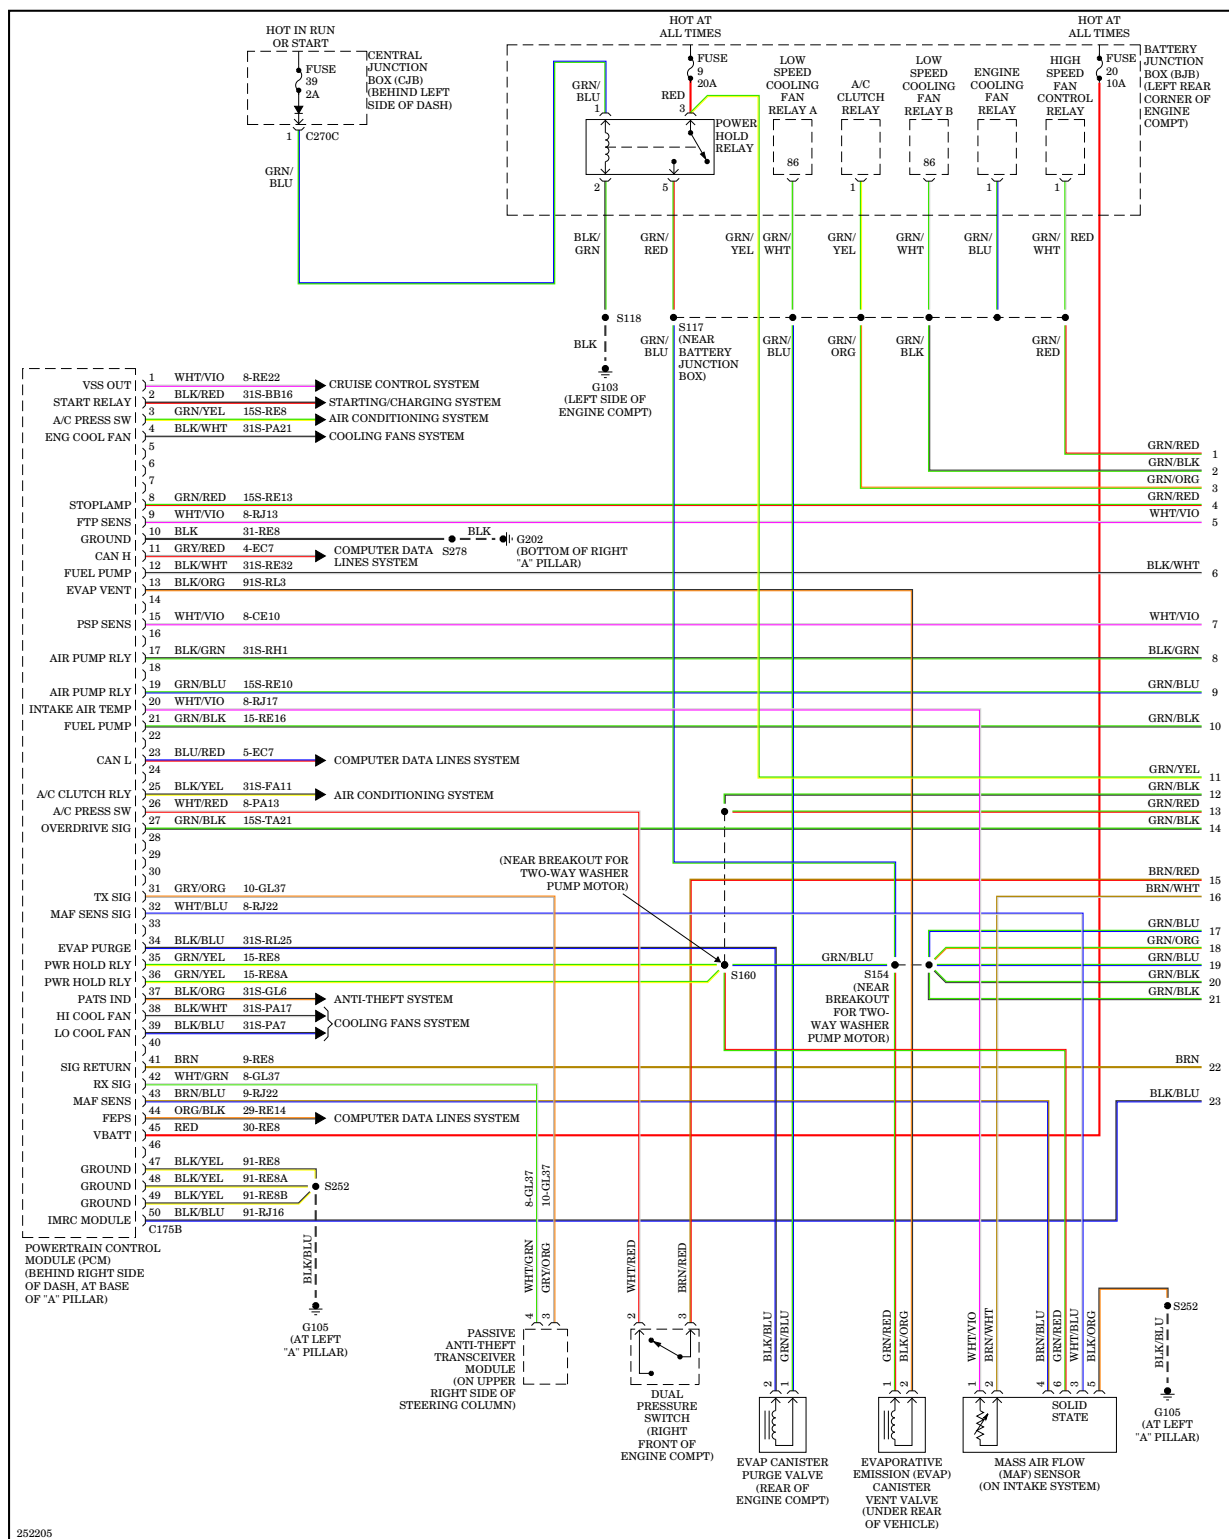


2.3L, Электросхема системы управления двигателем (1 из 4) для Ford Focus ST 2007 - Список элементов:

- (near breakout for two-way washer pump motor)
- 10-gl37
- 15-re16
- 15-re8
- 15-re8a
- 15s-re10
- 15s-re13
- 15s-re8
- 15s-ta21

- 29-re14
- 30-re8
- 31-re8
- 31s-bb16
- 31s-fa11
- 31s-gl6
- 31s-pa17
- 31s-pa21
- 31s-pa7
- 31s-re32
- 31s-rh1
- 31s-rl25
- 4-ec7
- 5-ec7
- 8-ce10
- 8-gl37
- 8-pa13
- 8-re22
- 8-rj13
- 8-rj17
- 8-rj22
- 9-re8
- 9-rj22
- 91-re8
- 91-re8a
- 91-re8b
- 91-rj16
- 91s-rl3
- A/c clutch relay
- A/c clutch rly
- A/c press sw
- Air conditioning system
- Air pump rly
- Anti-theft system
- Battery junction box (bjb) (left rear corner of engine compt)
- Battery junction box)
- C175b
- C270c
- Can h
- Can l
- Central junction box (cjb) (behind left side of dash)
- Computer data lines system
- Cooling fans system
- Cruise control system
- Dual pressure switch (right front of engine compt)
- Eng cool fan
- Engine cooling fan relay
- Evap canister purge valve (rear of engine compt)
- Evap purge
- Evap vent
- Evaporative emission (evap) canister vent valve (under rear of vehicle)
- Feps
- Ftp sens
- Fuel pump
- Fuse 10a
- Fuse 20a
- Fuse 2a
- G103 (left side of engine compt)
- G105 (at left "a" pillar)
- G202 (bottom of right "a" pillar)
- Ground
- Hi cool fan
- High speed fan control relay
- Hot at all times
- Hot in run or start
- Imrc module
- Intake air temp
- Lo cool fan
- Low speed cooling fan relay a
- Low speed cooling fan relay b
- Maf sens
- Maf sens sig
- Mass air flow (maf) sensor (on intake system)
- Overdrive sig
- Passive anti-theft transceiver module (on upper right side of steering column)

- Pats ind
- Power hold relay
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Psp sens
- Pwr hold rly
- Red
- Rx sig
- S118
- S154 (near breakout for two- way washer pump motor)
- S160
- S252
- S278
- Sig return
- Solid state
- Start relay
- Starting/charging system
- Stoplamp
- Tx sig
- Vbatt
- Vss out

 2.3L, Электросхема системы управления двигателем (2 из 4) для Ford Focus ST 2007

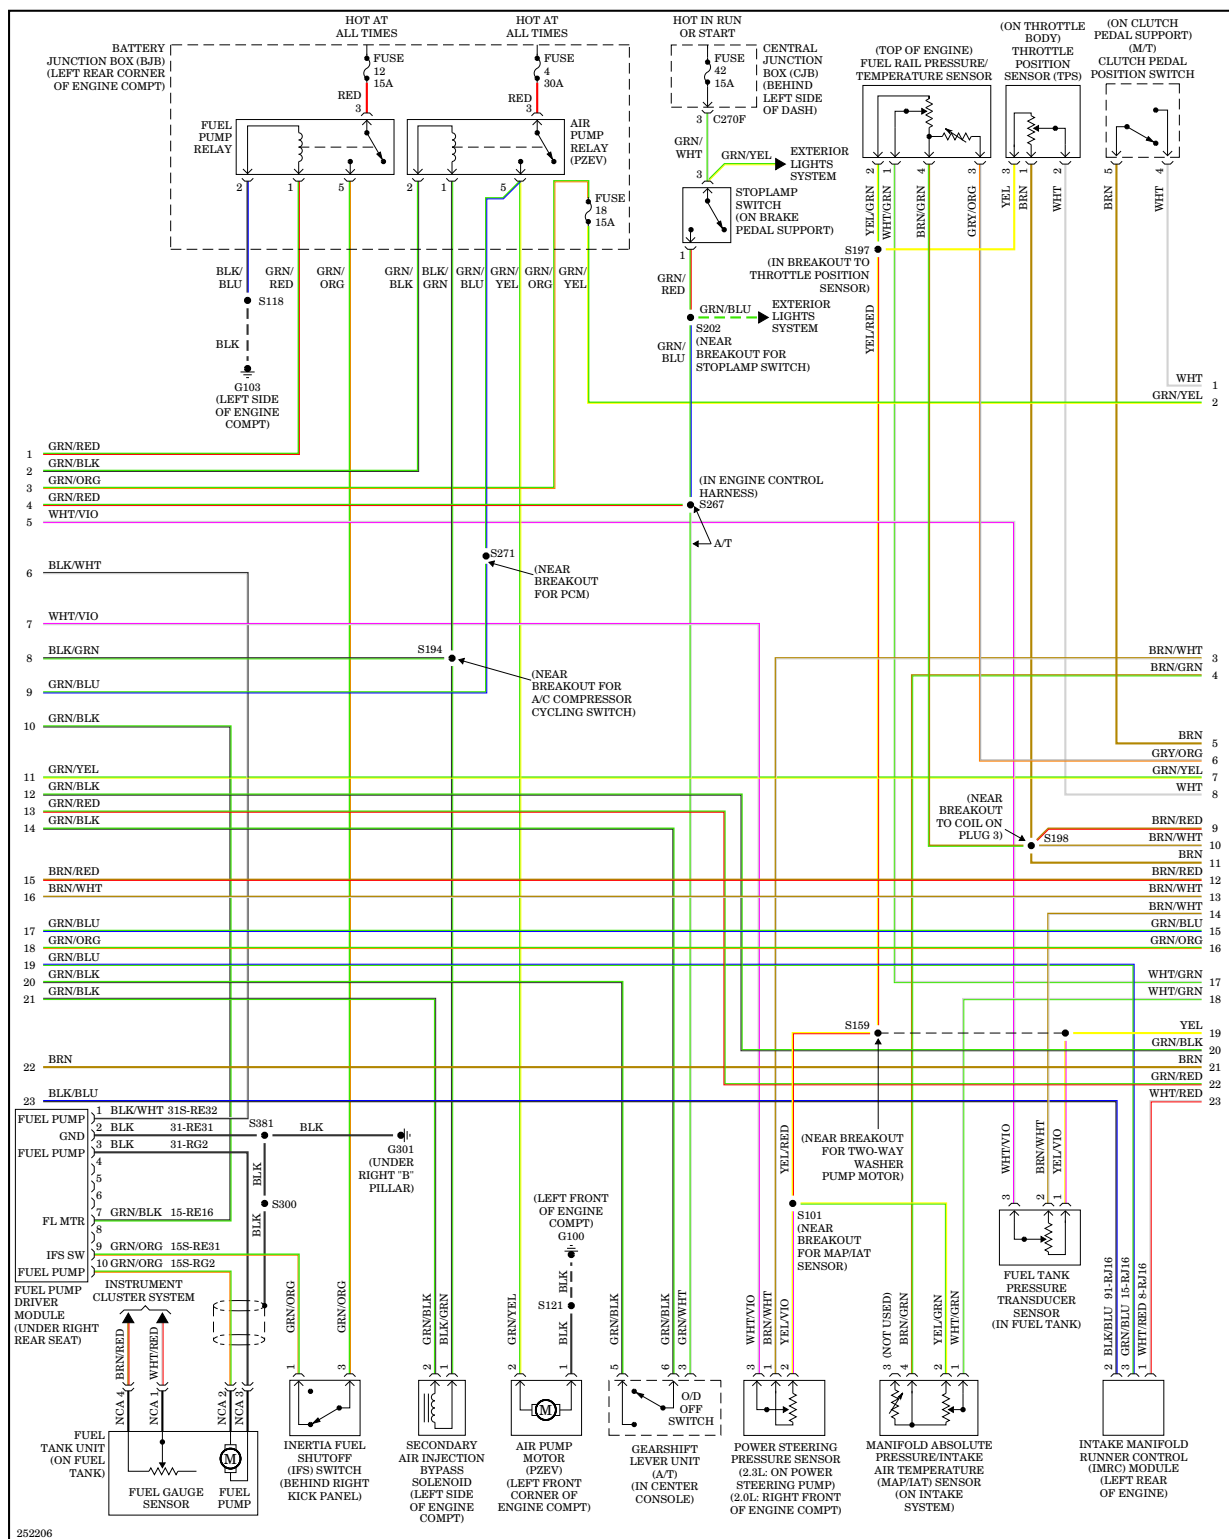


2.3L, Электросхема системы управления двигателем (2 из 4) для Ford Focus ST 2007 - Список элементов:

- (in engine control harness) s267
- (left front of engine comp) g100
- (near breakout for a/c compressor cycling switch)
- (near breakout for pcm)
- (near breakout for two-way washer pump motor)
- (near breakout to coil on plug 3)
- (not used)
- (on clutch pedal support) (m/t) clutch pedal position switch
- (on throttle body) throttle position sensor (tps)

- (top of engine) fuel rail pressure/ temperature sensor
- 15-re16
- 15-rj16
- 15s-re31
- 15s-rg2
- 31-re31
- 31-rg2
- 31s-re32
- 8-rj16
- 91-rj16
- A/t
- Air pump motor (pzev) (left front corner of engine compt)
- Air pump relay (pzev)
- Battery junction box (bjb) (left rear corner of engine compt)
- C270f
- Central junction box (cjb) (behind left side of dash)
- Exterior lights system
- Fl mtr
- Fuel gauge sensor
- Fuel pump
- Fuel pump driver module (under right rear seat)
- Fuel pump relay
- Fuel tank pressure transducer sensor (in fuel tank)
- Fuel tank unit (on fuel tank)
- Fuse 15a
- Fuse 30a
- G103 (left side of engine compt)
- G301 (under right "b" pillar)
- Gearshift lever unit (a/t) (in center console)
- Gnd
- Hot at all times
- Hot in run or start
- Ifs sw
- Inertia fuel shutoff (ifs) switch (behind right kick panel)
- Instrument cluster system
- Intake manifold runner control (imrc) module (left rear of engine)
- Manifold absolute pressure/intake air temperature (map/iat) sensor (on intake system)
- Nca
- O/d off switch
- Power steering pressure sensor (2.3l: on power steering pump) (2.0l: right front of engine compt)
- Red
- S101 (near breakout for map/iat sensor)
- S118
- S121
- S159
- S194
- S197 (in breakout to throttle position sensor)
- S198
- S271
- S300
- S381
- Secondary air injection bypass solenoid (left side of engine compt)
- Stoplamp switch (on brake pedal support)
- Stoplamp switch)

 2.3L, Электросхема системы управления двигателем (3 из 4) для Ford Focus ST 2007

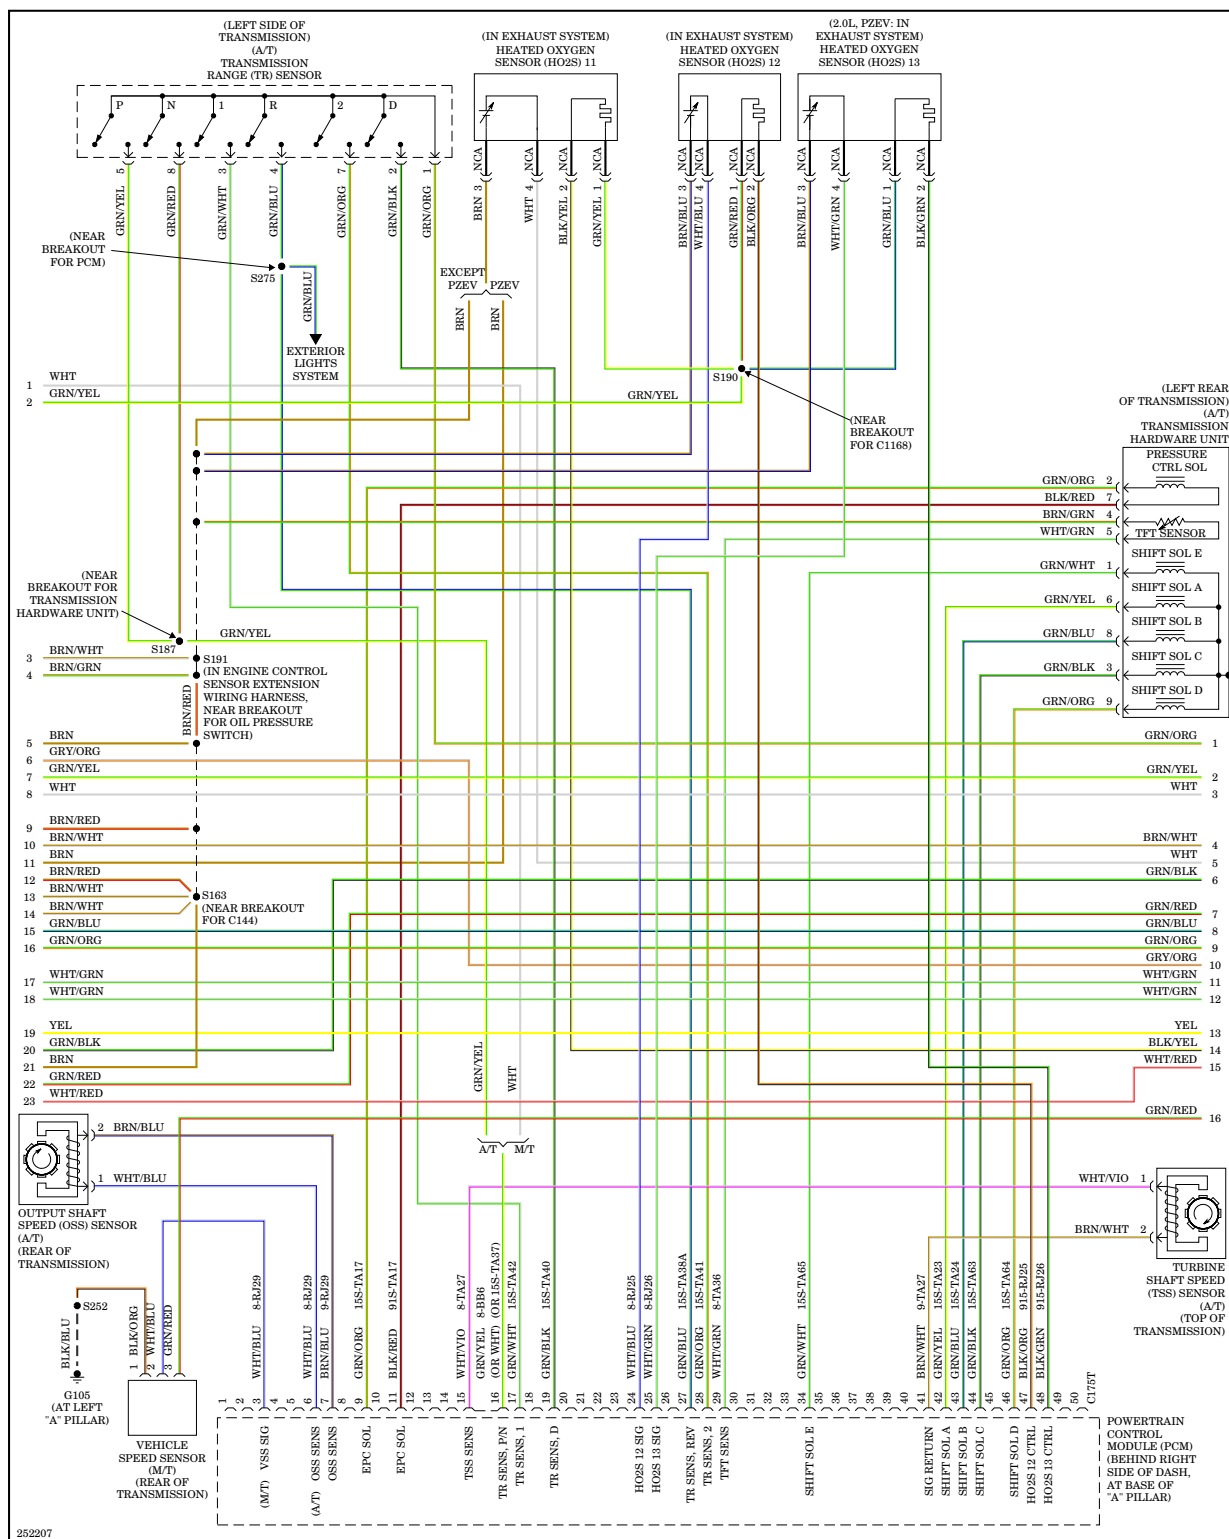


2.3L, Электросхема системы управления двигателем (3 из 4) для Ford Focus ST 2007 - Список элементов:

- (2.0l, pzev: in exhaust system)
- (a/t)
- (in exhaust system) heated oxygen sensor (ho2s) 11
- (in exhaust system) heated oxygen sensor (ho2s) 12
- (left rear of transmission) (a/t) transmission hardware unit
- (left side of transmission) (a/t) transmission range (tr) sensor
- (m/t)
- (near breakout for c1168)
- (near breakout for pcm)

- (near breakout for transmission hardware unit)
- (or 15s-ta37)
- 15s-ta17
- 15s-ta23
- 15s-ta24
- 15s-ta38a
- 15s-ta40
- 15s-ta41
- 15s-ta42
- 15s-ta63
- 15s-ta64
- 15s-ta65
- 8-bb6
- 8-rj25
- 8-rj26
- 8-rj29
- 8-ta27
- 8-ta36
- 9-rj29
- 9-ta27
- 915-rj25
- 915-rj26
- 91s-ta17
- A/t
- C175t
- Epc sol
- Except pzev
- Exterior lights system
- G105 (at left "a" pillar)
- Heated oxygen sensor (ho2s) 13
- Ho2s 12 ctrl
- Ho2s 12 sig
- Ho2s 13 ctrl
- Ho2s 13 sig
- M/t
- Nca
- Oss sens
- Output shaft speed (oss) sensor (a/t) (rear of transmission)
- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Pressure ctrl sol
- Pzev
- S163 (near breakout for c144)
- S187
- S190
- S191 (in engine control sensor extension wiring harness, near breakout for oil pressure switch)
- S252
- S275
- Shift sol a
- Shift sol b
- Shift sol c
- Shift sol d
- Shift sol e
- Sig return
- Tft sens
- Tft sensor
- Tr sens, 1
- Tr sens, 2
- Tr sens, d
- Tr sens, p/n
- Tr sens, rev
- Tss sens
- Turbine shaft speed (tss) sensor (a/t) (top of transmission)
- Vehicle speed sensor (m/t) (rear of transmission)
- Vss sig

 2.3L, Электросхема системы управления двигателем (4 из 4) для Ford Focus ST 2007

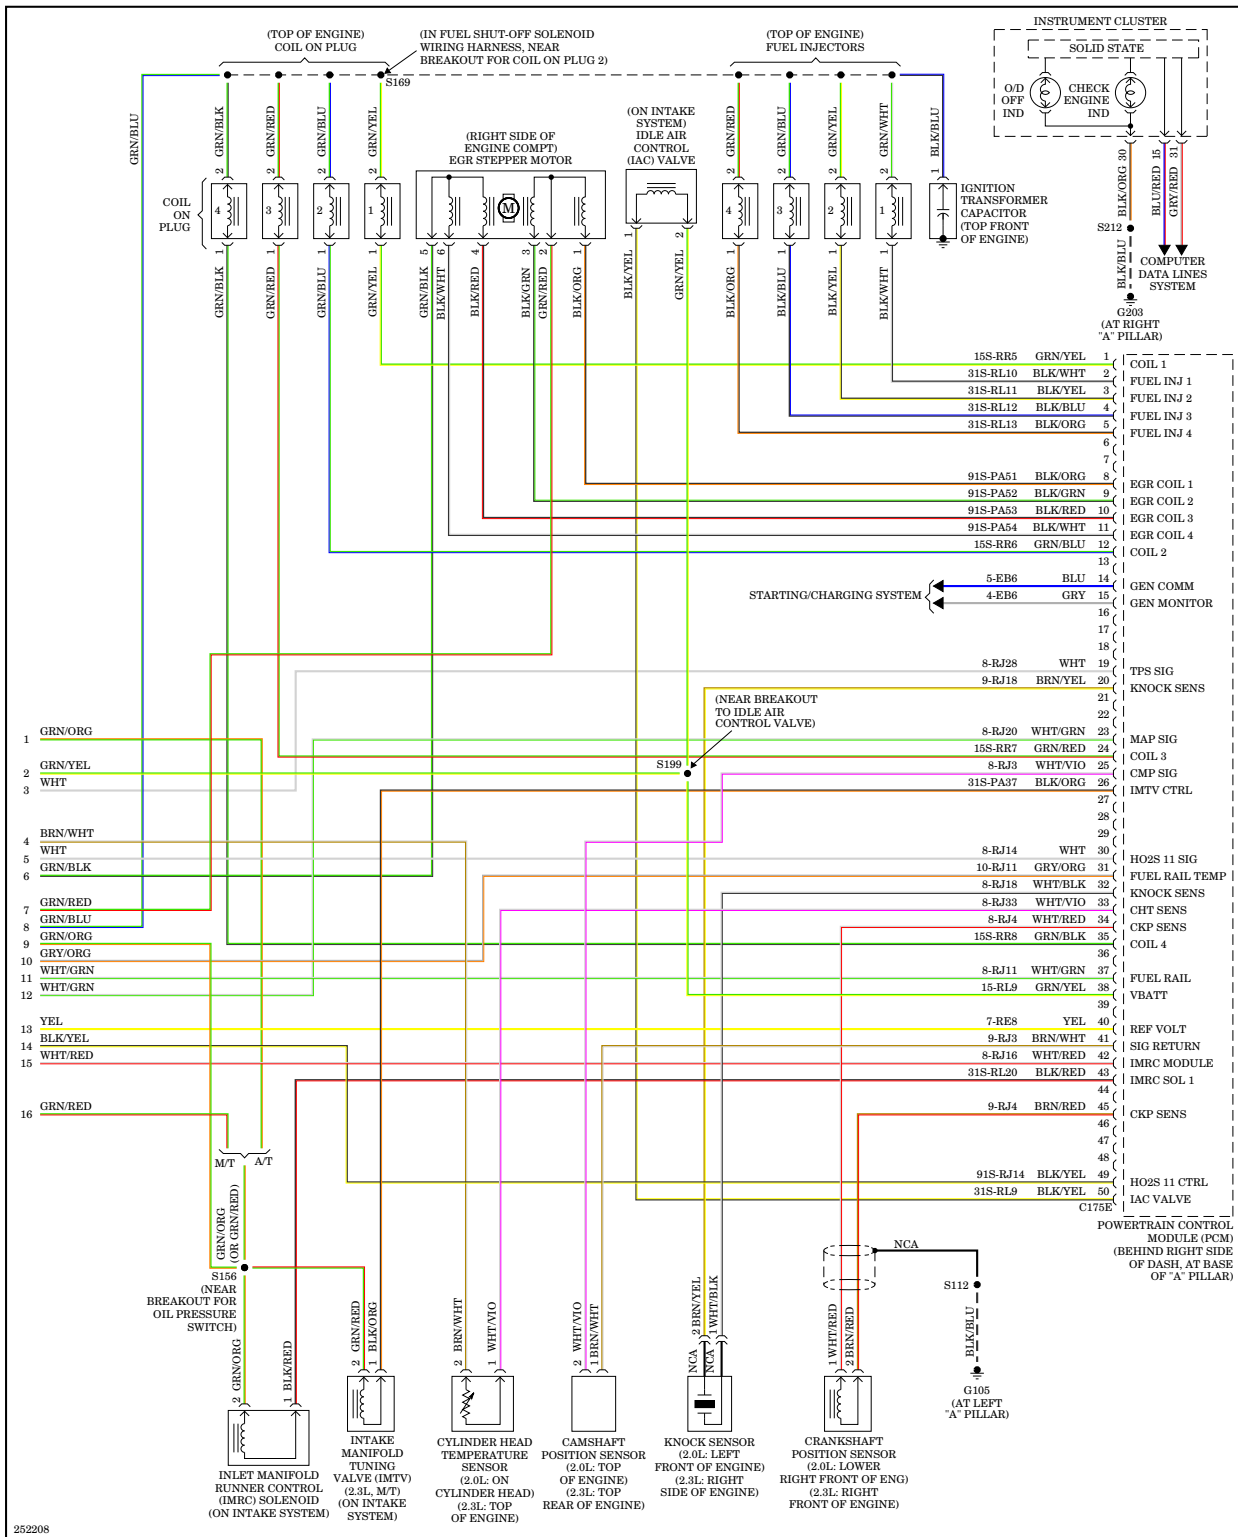

2.3L, Электросхема системы управления двигателем (4 из 4) для Ford Focus ST 2007 - Список элементов:

 
- (in fuel shut-off solenoid wiring harness, near breakout for coil on plug 2)
- (near breakout to idle air control valve)
- (on intake system) idle air control (iac) valve
- (right side of engine compt) egr stepper motor
- (top of engine) coil on plug
- (top of engine) fuel injectors
- 10-rj11
- 15-rl9
- 15s-rr5

- 15s-rr6
- 15s-rr7
- 15s-rr8
- 31s-pa37
- 31s-rl10
- 31s-rl11
- 31s-rl12
- 31s-rl13
- 31s-rl20
- 31s-rl9
- 4-eb6
- 5-eb6
- 7-re8
- 8-rj11
- 8-rj14
- 8-rj16
- 8-rj18
- 8-rj20
- 8-rj28
- 8-rj3
- 8-rj33
- 8-rj4
- 9-rj18
- 9-rj3
- 9-rj4
- 91s-pa51
- 91s-pa52
- 91s-pa53
- 91s-pa54
- 91s-rj14
- A/t
- C175e
- Camshaft position sensor (2.0l: top of engine) (2.3l: top rear of engine)
- Check engine ind
- Cht sens
- Ckp sens
- Cmp sig
- Coil 1
- Coil 2
- Coil 3
- Coil 4
- Coil on plug
- Computer data lines system
- Crankshaft position sensor (2.0l: lower right front of eng) (2.3l: right front of engine)
- Cylinder head temperature sensor (2.0l: on cylinder head) (2.3l: top of engine)
- Egr coil 1
- Egr coil 2
- Egr coil 3
- Egr coil 4
- Fuel inj 1
- Fuel inj 2
- Fuel inj 3
- Fuel inj 4
- Fuel rail
- Fuel rail temp
- G105 (at left "a" pillar)
- G203 (at right "a" pillar)
- Gen comm
- Gen monitor
- Ho2s 11 ctrl
- Ho2s 11 sig
- Iac valve
- Ignition transformer capacitor (top front of engine)
- Imrc module
- Imrc sol 1
- Imtv ctrl
- Inlet manifold runner control (imrc) solenoid (on intake system)
- Instrument cluster
- Intake manifold tuning valve (imtv) (2.3l, m/t) (on intake system)
- Knock sens
- Knock sensor (2.0l: left front of engine) (2.3l: right side of engine)
- M/t
- Map sig
- Nca
- O/d off ind

- Powertrain control module (pcm) (behind right side of dash, at base of "a" pillar)
- Ref volt
- S112
- S156 (near breakout for oil pressure switch)
- S169
- S199
- S212
- Sig return
- Solid state
- Starting/charging system
- Tps sig
- Vbatt

Система Фар

Электросхема фар, С DRL для Ford Focus ST 2007

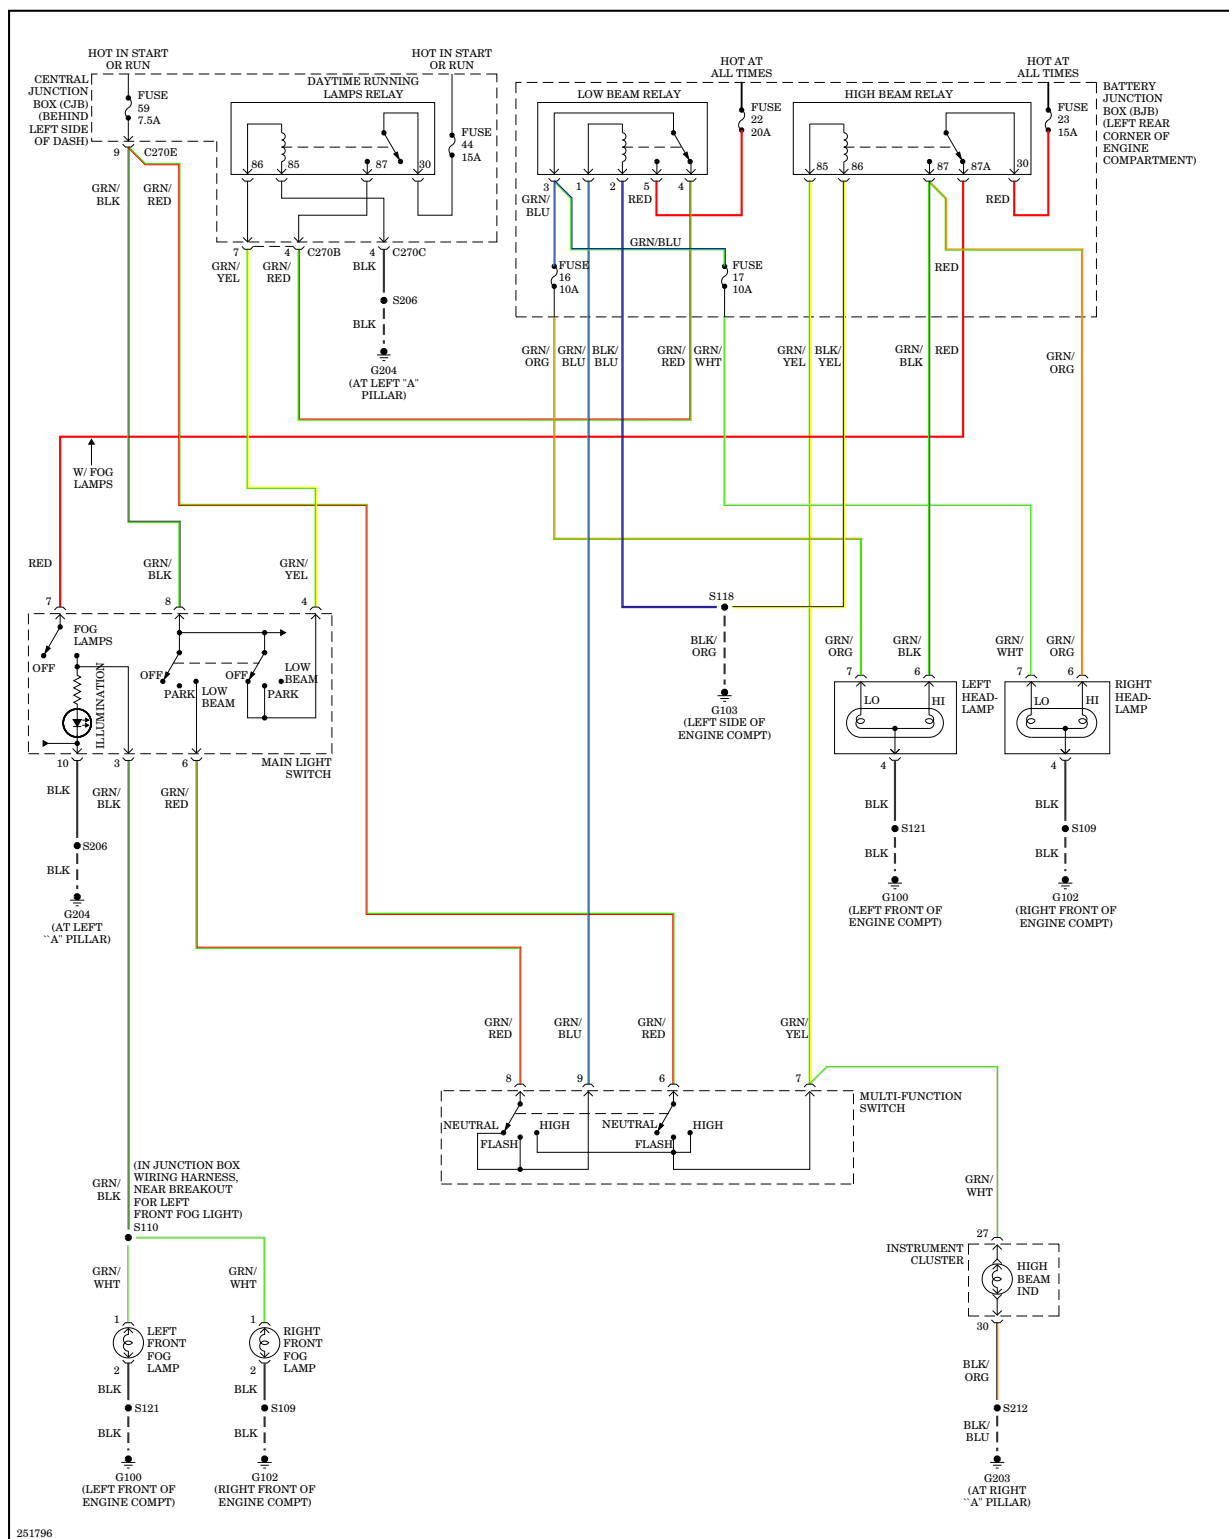


Электросхема фар, С DRL для Ford Focus ST 2007 - Список элементов:

- (in junction box wiring harness, near breakout for left front fog light) s110
- 87a
- Battery junction box (bjb) (left rear corner of engine compartment)
- C270b
- C270c
- C270e
- Central junction box (cjb) (behind left side of dash)
- Daytime running lamps relay
- Flash
- Fog lamps

- Fuse 10a
- Fuse 15a
- Fuse 20a
- Fuse 7.5a
- G100 (left front of engine compt)
- G102 (right front of engine compt)
- G103 (left side of engine compt)
- G203 (at right ``a" pillar)
- G204 (at left "a" pillar)
- G204 (at left ``a" pillar)
- High
- High beam ind
- High beam relay
- Hot at all times
- Hot in start or run
- Illumination
- Instrument cluster
- Left front fog lamp
- Left head- lamp
- Low beam
- Low beam relay
- Main light switch
- Multi-function switch
- Neutral
- Off
- Park
- Red
- Right front fog lamp
- Right head- lamp
- S109
- S118
- S121
- S206
- S212
- W/ fog lamps

 Электросхема фар, без DRL для Ford Focus ST 2007

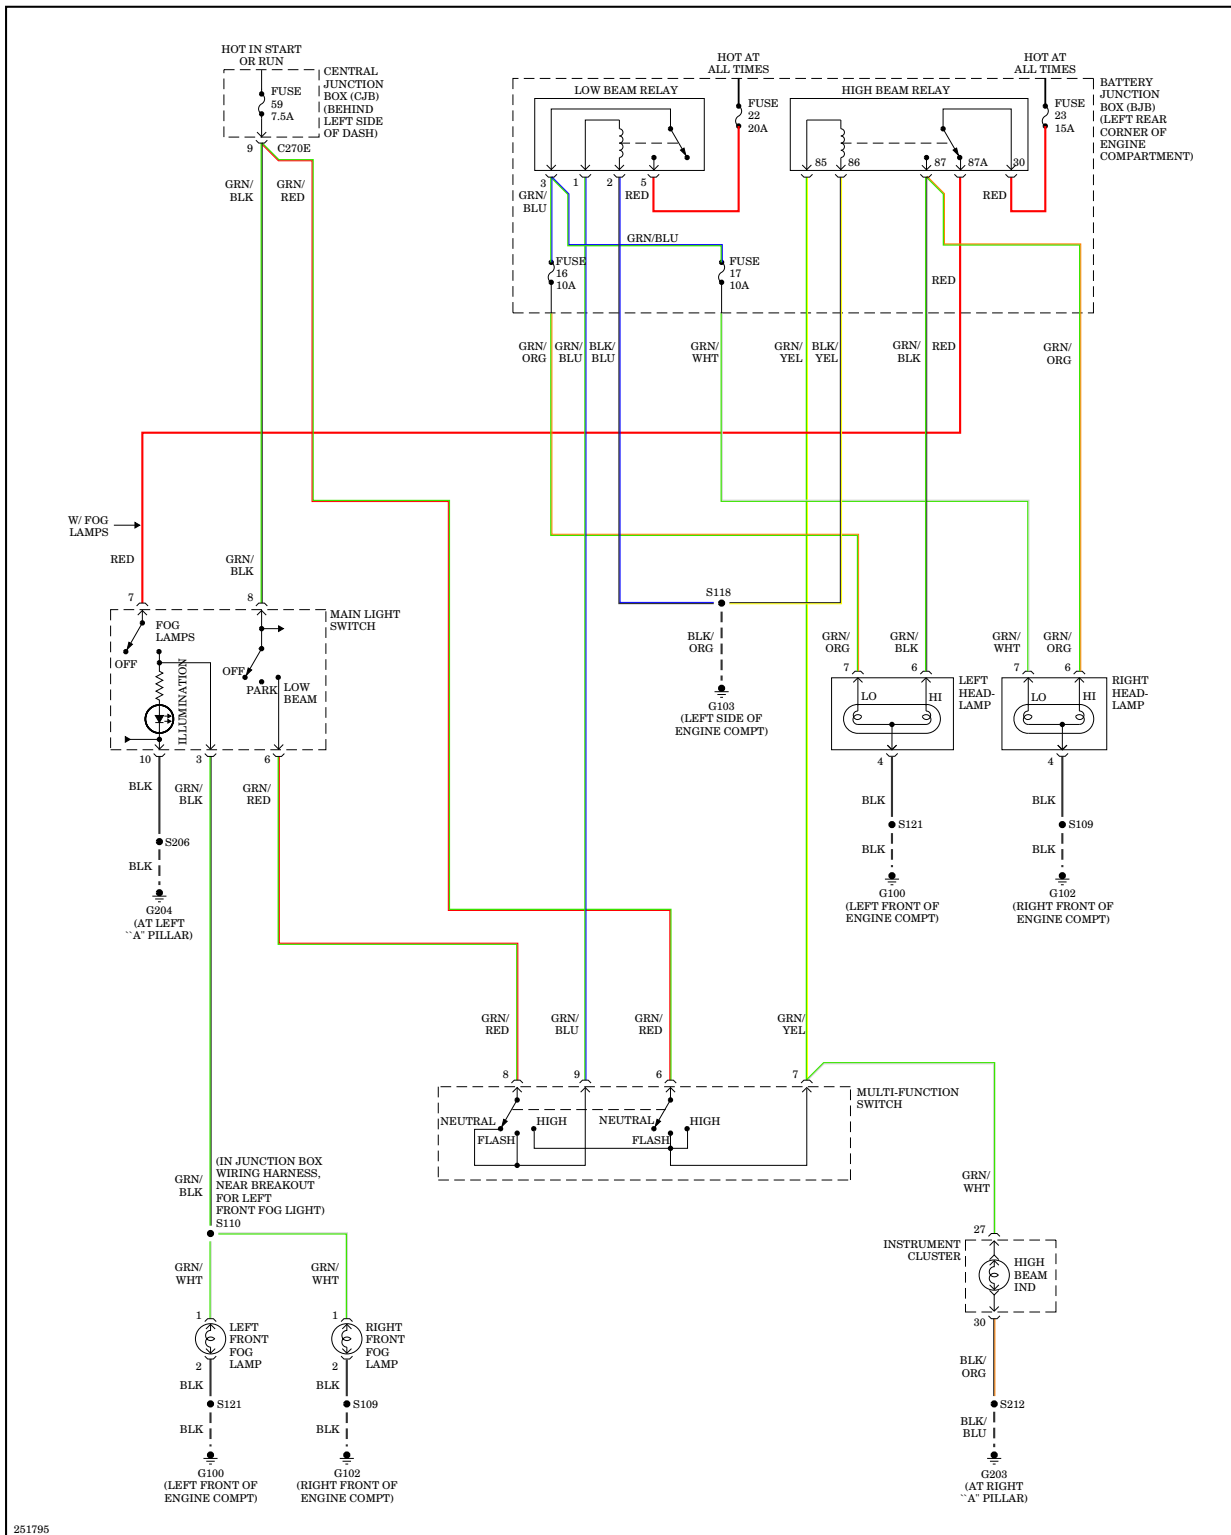


Электросхема фар, без DRL для Ford Focus ST 2007 - Список элементов:

- (in junction box wiring harness, near breakout for left front fog light) s110
- 87a
- Battery junction box (bjb) (left rear corner of engine compartment)
- C270e
- Central junction box (cjb) (behind left side of dash)
- Flash
- Fog lamps
- Fuse 10a
- Fuse 15a
- Fuse 20a

- Fuse 7.5a
- G100 (left front of engine compt)
- G102 (right front of engine compt)
- G103 (left side of engine compt)
- G203 (at right ``a" pillar)
- G204 (at left ``a" pillar)
- High
- High beam ind
- High beam relay
- Hot at all times
- Hot in start or run
- Illumination
- Instrument cluster
- Left front fog lamp
- Left head- lamp
- Low beam
- Low beam relay
- Main light switch
- Multi-function switch
- Neutral
- Off
- Park
- Red
- Right front fog lamp
- Right head- lamp
- S109
- S118
- S121
- S206
- S212
- W/ fog lamps

СИСТЕМЫ СИДЕНИЙ

 Электросхема привода сидений для Ford Focus ST 2007

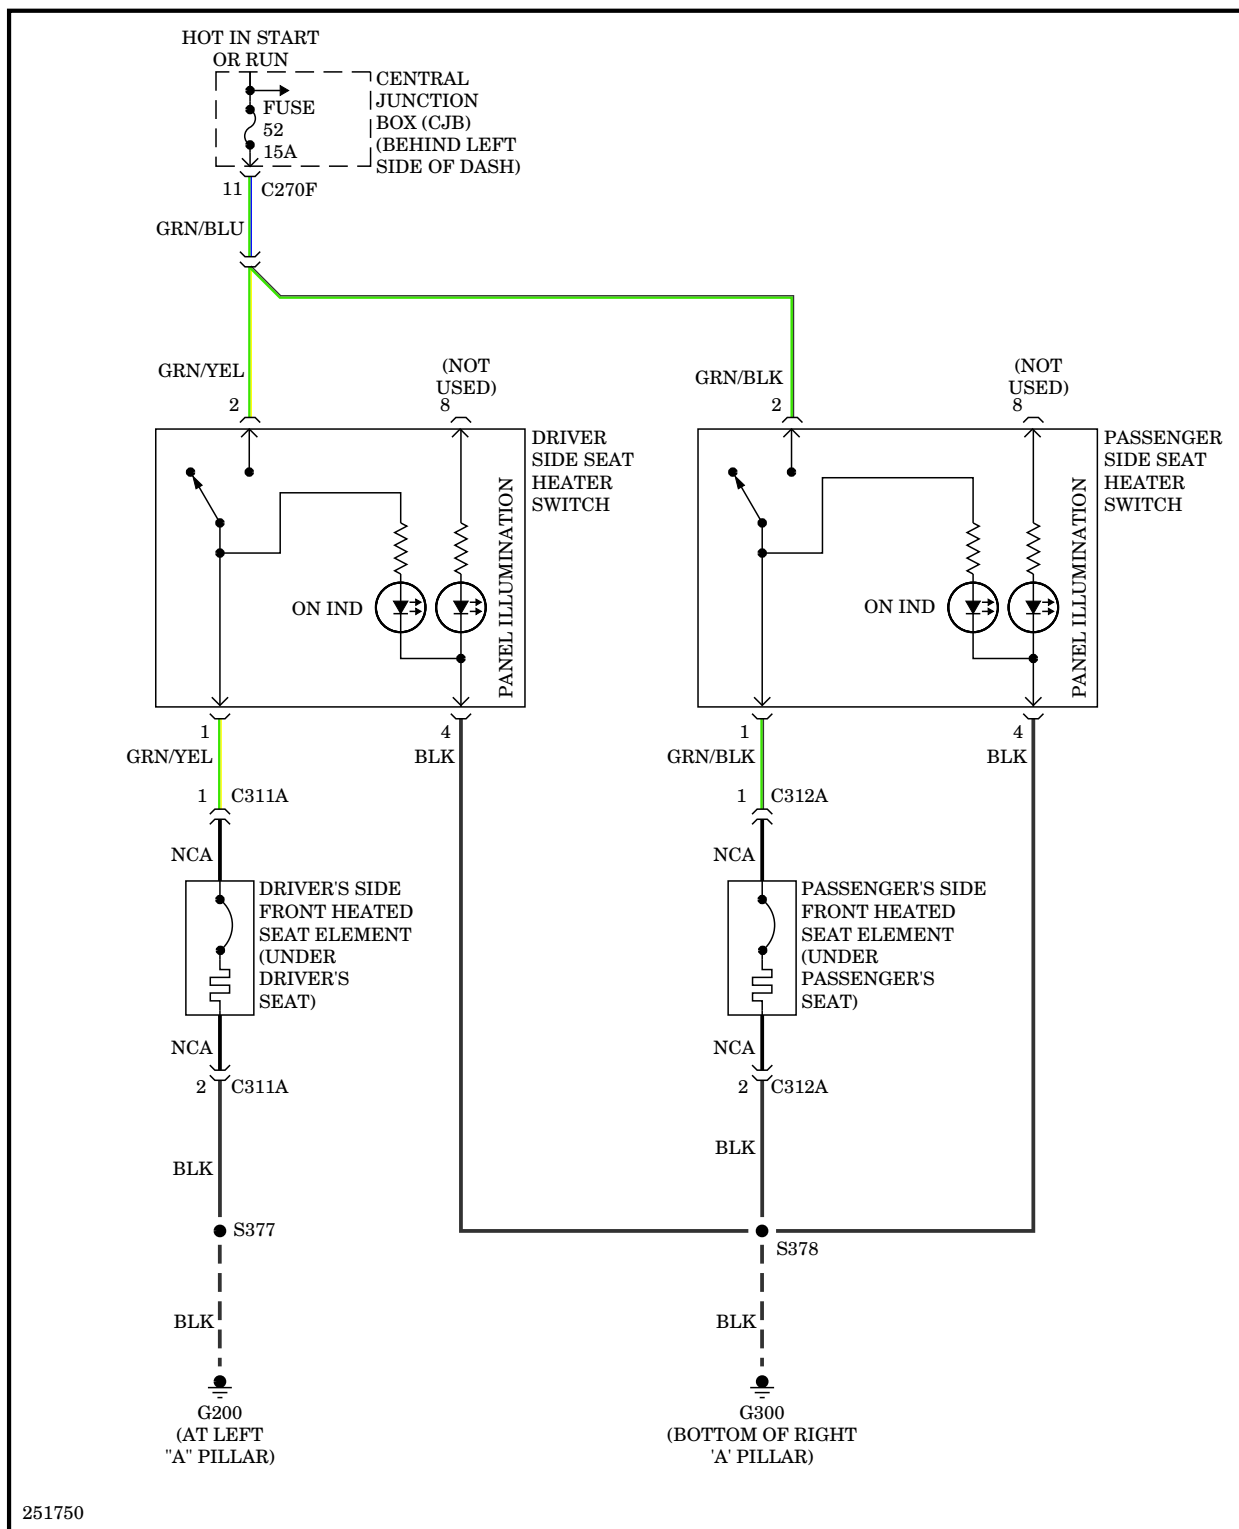


Электросхема привода сидений для Ford Focus ST 2007 - Список элементов:

- (not used)
- C270f
- C311a
- C312a
- Central junction box (cjb) (behind left side of dash)
- Driver side seat panel illumination heater switch
- Driver's side front heated seat element (under driver's seat)
- Fuse 15a
- G200 (at left "a" pillar)
- G300 (bottom of right 'a' pillar)

- Hot in start or run
- Nca
- On ind
- Passenger side seat panel illumination heater switch
- Passenger's side front heated seat element (under passenger's seat)
- S377
- S378

Стартер Генератор

 Электросхема Генератора для Ford Focus ST 2007

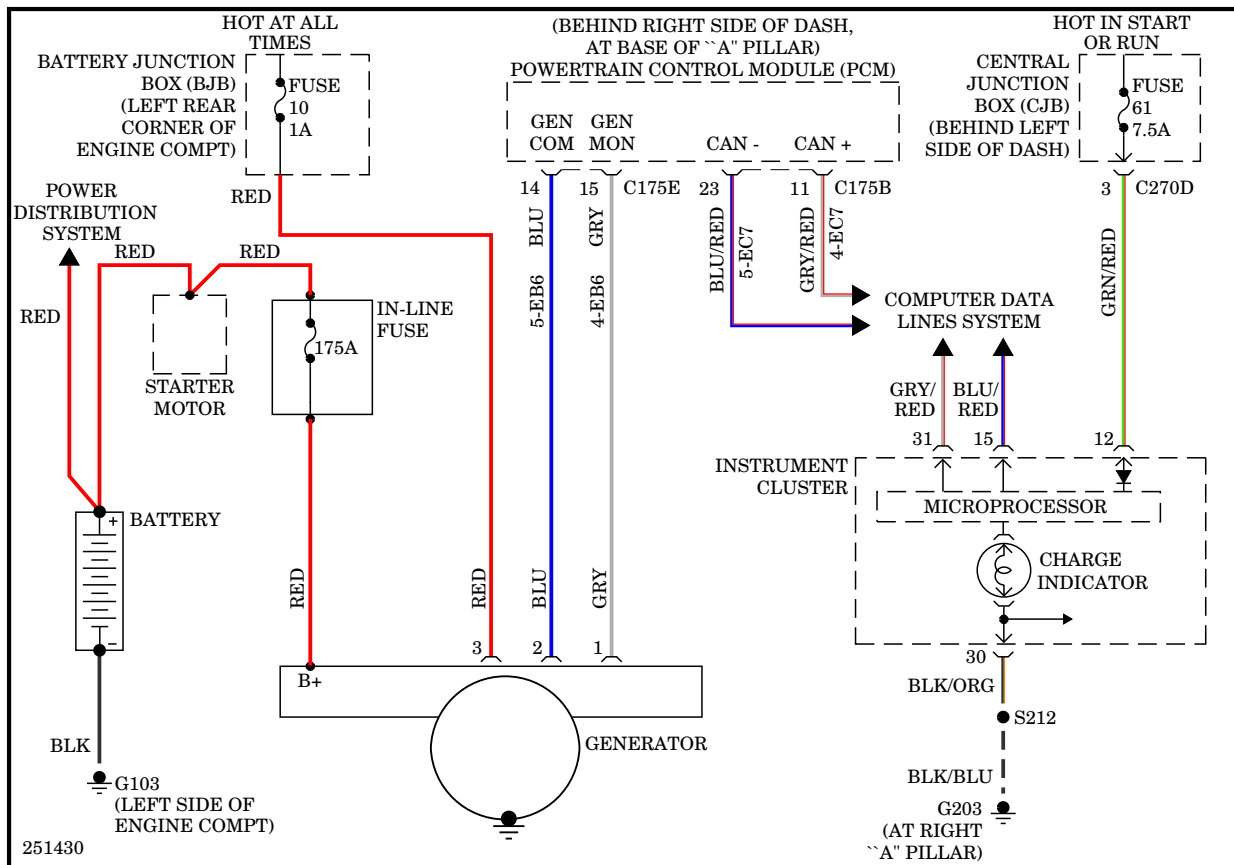




Электросхема Генератора для Ford Focus ST 2007 - Список элементов:

- (behind right side of dash, at base of ``a" pillar) powertrain control module (pcm)
- 175a
- 4-eb6
- 5-eb6
- 5-ec7
- Battery
- Battery junction box (bjb) (left rear corner of engine compt)
- C270d
- Can +
- Can -
- Central junction box (cjb) (behind left side of dash)
- Charge indicator
- Computer data lines system
- Distribution
- Fuse 1a
- Fuse 7.5a
- G103 (left side of engine compt)
- G203 (at right ``a" pillar)
- Gen com
- Gen mon
- Generator
- Hot at all times
- Hot in start or run
- In-line fuse
- Instrument cluster
- Microprocessor
- Power
- Red
- S212
- Starter motor
- System

 Электросхема стартера, А/Т для Ford Focus ST 2007

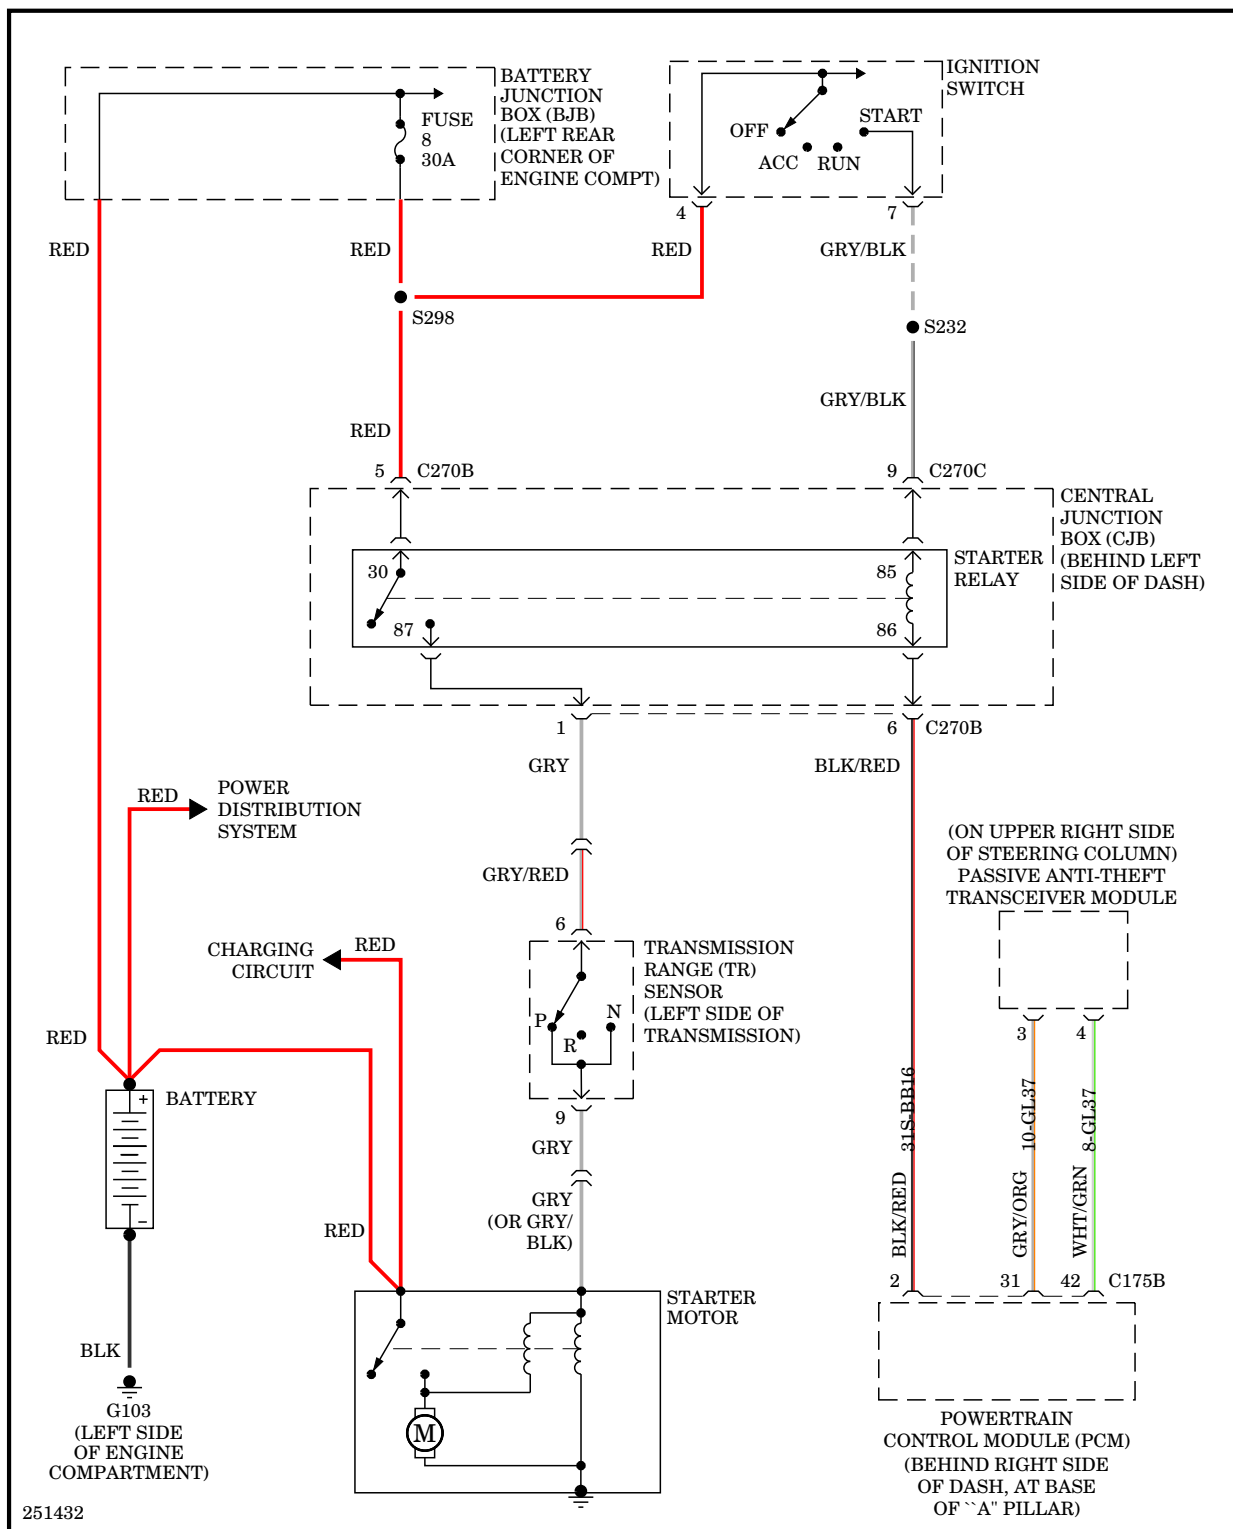


Электросхема стартера, А/Т для Ford Focus ST 2007 - Список элементов:

- (on upper right side of steering column) passive anti-theft transceiver module
- 10-gl37
- 31s-bb16
- 8-gl37
- Acc
- Battery
- Battery junction box (bjb) (left rear corner of engine compt)
- C175b
- C270b
- C270c

- Central junction box (cjb) (behind left side of dash)
- Charging circuit
- Fuse 30a
- G103 (left side of engine compartment)
- Ignition switch
- Off
- Power distribution system
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- Run
- S232
- S298
- Start
- Starter motor
- Starter relay
- Transmission range (tr) sensor (left side of transmission)

 Электросхема стартера, М/Т для Ford Focus ST 2007

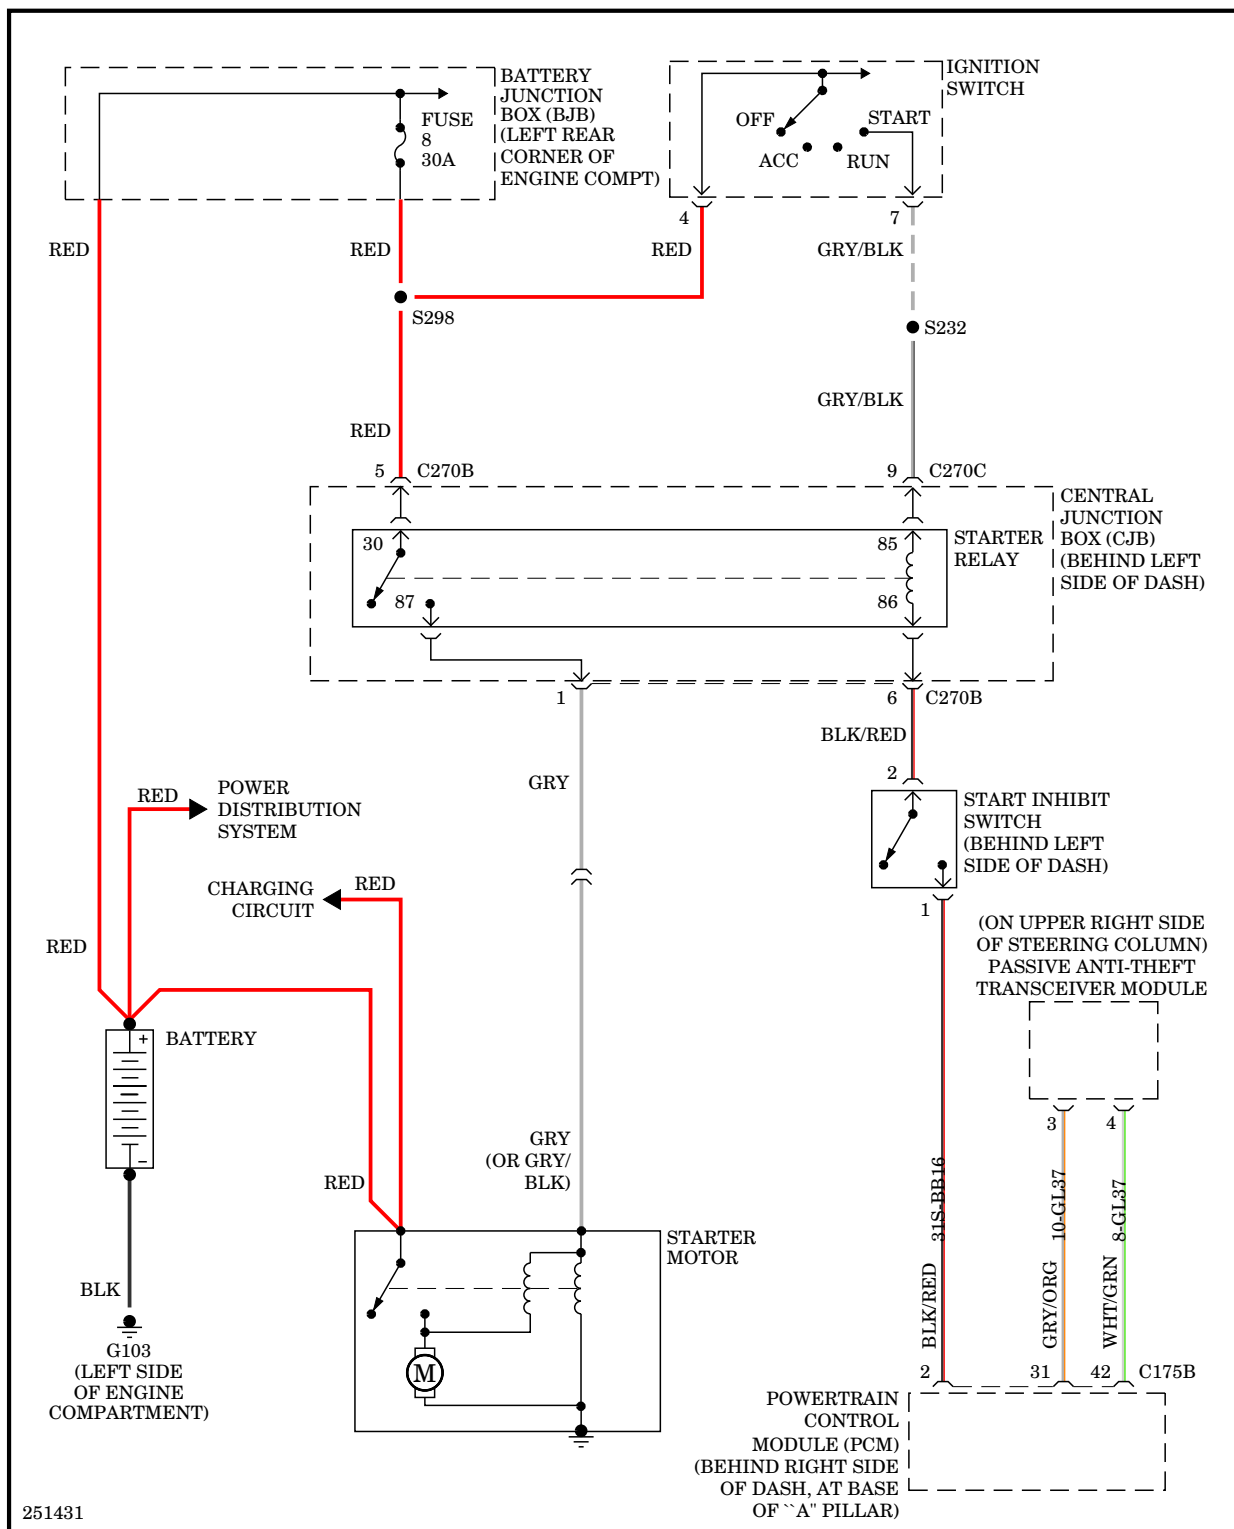

Электросхема стартера, М/Т для Ford Focus ST 2007 - Список элементов:

- (on upper right side of steering column) passive anti-theft transceiver module
- 10-gl37
- 31s-bb16
- 8-gl37
- Acc
- Battery
- Battery junction box (bjb) (left rear corner of engine compt)
- C175b
- C270b
- C270c

- Central junction box (cjb) (behind left side of dash)
- Charging circuit
- Fuse 30a
- G103 (left side of engine compartment)
- Ignition switch
- Off
- Power distribution system
- Powertrain control module (pcm) (behind right side of dash, at base of ``a" pillar)
- Red
- Run
- S232
- S298
- Start
- Start inhibit switch (behind left side of dash)
- Starter motor
- Starter relay

Стеклоочистители и Стеклоомыватели Дворники

Неустойчивая Электросхема стеклоочистителя, дворников и омывателя для Ford Focus ST 2007



- 32-ka35
- 32-ka6
- 32-ka9
- 33-ka6
- 8-ka18
- 8-ka19
- 91-dk20
- 91s-ka12
- C201c

- C201d
- C201e
- C270a
- C270c
- C270f
- Central junction box (cjb) (behind left side of dash)
- Fast
- Front washer on
- Fuse 20a
- G100 (left front of engine compartment)
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- Generic electronic module (gem) (on right "a" pillar)
- Hot in start or run
- Int
- Normal
- Off
- Off int
- Off rear washer on
- Rear washer on
- Rear wiper on
- Rest
- Run
- S121
- S206
- S212
- Single
- Two-way washer pump motor (on bottom of washer fluid reservoir)
- Variable intermittent wipe
- W/ rear wiper
- W/o rear wiper
- Windshield wiper motor (top center of firewall)
- Windshield wiper relay
- Wiper/washer switch

Электросхема заднего стеклоочистителя дворника и омывателя для Ford Focus ST 2007



- 32-ka35
- 32-ka6
- 33-ka6
- 91-dk20
- 91s-ka29
- C201d
- C201e
- C270b
- C270c

- C270f
- Central junction box (cjb) (behind left side of dash)
- Front washer on
- Fuse 15a
- Fuse 20a
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- Generic electronic module (gem) (on right "a" pillar)
- Hot in start or run
- Off
- Power tops system
- Rear washer on
- Rear wiper motor assembly (wagon: in liftgate) (3/5 door: in liftgate, behind trim)
- Rear wiper on
- Rear wiper relay
- S206
- S212
- S253 (w/ roof opening panel)
- Two-way washer pump motor (on bottom of washer fluid reservoir)
- Windshield wiper motor (top center of firewall)
- Wiper/ washer switch

ЦЕНТРАЛЬНЫЙ ЗАМОК

Электросхема центрального замка (1 из 2) для Ford Focus ST 2007



- (behind dash) rke antenna
- (in door lock feed wiring harness, near breakout for generic electronic module) s376
- (in door lock feed wiring harness, near breakout for generic electronic module)
- (in main wiring harness, near breakout for stoplight switch) s202
- (not used)
- 15s-aa17
- 15s-aa72
- 29-aa17
- 29-dk20
- 31-dk20

- 31s-aa17
- 31s-aa30
- 31s-aa39
- 31s-aa61
- 31s-aa62
- 31s-aa63
- 31s-aa64
- 31s-aa85
- 31s-gl12
- 31s-gl16
- 31s-gl19
- 31s-gl20
- 31s-gl27
- 31s-gl7
- 31s-gl9
- 31s-lc7
- 32-aa27
- 32-aa59
- 33-aa59
- 8-ee9
- 91-aa17
- 91-dk20
- 91s-gl43
- 91s-lg8
- C201a
- C201b
- C201c
- C201d
- C201e
- C270f
- Central junction box (cjb) (behind left side of dash)
- Data link connector (dlc) (under left side of dash, on central junction box)
- Driver side door lock switch
- Engine compartment switch (front center of engine compt)
- Exterior liftgate/ decklid release switch
- Exterior lights system
- Fuse 15a
- Fuse 20a
- G100 (left front of engine compt)
- G200 (at left "a" pillar)
- G203 (at right "a" pillar)
- G204 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G403 (in liftgate)
- Generic electronic module (gem) (on right "a" pillar)
- Horns system
- Hot at all times
- Illumination
- Instrument cluster
- Interior lights system
- Liftgate/ decklid release switch
- Lock
- Passenger side door lock switch
- S121
- S206
- S212
- S375
- S496
- S597
- S694
- Stoplamp switch (on brake pedal support)
- Unlock
- Wagon

Электросхема центрального замка (2 из 2) для Ford Focus ST 2007

- Central lock
- Driver side front door ajar switch (on left "b" pillar)
- Driver side front door lock unit (in driver's door)
- Driver side rear door ajar switch (on left "c" pillar)
- G200 (at left "a" pillar)
- G300 (bottom of right "a" pillar)
- G402 (left rear of luggage compt)
- G403 (in liftgate)
- Interior lights system
- Left rear door lock unit (in left rear door)
- Lock
- Nca
- Passenger side front door ajar switch (on right "b" pillar)
- Passenger side front door lock unit (in passenger's door)
- Passenger side rear door ajar switch (on right "c" pillar)
- Reset
- Right rear door lock unit (in right rear door)
- S360 (in door lock feed wiring harness, near breakout for right side air bag harness)
- S377
- S378
- S400
- S496
- S597
- Sedan
- Set
- Unlock
- Wagon