

Номер документа: 21-0-2114-97mab

Название документа: front signal acquisition and actuation module (SAM) control unit

Условное обозначение:

Позиция:

A0	Color code key	80L
B22/10	Right rear level sensor	70L
B22/9	Right front level sensor	72L
E1	Left front lamp unit	16L
E1	Left front lamp unit	24L
E1	Left front lamp unit	36L
E1	Left front lamp unit	54L
E1	Left front lamp unit	68L
E1	Left front lamp unit	76L
E1e10	Left bi-xenon lamp with integral ignition module	55L
E1e2	Left low beam	56L
E1e2	Left low beam	76L
E1e2	Left low beam	
E111	Left high beam solenoid	37L
E111	Left high beam solenoid	55L
E1m1	Left headlamp range adjustment motor	36L
E1m1	Left headlamp range adjustment motor	51L
E1m2	Left dynamic curve illumination motor	37L
E1m2	Left dynamic curve illumination motor	51L
E1m3	Left light distribution cylinder motor	52L
E1n1	Xenon headlamp control unit	53L
E1n2	Xenon headlamp ignition module	34L
E1n3	HRA [LWR] power module	35L
E1n4	Xenon headlamp supply module	35L
E2	Right front lamp unit	21L
E2	Right front lamp unit	26L
E2	Right front lamp unit	44L
E2	Right front lamp unit	64L
E2	Right front lamp unit	78L
E2e10	Right bi-xenon lamp with integral ignition module	64L
E2e2	Right low beam	22L
E2e2	Right low beam	66L
E2e2	Right low beam	45L
E2e2	Right low beam	78L
E211	Right high beam solenoid	44L
E211	Right high beam solenoid	65L
E2m1	Right headlamp range adjustment motor	43L
E2m1	Right headlamp range adjustment motor	61L
E2m2	Right dynamic curve illumination motor	44L

Условное обозначение:

E2m2	Right dynamic curve illumination motor
E2m3	Right light distribution cylinder motor
E2n2	Xenon headlamp ignition module
E2n3	HRA [LWR] power module
E2n4	Xenon headlamp supply module
F4	Load compartment fuse and relay box
F4f54	Fuse 54
F58	Engine compartment fuse and relay box
F58	Engine compartment fuse and relay box
F58	Engine compartment fuse and relay box
F58	Engine compartment fuse and relay box
F58f112	Fuse 112
F58f112	Fuse 112
G1/7	Additional battery
N10	Front SAM control unit
N10	Front SAM control unit
N10	Front SAM control unit
N10	Front SAM control unit
N10	Front SAM control unit
N10	Front SAM control unit
N10	Front SAM control unit
N51	AIRMATIC control unit
N71	Headlamp range adjustment control unit
S1	Rotary light switch
U151	Valid for engine 113
U151	Valid for engine 113
U501	Valid for xenon headlamps
U501	Valid for xenon headlamps
U502	Valid for AIRMATIC
U679	Valid for version without xenon headlamps
U679	Valid for version without xenon headlamps
U681	Valid for all except M113
U681	Valid for all except M113
U758	Valid for steel suspension
U974	Not valid for full hybrid drive
U978	Valid for full hybrid drive
W2	Ground (right front, at lamp unit)
W2	Ground (right front, at lamp unit)
W2	Ground (right front, at lamp unit)

Позиция:

62L
63L
42L
42L
43L
11L
10L
3L
18L
39L
59L
1L
4A
12A
20A
36A
44A
53A
59A
7L
32L
28L
14D
16D
30D
50D
5D
13A
74D
69E
13A
74D
21H
44G
64G

Условное обозначение:

W2	Ground (right front, at lamp unit)	79G
W9	Ground (left front, at lamp unit)	14H
W9	Ground (left front, at lamp unit)	24G
W9	Ground (left front, at lamp unit)	34G
W9	Ground (left front, at lamp unit)	36G
W9	Ground (left front, at lamp unit)	51G
W9	Ground (left front, at lamp unit)	77G
X18	Interior/cockpit connector	28E
X25/2	Engine compartment/interior compartment connector	2E
X25/2	Engine compartment/interior compartment connector	15E
X25/2	Engine compartment/interior compartment connector	16E
X25/2	Engine compartment/interior compartment connector	24E
X25/2	Engine compartment/interior compartment connector	35E
X25/2	Engine compartment/interior compartment connector	65H
X25/2	Engine compartment/interior compartment connector	69H
X25/2	Engine compartment/interior compartment connector	53E
X25/2	Engine compartment/interior compartment connector	55E
X25/2	Engine compartment/interior compartment connector	77G
X25/2	Engine compartment/interior compartment connector	75G
X30/19	Passenger-side voltage distributor (CAN C) connector	48L
Z35/14	CAN-C low engine compartment connector sleeve	53G
Z35/15	CAN-C high engine compartment connector sleeve	54G
Z36/12	Headlamp range adjustment (HRA [LWR]) control bus connector sleeve	35G
Z36/14	Static headlamp range adjustment signal connector sleeve	25H
Z56/16	Level sensor ground engine compartment solder point	72G
Z56/17	Level sensor supply engine compartment solder point	73G
Z56/9	Left engine compartment connector sleeve (circuit 56B)	15H
Z57/15	Right engine compartment connector sleeve (circuit 56B)	22E

Позиция:





