

A16	Imobilizer
A19	Speedometer
A22	A/C
A24	Instrument cluster
A65	ECU
B16	Inductive crankshaft position sensor
B21	Vehicle speed sensor
B22	Coolant temperature sensor
B23	Air temperature sensor
B48	O2-sensor with pre-heater
F-	Fuse
H11	ECU lamp
K13	Relay
K43	System relay
M11	Fuel pump
M14	Throttle valve positioning module
R19	Throttle valve potentiometer
R22	Manifold preheater
S27	Collision switch
T17	DIS ignition coil
X11	Diagnostic connector
X14	Ground connection
X15	Cable screen
Y33	Injector (single)
Y34	Canister purge valve