

Nissan Denso Altima 2.5 2003




READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER




2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

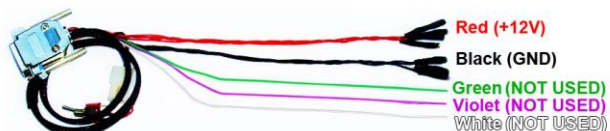

3 - USE THE COLOR FLAT CABLE



4 - DO SEVEN LINKS

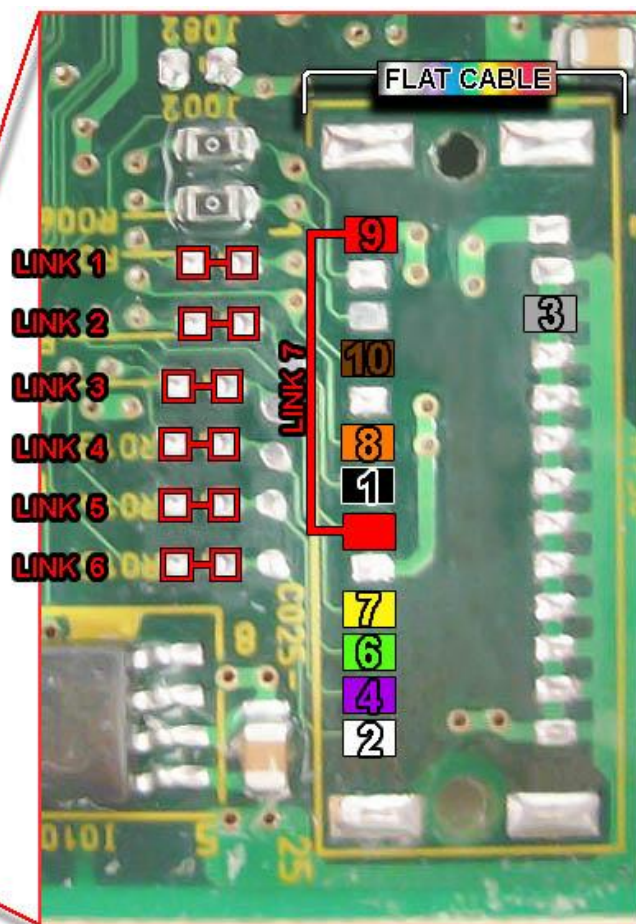

For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

1 - REMOVE THE STANDARD ADAPTER




2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

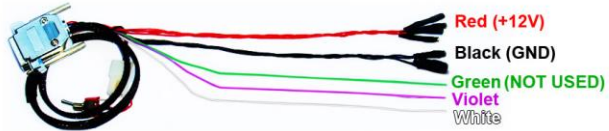

3 - DO EIGHT LINKS

STEP 1/2 (BACKSIDE):

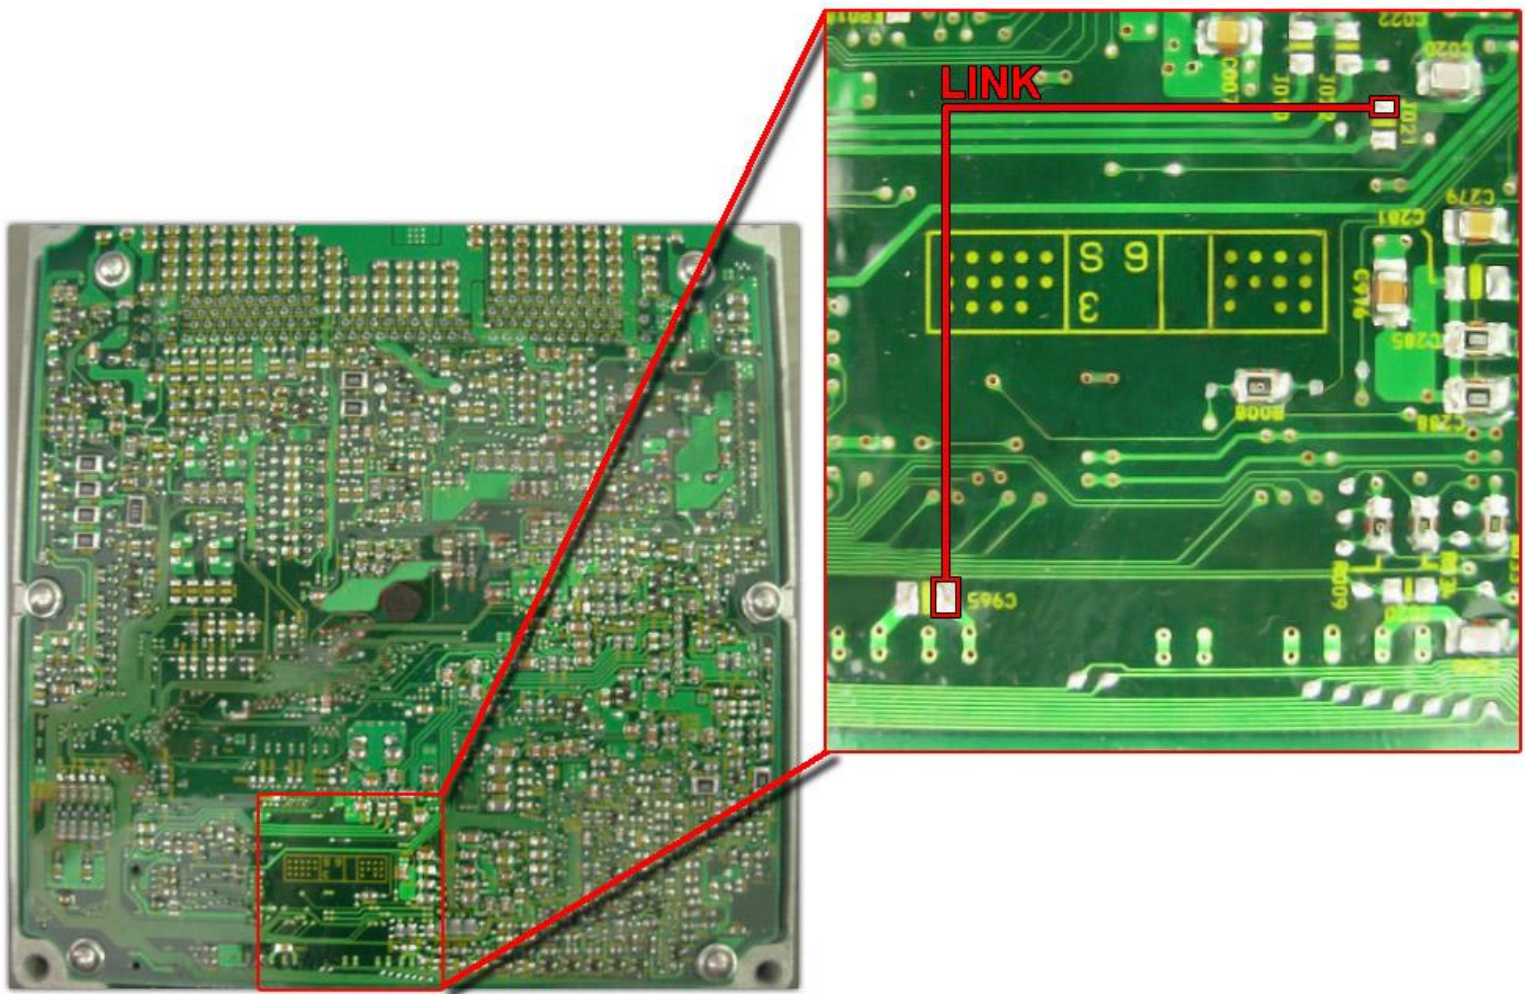

STEP 2/2 (FRONTSIDE):

